

MaxiDiag_Infiniti_V2.30 Function List (Note:For reference only)

NOTES:

- This function is supported.
- imes This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Freeze Frame Data
ENGINE	•	•	•	*	•
AT/CVT	•	•	•	*	•
ABS	•	•	•	*	•
AIRBAG	0	•	•	0	0
Traction Control System	•	•	•	•	•
BCM	*	•	•	0	•
Electric Power Steering	•	•	•	0	•
4WD/E-4WD/AWD	•	•	•	*	•
Smart Entrance	0	•	•	*	•
ACT	•	•	•	•	•
Active Sus	•	•	•	•	•
Auto Speed Controlo Device	0	•	0	0	•
Air Pressure Monior	*	•	0	0	•
Adaptive Light	•	•	•	0	•
Auto Slide Door	•	•	•	0	•
Diff Lock	0	•	•	0	•
Driver Position	•	•	•	0	•
Head Lamp Levelizer	•	•	•	0	•
HICAS	•	•	•	0	•
ICC	•	•	•	*	•
Intelligent Key	•	•	•	0	•
IPDM E/R	0	•	•	0	•
METER	0	•	•	0	•
Meter AC AMP	•	•	•	0	•
Motor Assist	0	•	•	0	•
Multi AV	*	•	•	0	•
Precrash Seatbelt	•	•	•	0	•
Rearview Camera	•	0	0	0	•
Sblind Camera	•	0	0	0	•
Heating and Air	•	•	•	0	•
Hybrid	•	•	•	0	•
Lane Camera	•	•	•	0	•
Air Levelizer	•	•	•	0	•
Sonar	•	•	•	0	•

Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Freeze Frame Data
Auto Back Door	0	•	•	0	•
Total Illum C/U	•	0	0	0	•
Cinvertible Roof	•	•	•	0	•