

## MaxiDiag\_Mitsubishi\_V2.20 Function List (Note:For reference only)

## NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.  
○ This function is not supported. ▲ This function is the new feature in this version.

YEAR	System Name	Ecu Info.	Read Code	Erase Codes	Live Data
Up to 2005	MFI	●	●	●	●
Up to 2005	IMMOBILIZER	●	●	●	●
Up to 2005	ELC-AT	●	●	●	●
Up to 2005	SS4II	●	●	●	●
Up to 2005	TCL	●	●	●	●
Up to 2005	CRUISE CONTROL	●	●	●	●
Up to 2005	ECS	●	●	●	●
Up to 2005	ABS/ASC/ASTC	●	●	●	●
Up to 2005	HBB	●	●	●	●
Up to 2005	ACD	●	●	●	●
Up to 2005	SRS-AIR BAG	●	●	●	●
Up to 2005	AIR Conditioner	●	●	●	●
Up to 2005	SWS	●	●	●	●
Up to 2005	ETACS	●	●	●	
Up to 2005	TPMS	●	●	●	●
Up to 2005	Meter	●	●	●	●
Up to 2005	Display	●	●	●	
Up to 2005	Steering Angle Sensor	●	●	●	
After 2005	ABS/ASC/ASTC/WSS	●	●	●	●
After 2005	ACD	●	●	●	●
After 2005	AFS/ACL	●	●	●	●
After 2005	CAN/LIN/SWS converter	●	●	●	●
After 2005	AND	●	●	●	
After 2005	AUDIO	●	●	●	●
After 2005	Air Conditioner	●	●	●	●
After 2005	CRUISE CONTROL	●	●	●	●
After 2005	Camera	●	●	●	●
After 2005	Display	●	●	●	●
After 2005	ECPS/4WS	●	●	●	●
After 2005	ECS	●	●	●	●
After 2005	ELC-AT/CVT/TC-SST	●	●	●	●
After 2005	ELECTRIC SLIDE DOOR L	●	●	●	●
After 2005	ELECTRIC SLIDE DOOR R	●	●	●	●
After 2005	ETACS	●	●	●	●

YEAR	System Name	Ecu Info.	Read Code	Erase Codes	Live Data
After 2005	F. A. S. T. /IMMO/Keyless/TPMS	●	●	●	●
After 2005	HBB	●	●	●	●
After 2005	HFM	●	●	●	●
After 2005	IMMOBILIZER	●	●	●	●
After 2005	Keyless Operation	●	●	●	●
After 2005	LIN		●	●	●
After 2005	MFI	●	●	●	●
After 2005	Meter	●	●	●	●
After 2005	Multi Select 4WD	●	●	●	●
After 2005	OCM	●	●	●	●
After 2005	Power Gate	●	●	●	●
After 2005	SATELLITE RADIO	●	●	●	
After 2005	SRS-AIR BAG	●	●	●	●
After 2005	SS4II	●	●	●	●
After 2005	SWS	●	●	●	●
After 2005	Shift Lever	●	●	●	●
After 2005	Steering Angle Sensor	●			
After 2005	TCL	●	●	●	●
After 2005	TPMS	●	●	●	●
After 2005	Topstack	●	●	●	●