



## MaxiDiag\_Volvo\_V2.00 Function List (Note:For reference only)

### NOTES:

- This function is supported.      ※ This function may be supported, which depends on the actual condition of the vehicle.  
○ This function is not supported.    ▲ This function is the new feature in this version.

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	C30	TCM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ADM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ADM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	ECM	●	●	●	●
2009	C30	TCM	●	●	●	●
2009	C30	AEM	●	●	●	●
2009	C30	KVM	●	●	●	●
2009	C30	RDAR	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	C30	PHM	●	●	●	●
2009	C30	CPM	●	●	●	●
2009	C30	AUD	●	●	●	○
2009	C30	BPM	●	●	●	●
2009	C30	PAM	●	●	●	●
2009	C30	SRS	●	●	●	●
2009	C30	DDM	●	●	●	●
2009	C30	PDM	●	●	●	●
2009	C30	AUU	●	●	●	●
2009	C30	BCM	●	●	●	●
2009	C30	CCM	●	●	●	○
2009	C30	SWM	●	●	●	●
2009	C30	TRM	●	●	●	●
2009	C30	EPS	●	●	●	●
2009	C30	IAM	●	●	●	●
2009	C30	PSL	●	●	●	●
2009	C30	PSR	●	●	●	●
2009	C30	CEM	●	●	●	●
2009	C30	DIM	●	●	●	●
2009	C30	ICM	●	●	●	●
2009	C30	MMM	●	●	●	○
2008	C30	TCM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	C30	ADM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ADM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	ECM	●	●	●	●
2008	C30	TCM	●	●	●	●
2008	C30	BCM	●	●	●	●
2008	C30	KVM	●	●	●	●
2008	C30	RDAR	●	●	●	●
2008	C30	CPM	●	●	●	●
2008	C30	AUD	●	●	●	○
2008	C30	PAM	●	●	●	●
2008	C30	SRS	●	●	●	●
2008	C30	DDM	●	●	●	●
2008	C30	PDM	●	●	●	●
2008	C30	PSL	●	●	●	●
2008	C30	PSR	●	●	●	●
2008	C30	AUU	●	●	●	●
2008	C30	CCM	●	●	●	●
2008	C30	PHM	●	●	●	●
2008	C30	CEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	C30	DIM	●	●	●	●
2008	C30	SWM	●	●	●	●
2008	C30	TRM	●	●	●	●
2008	C30	EPS	●	●	●	●
2008	C30	IAM	●	●	●	●
2008	C30	ICM	●	●	●	●
2008	C30	MMM	●	●	●	○
2007	C30	ECM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ADM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ADM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	ECM	●	●	●	●
2007	C30	TCM	●	●	●	●
2007	C30	DIM	●	●	●	●
2007	C30	GPS	●	●	●	●
2007	C30	BCM	●	●	●	●
2007	C30	TMC	●	●	●	●
2007	C30	SWM	●	●	●	●
2007	C30	KVM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	C30	PHM	●	●	●	●
2007	C30	CEM	●	●	●	●
2007	C30	MMM	●	●	●	○
2007	C30	RDAR	●	●	●	●
2007	C30	CPM	●	●	●	●
2007	C30	IAM	●	●	●	●
2007	C30	AUD	●	●	●	○
2007	C30	PAM	●	●	●	●
2007	C30	SRS	●	●	●	●
2007	C30	DDM	●	●	●	●
2007	C30	PDM	●	●	●	●
2007	C30	PSL	●	●	●	●
2007	C30	PSR	●	●	●	●
2007	C30	CCM	●	●	●	●
2007	C30	TRM	●	●	●	●
2007	C30	ICM	●	●	●	●
2007	C30	EPS	●	●	●	●
2009	C70 (06-)	TCM	●	●	●	●
2009	C70 (06-)	ECM	●	●	●	●
2009	C70 (06-)	ECM	●	●	●	●
2009	C70 (06-)	ECM	●	●	●	●
2009	C70 (06-)	ECM	●	●	●	●
2009	C70 (06-)	ADM	●	●	●	●
2009	C70 (06-)	ECM	●	●	●	●
2009	C70 (06-)	ECM	●	●	●	●
2009	C70 (06-)	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	C70 (06-)	ECM	●	●	●	●
2009	C70 (06-)	TCM	●	●	●	●
2009	C70 (06-)	AEM	●	●	●	●
2009	C70 (06-)	KVM	●	●	●	●
2009	C70 (06-)	RDAR	●	●	●	●
2009	C70 (06-)	PHM	●	●	●	●
2009	C70 (06-)	CPM	●	●	●	●
2009	C70 (06-)	AUD	●	●	●	○
2009	C70 (06-)	BPM	●	●	●	●
2009	C70 (06-)	PAM	●	●	●	●
2009	C70 (06-)	SRS	●	●	●	●
2009	C70 (06-)	DDM	●	●	●	●
2009	C70 (06-)	PDM	●	●	●	●
2009	C70 (06-)	AUU	●	●	●	●
2009	C70 (06-)	BCM	●	●	●	●
2009	C70 (06-)	CCM	●	●	●	○
2009	C70 (06-)	CRM	●	●	●	●
2009	C70 (06-)	SWM	●	●	●	●
2009	C70 (06-)	TRM	●	●	●	●
2009	C70 (06-)	EPS	●	●	●	●
2009	C70 (06-)	SUB	●	●	●	○
2009	C70 (06-)	IAM	●	●	●	●
2009	C70 (06-)	PSL	●	●	●	●
2009	C70 (06-)	PSR	●	●	●	●
2009	C70 (06-)	CEM	●	●	●	●
2009	C70 (06-)	DIM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	C70 (06-)	ICM	●	●	●	●
2009	C70 (06-)	MMM	●	●	●	○
2008	C70 (06-)	ECM	●	●	●	●
2008	C70 (06-)	ECM	●	●	●	●
2008	C70 (06-)	ECM	●	●	●	●
2008	C70 (06-)	ADM	●	●	●	●
2008	C70 (06-)	ECM	●	●	●	●
2008	C70 (06-)	ECM	●	●	●	●
2008	C70 (06-)	ECM	●	●	●	●
2008	C70 (06-)	ECM	●	●	●	●
2008	C70 (06-)	TCM	●	●	●	●
2008	C70 (06-)	BCM	●	●	●	●
2008	C70 (06-)	AEM	●	●	●	●
2008	C70 (06-)	KVM	●	●	●	●
2008	C70 (06-)	RDAR	●	●	●	●
2008	C70 (06-)	CPM	●	●	●	●
2008	C70 (06-)	AUD	●	●	●	○
2008	C70 (06-)	PAM	●	●	●	●
2008	C70 (06-)	SRS	●	●	●	●
2008	C70 (06-)	DDM	●	●	●	●
2008	C70 (06-)	PDM	●	●	●	●
2008	C70 (06-)	PSL	●	●	●	●
2008	C70 (06-)	PSR	●	●	●	●
2008	C70 (06-)	AUU	●	●	●	●
2008	C70 (06-)	CCM	●	●	●	●
2008	C70 (06-)	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	C70 (06-)	CRM	●	●	●	●
2008	C70 (06-)	CEM	●	●	●	●
2008	C70 (06-)	DIM	●	●	●	●
2008	C70 (06-)	SWM	●	●	●	●
2008	C70 (06-)	TRM	●	●	●	●
2008	C70 (06-)	EPS	●	●	●	●
2008	C70 (06-)	SUB	●	●	●	○
2008	C70 (06-)	IAM	●	●	●	●
2008	C70 (06-)	ICM	●	●	●	●
2008	C70 (06-)	MMM	●	●	●	○
2007	C70 (06-)	ECM	●	●	●	●
2007	C70 (06-)	ECM	●	●	●	●
2007	C70 (06-)	ECM	●	●	●	●
2007	C70 (06-)	ECM	●	●	●	●
2007	C70 (06-)	ECM	●	●	●	●
2007	C70 (06-)	TCM	●	●	●	●
2007	C70 (06-)	DIM	●	●	●	●
2007	C70 (06-)	GPS	●	●	●	●
2007	C70 (06-)	BCM	●	●	●	●
2007	C70 (06-)	TMC	●	●	●	●
2007	C70 (06-)	SWM	●	●	●	●
2007	C70 (06-)	KVM	●	●	●	●
2007	C70 (06-)	AEM	●	●	●	●
2007	C70 (06-)	PHM	●	●	●	●
2007	C70 (06-)	TRM	●	●	●	●
2007	C70 (06-)	CEM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	C70 (06-)	MMM	●	●	●	○
2007	C70 (06-)	RDAR	●	●	●	●
2007	C70 (06-)	CPM	●	●	●	●
2007	C70 (06-)	SUB	●	●	●	○
2007	C70 (06-)	IAM	●	●	●	●
2007	C70 (06-)	AUD	●	●	●	○
2007	C70 (06-)	PAM	●	●	●	●
2007	C70 (06-)	SRS	●	●	●	●
2007	C70 (06-)	DDM	●	●	●	●
2007	C70 (06-)	PDM	●	●	●	●
2007	C70 (06-)	PSL	●	●	●	●
2007	C70 (06-)	PSR	●	●	●	●
2007	C70 (06-)	CCM	●	●	●	●
2007	C70 (06-)	CRM	●	●	●	●
2007	C70 (06-)	ICM	●	●	●	●
2007	C70 (06-)	EPS	●	●	●	●
2006	C70 (06-)	ECM	●	●	●	●
2006	C70 (06-)	ECM	●	●	●	●
2006	C70 (06-)	ECM	●	●	●	●
2006	C70 (06-)	TCM	●	●	●	●
2006	C70 (06-)	DIM	●	●	●	●
2006	C70 (06-)	GPS	●	●	●	●
2006	C70 (06-)	BCM	●	●	●	●
2006	C70 (06-)	TMC	●	●	●	●
2006	C70 (06-)	SWM	●	●	●	●
2006	C70 (06-)	KVM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	C70 (06-)	AEM	●	●	●	●
2006	C70 (06-)	ICM	●	●	●	●
2006	C70 (06-)	IAM	●	●	●	●
2006	C70 (06-)	AUD	●	●	●	○
2006	C70 (06-)	PHM	●	●	●	●
2006	C70 (06-)	TRM	●	●	●	●
2006	C70 (06-)	PSL	●	●	●	●
2006	C70 (06-)	CEM	●	●	●	●
2006	C70 (06-)	MMM	●	●	●	○
2006	C70 (06-)	CPM	●	●	●	●
2006	C70 (06-)	SUB	●	●	●	○
2006	C70 (06-)	PSR	●	●	●	●
2006	C70 (06-)	DDM	●	●	●	●
2006	C70 (06-)	PDM	●	●	●	●
2006	C70 (06-)	CCM	●	●	●	●
2006	C70 (06-)	PAM	●	●	●	●
2006	C70 (06-)	SRS	●	●	●	●
2006	C70 (06-)	CRM	●	●	●	●
2006	C70 (06-)	EPS	●	●	●	●
2005	C70 Conv	Petrol	●	●	●	●
2005	C70 Conv	Petrol	●	●	●	●
2005	C70 Conv	Petrol	●	●	●	●
2005	C70 Conv	Combined instrument	●	●	●	●
2005	C70 Conv	Lock and alarm	●	●	●	●
2005	C70 Conv	RTI	●	●	●	●
2005	C70 Conv	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	C70 Conv	ABS/BCM	●	●	●	●
2005	C70 Conv	Cab control system	●	●	●	●
2005	C70 Conv	CCM	●	●	●	●
2005	C70 Conv	CPM	●	●	●	●
2005	C70 Conv	Power seat module, left	●	●	●	●
2005	C70 Conv	Power seat module, right	●	●	●	●
2005	C70 Conv	Rollover protection	●	●	●	●
2005	C70 Conv	SRS	●	●	●	●
2004	C70 Conv	Petrol	●	●	●	●
2004	C70 Conv	Petrol	●	●	●	●
2004	C70 Conv	Petrol	●	●	●	●
2004	C70 Conv	Combined instrument	●	●	●	●
2004	C70 Conv	Lock and alarm	●	●	●	●
2004	C70 Conv	RTI	●	●	●	●
2004	C70 Conv	TCM	●	●	●	●
2004	C70 Conv	ABS/BCM	●	●	●	●
2004	C70 Conv	Cab control system	●	●	●	●
2004	C70 Conv	CCM	●	●	●	●
2004	C70 Conv	CPM	●	●	●	●
2004	C70 Conv	Power seat module, left	●	●	●	●
2004	C70 Conv	Power seat module, right	●	●	●	●
2004	C70 Conv	Rollover protection	●	●	●	●
2004	C70 Conv	SRS	●	●	●	●
2003	C70 Conv	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2003	C70 Conv	Petrol	●	●	●	●
2003	C70 Conv	Petrol	●	●	●	●
2003	C70 Conv	Combined instrument	●	●	●	●
2003	C70 Conv	Lock and alarm	●	●	●	●
2003	C70 Conv	RTI	●	●	●	●
2003	C70 Conv	TCM	●	●	●	●
2003	C70 Conv	ABS/BCM	●	●	●	●
2003	C70 Conv	Cab control system	●	●	●	●
2003	C70 Conv	CCM	●	●	●	●
2003	C70 Conv	CPM	●	●	●	●
2003	C70 Conv	Power seat module, left	●	●	●	●
2003	C70 Conv	Power seat module, right	●	●	●	●
2003	C70 Conv	Rollover protection	●	●	●	●
2003	C70 Conv	SRS	●	●	●	●
2002	C70 Conv	Petrol	●	●	●	●
2002	C70 Conv	Petrol	●	●	●	●
2002	C70 Conv	Petrol	●	●	●	●
2002	C70 Conv	Combined instrument	●	●	●	●
2002	C70 Conv	Lock and alarm	●	●	●	●
2002	C70 Conv	RTI	●	●	●	●
2002	C70 Conv	TCM	●	●	●	●
2002	C70 Conv	ABS/BCM	●	●	●	●
2002	C70 Conv	Cab control system	●	●	●	●
2002	C70 Conv	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2002	C70 Conv	CPM	●	●	●	●
2002	C70 Conv	Power seat module, left	●	●	●	●
2002	C70 Conv	Power seat module, right	●	●	●	●
2002	C70 Conv	Rollover protection	●	●	●	●
2002	C70 Conv	SRS	●	●	●	●
2001	C70 Conv	Petrol	●	●	●	●
2001	C70 Conv	Petrol	●	●	●	●
2001	C70 Conv	Petrol	●	●	●	●
2001	C70 Conv	Combined instrument	●	●	●	●
2001	C70 Conv	Lock and alarm	●	●	●	●
2001	C70 Conv	RTI	●	●	●	●
2001	C70 Conv	TCM	●	●	●	●
2001	C70 Conv	ABS/BCM	●	●	●	●
2001	C70 Conv	Cab control system	●	●	●	●
2001	C70 Conv	CCM	●	●	●	●
2001	C70 Conv	CPM	●	●	●	●
2001	C70 Conv	Power seat module, left	●	●	●	●
2001	C70 Conv	Power seat module, right	●	●	●	●
2001	C70 Conv	Rollover protection	●	●	●	●
2001	C70 Conv	SRS	●	●	●	●
2000	C70 Conv	Petrol	●	●	●	●
2000	C70 Conv	Petrol	●	●	●	●
2000	C70 Conv	Petrol	●	●	●	●
2000	C70 Conv	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2000	C70 Conv	Petrol	●	●	●	●
2000	C70 Conv	Combined instrument	●	●	●	●
2000	C70 Conv	Lock and alarm	●	●	●	●
2000	C70 Conv	RTI	●	●	●	●
2000	C70 Conv	TCM	●	●	●	●
2000	C70 Conv	TCM	●	●	●	●
2000	C70 Conv	ABS/BCM	●	●	●	●
2000	C70 Conv	Cab control system	●	●	●	●
2000	C70 Conv	CCM	●	●	●	●
2000	C70 Conv	CPM	●	●	●	●
2000	C70 Conv	Power seat module, left	●	●	●	●
2000	C70 Conv	Power seat module, right	●	●	●	●
2000	C70 Conv	Rollover protection	●	●	●	●
2000	C70 Conv	SRS	●	●	●	●
1999	C70 Conv	Petrol	●	●	●	●
1999	C70 Conv	Petrol	●	●	●	●
1999	C70 Conv	Petrol	●	●	●	●
1999	C70 Conv	Petrol	●	●	●	●
1999	C70 Conv	Combined instrument	●	●	●	●
1999	C70 Conv	Lock and alarm	●	●	●	●
1999	C70 Conv	RTI	●	●	●	●
1999	C70 Conv	TCM	●	●	●	●
1999	C70 Conv	ABS/BCM	●	●	●	●
1999	C70 Conv	Cab control system	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1999	C70 Conv	CCM	●	●	●	●
1999	C70 Conv	CPM	●	●	●	●
1999	C70 Conv	Power seat module, left	●	●	●	●
1999	C70 Conv	Power seat module, right	●	●	●	●
1999	C70 Conv	Rollover protection	●	●	●	●
1999	C70 Conv	SRS	●	●	●	●
2002	C70 Coupe	Petrol	●	●	●	●
2002	C70 Coupe	Petrol	●	●	●	●
2002	C70 Coupe	Petrol	●	●	●	●
2002	C70 Coupe	Combined instrument	●	●	●	●
2002	C70 Coupe	Lock and alarm	●	●	●	●
2002	C70 Coupe	RTI	●	●	●	●
2002	C70 Coupe	TCM	●	●	●	●
2002	C70 Coupe	ABS/BCM	●	●	●	●
2002	C70 Coupe	CCM	●	●	●	●
2002	C70 Coupe	CPM	●	●	●	●
2002	C70 Coupe	Power seat module, left	●	●	●	●
2002	C70 Coupe	Power seat module, right	●	●	●	●
2002	C70 Coupe	SRS	●	●	●	●
2001	C70 Coupe	Petrol	●	●	●	●
2001	C70 Coupe	Petrol	●	●	●	●
2001	C70 Coupe	Petrol	●	●	●	●
2001	C70 Coupe	Combined instrument	●	●	●	●
2001	C70 Coupe	Lock and alarm	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2001	C70 Coupe	RTI	●	●	●	●
2001	C70 Coupe	TCM	●	●	●	●
2001	C70 Coupe	ABS/BCM	●	●	●	●
2001	C70 Coupe	CCM	●	●	●	●
2001	C70 Coupe	CPM	●	●	●	●
2001	C70 Coupe	Power seat module, left	●	●	●	●
2001	C70 Coupe	Power seat module, right	●	●	●	●
2001	C70 Coupe	SRS	●	●	●	●
2000	C70 Coupe	Petrol	●	●	●	●
2000	C70 Coupe	Petrol	●	●	●	●
2000	C70 Coupe	Petrol	●	●	●	●
2000	C70 Coupe	Petrol	●	●	●	●
2000	C70 Coupe	Petrol	●	●	●	●
2000	C70 Coupe	Combined instrument	●	●	●	●
2000	C70 Coupe	Lock and alarm	●	●	●	●
2000	C70 Coupe	RTI	●	●	●	●
2000	C70 Coupe	TCM	●	●	●	●
2000	C70 Coupe	TCM	●	●	●	●
2000	C70 Coupe	ABS/BCM	●	●	●	●
2000	C70 Coupe	CCM	●	●	●	●
2000	C70 Coupe	CPM	●	●	●	●
2000	C70 Coupe	Power seat module, left	●	●	●	●
2000	C70 Coupe	Power seat module, right	●	●	●	●
2000	C70 Coupe	SRS	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1999	C70 Coupe	Petrol	●	●	●	●
1999	C70 Coupe	Petrol	●	●	●	●
1999	C70 Coupe	Petrol	●	●	●	●
1999	C70 Coupe	Petrol	●	●	●	●
1999	C70 Coupe	Petrol	●	●	●	●
1999	C70 Coupe	Combined instrument	●	●	●	●
1999	C70 Coupe	Lock and alarm	●	●	●	●
1999	C70 Coupe	RTI	●	●	●	●
1999	C70 Coupe	TCM	●	●	●	●
1999	C70 Coupe	ABS/BCM	●	●	●	●
1999	C70 Coupe	CCM	●	●	●	●
1999	C70 Coupe	CPM	●	●	●	●
1999	C70 Coupe	Power seat module, left	●	●	●	●
1999	C70 Coupe	Power seat module, right	●	●	●	●
1999	C70 Coupe	SRS	●	●	●	●
2009	S40 (04-)	TCM	●	●	●	●
2009	S40 (04-)	DEM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ADM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ADM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	ECM	●	●	●	●
2009	S40 (04-)	TCM	●	●	●	●
2009	S40 (04-)	DEM	●	●	●	●
2009	S40 (04-)	TCM	●	●	●	●
2009	S40 (04-)	PSM	●	●	●	●
2009	S40 (04-)	AEM	●	●	●	●
2009	S40 (04-)	KVM	●	●	●	●
2009	S40 (04-)	RDAR	●	●	●	●
2009	S40 (04-)	PHM	●	●	●	●
2009	S40 (04-)	CPM	●	●	●	●
2009	S40 (04-)	AUD	●	●	●	○
2009	S40 (04-)	BPM	●	●	●	●
2009	S40 (04-)	PAM	●	●	●	●
2009	S40 (04-)	SRS	●	●	●	●
2009	S40 (04-)	DDM	●	●	●	●
2009	S40 (04-)	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	S40 (04-)	AUU	●	●	●	●
2009	S40 (04-)	HCM	●	●	●	●
2009	S40 (04-)	BCM	●	●	●	●
2009	S40 (04-)	CCM	●	●	●	○
2009	S40 (04-)	SWM	●	●	●	●
2009	S40 (04-)	TRM	●	●	●	●
2009	S40 (04-)	EPS	●	●	●	●
2009	S40 (04-)	IAM	●	●	●	●
2009	S40 (04-)	CEM	●	●	●	●
2009	S40 (04-)	DIM	●	●	●	●
2009	S40 (04-)	ICM	●	●	●	●
2009	S40 (04-)	MMM	●	●	●	○
2008	S40 (04-)	TCM	●	●	●	●
2008	S40 (04-)	DEM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ADM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ADM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	ECM	●	●	●	●
2008	S40 (04-)	TCM	●	●	●	●
2008	S40 (04-)	DEM	●	●	●	●
2008	S40 (04-)	TCM	●	●	●	●
2008	S40 (04-)	BCM	●	●	●	●
2008	S40 (04-)	PSM	●	●	●	●
2008	S40 (04-)	AEM	●	●	●	●
2008	S40 (04-)	KVM	●	●	●	●
2008	S40 (04-)	RDAR	●	●	●	●
2008	S40 (04-)	CPM	●	●	●	●
2008	S40 (04-)	AUD	●	●	●	○
2008	S40 (04-)	PAM	●	●	●	●
2008	S40 (04-)	SRS	●	●	●	●
2008	S40 (04-)	DDM	●	●	●	●
2008	S40 (04-)	PDM	●	●	●	●
2008	S40 (04-)	AUU	●	●	●	●
2008	S40 (04-)	HCM	●	●	●	●
2008	S40 (04-)	CCM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	S40 (04-)	TCM	●	●	●	●
2007	S40 (04-)	DEM	●	●	●	●
2007	S40 (04-)	TCM	●	●	●	●
2007	S40 (04-)	GPS	●	●	●	●
2007	S40 (04-)	BCM	●	●	●	●
2007	S40 (04-)	PSM	●	●	●	●
2007	S40 (04-)	TMC	●	●	●	●
2007	S40 (04-)	SWM	●	●	●	●
2007	S40 (04-)	KVM	●	●	●	●
2007	S40 (04-)	AEM	●	●	●	●
2007	S40 (04-)	PHM	●	●	●	●
2007	S40 (04-)	TRM	●	●	●	●
2007	S40 (04-)	CEM	●	●	●	●
2007	S40 (04-)	MMM	●	●	●	○
2007	S40 (04-)	RDAR	●	●	●	●
2007	S40 (04-)	CPM	●	●	●	●
2007	S40 (04-)	IAM	●	●	●	●
2007	S40 (04-)	AUD	●	●	●	○
2007	S40 (04-)	PAM	●	●	●	●
2007	S40 (04-)	DDM	●	●	●	●
2007	S40 (04-)	PDM	●	●	●	●
2007	S40 (04-)	SRS	●	●	●	●
2007	S40 (04-)	CCM	●	●	●	●
2007	S40 (04-)	DIM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	S40 (04-)	ICM	●	●	●	●
2007	S40 (04-)	EPS	●	●	●	●
2006	S40 (04-)	DEM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ADM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ADM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ADM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	ECM	●	●	●	●
2006	S40 (04-)	TCM	●	●	●	●
2006	S40 (04-)	DEM	●	●	●	●
2006	S40 (04-)	TCM	●	●	●	●
2006	S40 (04-)	DIM	●	●	●	●
2006	S40 (04-)	GPS	●	●	●	●
2006	S40 (04-)	DDM	●	●	●	●
2006	S40 (04-)	PDM	●	●	●	●





YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2004	S40(-04)	Petrol	●	●	●	●
2004	S40(-04)	Petrol	●	●	●	●
2004	S40(-04)	Diesel	●	●	●	●
2004	S40(-04)	Diesel	●	●	●	●
2004	S40(-04)	Anti-spin system	●	●	●	●
2004	S40(-04)	DIM	●	●	●	●
2004	S40(-04)	Gas discharge light module	●	●	●	●
2004	S40(-04)	Lock and alarm	●	●	●	●
2004	S40(-04)	TCM	●	●	●	●
2004	S40(-04)	ABS/BCM	●	●	●	●
2004	S40(-04)	CCM	●	●	●	●
2004	S40(-04)	CPM	●	●	●	●
2004	S40(-04)	SRS	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Petrol	●	●	●	●
2003	S40(-04)	Diesel	●	●	●	●
2003	S40(-04)	Diesel	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2003	S40(-04)	Anti-spin system	●	●	●	●
2003	S40(-04)	DIM	●	●	●	●
2003	S40(-04)	Gas discharge light module	●	●	●	●
2003	S40(-04)	Lock and alarm	●	●	●	●
2003	S40(-04)	TCM	●	●	●	●
2003	S40(-04)	ABS/BCM	●	●	●	●
2003	S40(-04)	CCM	●	●	●	●
2003	S40(-04)	CPM	●	●	●	●
2003	S40(-04)	SRS	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Petrol	●	●	●	●
2002	S40(-04)	Diesel	●	●	●	●
2002	S40(-04)	Diesel	●	●	●	●
2002	S40(-04)	Anti-spin system	●	●	●	●
2002	S40(-04)	DIM	●	●	●	●
2002	S40(-04)	Gas discharge light module	●	●	●	●
2002	S40(-04)	Lock and alarm	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2002	S40(-04)	TCM	●	●	●	●
2002	S40(-04)	ABS/BCM	●	●	●	●
2002	S40(-04)	CCM	●	●	●	●
2002	S40(-04)	CPM	●	●	●	●
2002	S40(-04)	SRS	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Petrol	●	●	●	●
2001	S40(-04)	Diesel	●	●	●	●
2001	S40(-04)	Diesel	●	●	●	●
2001	S40(-04)	Anti-spin system	●	●	●	●
2001	S40(-04)	DIM	●	●	●	●
2001	S40(-04)	Gas discharge light module	●	●	●	●
2001	S40(-04)	Lock and alarm	●	●	●	●
2001	S40(-04)	TCM	●	●	●	●
2001	S40(-04)	ABS/BCM	●	●	●	●
2001	S40(-04)	CCM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1999	S40(-04)	Diesel	●	●	●	●
1999	S40(-04)	Diesel	●	●	●	●
1999	S40(-04)	Anti-spin system	●	●	●	●
1999	S40(-04)	DIM	●	●	●	●
1999	S40(-04)	Lock and alarm	●	●	●	●
1999	S40(-04)	TCM	●	●	●	●
1999	S40(-04)	ABS/BCM	●	●	●	●
1999	S40(-04)	CCM	●	●	●	●
1999	S40(-04)	CPM	●	●	●	●
1999	S40(-04)	SRS	●	●	●	○
2005	S40(04-)	CEM	●	●	●	●
2005	S40(04-)	Petrol	●	●	●	●
2005	S40(04-)	Petrol	●	●	●	●
2005	S40(04-)	Petrol	●	●	●	●
2005	S40(04-)	Petrol	●	●	●	●
2005	S40(04-)	Petrol	●	●	●	●
2005	S40(04-)	Diesel	●	●	●	●
2005	S40(04-)	Diesel	●	●	●	●
2005	S40(04-)	Diesel	●	●	●	●
2005	S40(04-)	AFM	●	●	●	●
2005	S40(04-)	AEM	●	●	●	●
2005	S40(04-)	AUD	●	●	●	○
2005	S40(04-)	DEM	●	●	●	●
2005	S40(04-)	DIM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	S40 (04-)	ICM	●	●	●	●
2005	S40 (04-)	IAM	●	●	●	●
2005	S40 (04-)	KVM	●	●	●	●
2005	S40 (04-)	MPM	●	●	●	●
2005	S40 (04-)	MMM	●	●	●	●
2005	S40 (04-)	PAM	●	●	●	●
2005	S40 (04-)	PHM	●	●	●	●
2005	S40 (04-)	SWM	●	●	●	●
2005	S40 (04-)	SUB	●	●	●	○
2005	S40 (04-)	TMC	●	●	●	●
2005	S40 (04-)	TCM	●	●	●	●
2005	S40 (04-)	TCM	●	●	●	●
2005	S40 (04-)	ABS/BCM	●	●	●	●
2005	S40 (04-)	EPS	●	●	●	●
2005	S40 (04-)	CCM	●	●	●	●
2005	S40 (04-)	DDM	●	●	●	●
2005	S40 (04-)	PDM	●	●	●	●
2005	S40 (04-)	PSM	●	●	●	●
2005	S40 (04-)	SRS	●	●	●	●
2005	S40 (04-)	TRM	●	●	●	●
2005	S40 (04-)	GPS	●	●	●	●
2004	S40 (04-)	CEM	●	●	●	●
2004	S40 (04-)	EPS	●	●	●	●
2004	S40 (04-)	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2004	S40 (04-)	Petrol	●	●	●	●
2004	S40 (04-)	Petrol	●	●	●	●
2004	S40 (04-)	Diesel	●	●	●	●
2004	S40 (04-)	Diesel	●	●	●	●
2004	S40 (04-)	AFM	●	●	●	●
2004	S40 (04-)	AEM	●	●	●	●
2004	S40 (04-)	AUD	●	●	●	○
2004	S40 (04-)	DIM	●	●	●	●
2004	S40 (04-)	ICM	●	●	●	●
2004	S40 (04-)	MPM	●	●	●	●
2004	S40 (04-)	MMM	●	●	●	●
2004	S40 (04-)	PHM	●	●	●	●
2004	S40 (04-)	SWM	●	●	●	●
2004	S40 (04-)	SUB	●	●	●	○
2004	S40 (04-)	TMC	●	●	●	●
2004	S40 (04-)	TCM	●	●	●	●
2004	S40 (04-)	ABS/BCM	●	●	●	●
2004	S40 (04-)	CCM	●	●	●	●
2004	S40 (04-)	DDM	●	●	●	●
2004	S40 (04-)	PDM	●	●	●	●
2004	S40 (04-)	PSM	●	●	●	●
2004	S40 (04-)	SRS	●	●	●	●
2004	S40 (04-)	TRM	●	●	●	●
2004	S40 (04-)	GPS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	S60	CEM	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Petrol	●	●	●	●
2005	S60	Diesel	●	●	●	●
2005	S60	Diesel	●	●	●	●
2005	S60	Diesel	●	●	●	●
2005	S60	AEM	●	●	●	●
2005	S60	AUM	●	●	●	●
2005	S60	DIM	●	●	●	●
2005	S60	PHM	●	●	●	●
2005	S60	REM	●	●	●	●
2005	S60	RTI	●	●	●	○
2005	S60	UEM	●	●	●	●
2005	S60	TCM	●	●	●	●
2005	S60	TCM	●	●	●	●
2005	S60	ABS/BCM	●	●	●	●
2005	S60	SAS	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	S60	SUM	●	●	●	●
2005	S60	CCM	●	●	●	●
2005	S60	DDM	●	●	●	●
2005	S60	PDM	●	●	●	●
2005	S60	PSM	●	●	●	●
2005	S60	SRS	●	●	●	●
2005	S60	DEM	●	●	●	●
2005	S60	DEM	●	●	●	●
2004	S60	CEM	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Petrol	●	●	●	●
2004	S60	Diesel	●	●	●	●
2004	S60	Diesel	●	●	●	●
2004	S60	AEM	●	●	●	●
2004	S60	AUM	●	●	●	●
2004	S60	DIM	●	●	●	●
2004	S60	PHM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2003	S60	Petrol	●	●	●	●
2003	S60	Petrol	●	●	●	●
2003	S60	Diesel	●	●	●	●
2003	S60	Diesel	●	●	●	●
2003	S60	AEM	●	●	●	●
2003	S60	AUM	●	●	●	●
2003	S60	DEM	●	●	●	●
2003	S60	DIM	●	●	●	●
2003	S60	PHM	●	●	●	●
2003	S60	REM	●	●	●	●
2003	S60	RTI	●	●	●	○
2003	S60	SWM	●	●	●	●
2003	S60	UEM	●	●	●	●
2003	S60	TCM	●	●	●	●
2003	S60	TCM	●	●	●	●
2003	S60	ABS/BCM	●	●	●	●
2003	S60	SAS	●	●	●	●
2003	S60	CCM	●	●	●	●
2003	S60	DDM	●	●	●	●
2003	S60	PDM	●	●	●	●
2003	S60	PSM	●	●	●	●
2003	S60	SRS	●	●	●	●
2002	S60	CEM	●	●	●	●
2002	S60	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2002	S60	Petrol	●	●	●	●
2002	S60	Petrol	●	●	●	●
2002	S60	Petrol	●	●	●	●
2002	S60	Petrol	●	●	●	●
2002	S60	Petrol	●	●	●	●
2002	S60	Petrol	●	●	●	●
2002	S60	Petrol	●	●	●	●
2002	S60	Diesel	●	●	●	●
2002	S60	Diesel	●	●	●	●
2002	S60	AEM	●	●	●	●
2002	S60	AUM	●	●	●	●
2002	S60	DIM	●	●	●	●
2002	S60	PHM	●	●	●	●
2002	S60	REM	●	●	●	●
2002	S60	RTI	●	●	●	○
2002	S60	SWM	●	●	●	●
2002	S60	UEM	●	●	●	●
2002	S60	TCM	●	●	●	●
2002	S60	TCM	●	●	●	●
2002	S60	ABS/BCM	●	●	●	●
2002	S60	SAS	●	●	●	●
2002	S60	CCM	●	●	●	●
2002	S60	DDM	●	●	●	●
2002	S60	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2002	S60	PSM	●	●	●	●
2002	S60	SRS	●	●	●	●
2001	S60	CEM	●	●	●	●
2001	S60	Petrol	●	●	●	●
2001	S60	Petrol	●	●	●	●
2001	S60	Petrol	●	●	●	●
2001	S60	Petrol	●	●	●	●
2001	S60	Petrol	●	●	●	●
2001	S60	Petrol	●	●	●	●
2001	S60	Petrol	●	●	●	●
2001	S60	Diesel	●	●	●	●
2001	S60	AEM	●	●	●	●
2001	S60	AUM	●	●	●	●
2001	S60	DIM	●	●	●	●
2001	S60	PHM	●	●	●	●
2001	S60	REM	●	●	●	●
2001	S60	RTI	●	●	●	○
2001	S60	SWM	●	●	●	●
2001	S60	UEM	●	●	●	●
2001	S60	TCM	●	●	●	●
2001	S60	ABS/BCM	●	●	●	●
2001	S60	SAS	●	●	●	●
2001	S60	CCM	●	●	●	●
2001	S60	DDM	●	●	●	●
2001	S60	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2001	S60	PSM	●	●	●	●
2001	S60	SRS	●	●	●	●
2009	S60	TCM	●	●	●	●
2009	S60	DEM	●	●	●	●
2009	S60	DEM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	ECM	●	●	●	●
2009	S60	TCM	●	●	●	●
2009	S60	DEM	●	●	●	●
2009	S60	TCM	●	●	●	●
2009	S60	AUM	●	●	●	●
2009	S60	BCM	●	●	●	●
2009	S60	SRS	●	●	●	●
2009	S60	PSM	●	●	●	●
2009	S60	DDM	●	●	●	●
2009	S60	PDM	●	●	●	●
2009	S60	SUM	●	●	●	●
2009	S60	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	S60	REM	●	●	●	●
2009	S60	CPM	●	○	○	●
2009	S60	RTI	●	●	●	○
2009	S60	SAS	●	●	●	●
2009	S60	HCM	●	●	●	●
2009	S60	CCM	●	●	●	●
2009	S60	DIM	●	●	●	●
2009	S60	UEM	●	●	●	●
2009	S60	PHM	●	●	●	●
2009	S60	CEM	●	●	●	●
2008	S60	TCM	●	●	●	●
2008	S60	DEM	●	●	●	●
2008	S60	DEM	●	●	●	●
2008	S60	ECM	●	●	●	●
2008	S60	ECM	●	●	●	●
2008	S60	ECM	●	●	●	●
2008	S60	ECM	●	●	●	●
2008	S60	ECM	●	●	●	●
2008	S60	ETM	●	○	○	●
2008	S60	ECM	●	●	●	●
2008	S60	ECM	●	●	●	●
2008	S60	ECM	●	●	●	●
2008	S60	ECM	●	●	●	●
2008	S60	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	S60	DEM	●	●	●	●
2008	S60	TCM	●	●	●	●
2008	S60	AUM	●	●	●	●
2008	S60	BCM	●	●	●	●
2008	S60	SRS	●	●	●	●
2008	S60	PSM	●	●	●	●
2008	S60	DDM	●	●	●	●
2008	S60	PDM	●	●	●	●
2008	S60	SUM	●	●	●	●
2008	S60	AEM	●	●	●	●
2008	S60	PHM	●	●	●	●
2008	S60	REM	●	●	●	●
2008	S60	CPM	●	○	○	●
2008	S60	CEM	●	●	●	●
2008	S60	HCM	●	●	●	●
2008	S60	RTI	●	●	●	○
2008	S60	SAS	●	●	●	●
2008	S60	CCM	●	●	●	●
2008	S60	DIM	●	●	●	●
2008	S60	UEM	●	●	●	●
2007	S60	DEM	●	●	●	●
2007	S60	DEM	●	●	●	●
2007	S60	DEM	●	●	●	●
2007	S60	ECM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	S60	TCM	●	●	●	●
2007	S60	ECM	●	●	●	●
2007	S60	TCM	●	●	●	●
2007	S60	ECM	●	●	●	●
2007	S60	TCM	●	●	●	●
2007	S60	ECM	●	●	●	●
2007	S60	ECM	●	●	●	●
2007	S60	ECM	●	●	●	●
2007	S60	ETM	●	○	○	●
2007	S60	ECM	●	●	●	●
2007	S60	ECM	●	●	●	●
2007	S60	ECM	●	●	●	●
2007	S60	ECM	●	●	●	●
2007	S60	TCM	●	●	●	●
2007	S60	DEM	●	●	●	●
2007	S60	TCM	●	●	●	●
2007	S60	AUM	●	●	●	●
2007	S60	BCM	●	●	●	●
2007	S60	SRS	●	●	●	●
2007	S60	PSM	●	●	●	●
2007	S60	DDM	●	●	●	●
2007	S60	PDM	●	●	●	●
2007	S60	SUM	●	●	●	●
2007	S60	AEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	S60	PHM	●	●	●	●
2007	S60	REM	●	●	●	●
2007	S60	CPM	●	○	○	●
2007	S60	CEM	●	●	●	●
2007	S60	HCM	●	●	●	●
2007	S60	CCM	●	●	●	●
2007	S60	RTI	●	●	●	○
2007	S60	SAS	●	●	●	●
2007	S60	DIM	●	●	●	●
2007	S60	UEM	●	●	●	●
2006	S60	DEM	●	●	●	●
2006	S60	DEM	●	●	●	●
2006	S60	DEM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	TCM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	TCM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	TCM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	ETM	●	○	○	●
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	ECM	●	●	●	●
2006	S60	TCM	●	●	●	●
2006	S60	DEM	●	●	●	●
2006	S60	TCM	●	●	●	●
2006	S60	REM	●	●	●	●
2006	S60	AUM	●	●	●	●
2006	S60	BCM	●	●	●	●
2006	S60	SRS	●	●	●	●
2006	S60	PSM	●	●	●	●
2006	S60	DDM	●	●	●	●
2006	S60	PDM	●	●	●	●
2006	S60	SUM	●	●	●	●
2006	S60	AEM	●	●	●	●
2006	S60	PHM	●	●	●	●
2006	S60	DIM	●	●	●	●
2006	S60	CPM	●	○	○	●
2006	S60	UEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	S60	CEM	●	●	●	●
2006	S60	CCM	●	●	●	●
2006	S60	RTI	●	●	●	○
2006	S60	SAS	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Petrol	●	●	●	●
2000	S70	Diesel	●	○	○	●
2000	S70	Combined instrument	●	●	●	●
2000	S70	Lock and alarm	●	●	●	●
2000	S70	RTI	●	●	●	●
2000	S70	TCM	●	●	●	●
2000	S70	TCM	●	●	●	●
2000	S70	TCM	●	●	●	●
2000	S70	TCM	●	●	●	●
2000	S70	TCM	●	●	●	●
2000	S70	ABS/BCM	●	●	●	●
2000	S70	CCM	●	●	●	●
2000	S70	CPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2000	S70	Power seat module, left	●	●	●	●
2000	S70	Power seat module, right	●	●	●	●
2000	S70	SRS	●	●	●	●
1999	S70	Petrol	●	●	●	●
1999	S70	Petrol	●	●	●	●
1999	S70	Petrol	●	●	●	●
1999	S70	Petrol	●	●	●	●
1999	S70	Petrol	●	●	●	●
1999	S70	Petrol	●	●	●	●
1999	S70	Petrol	●	●	●	●
1999	S70	Diesel	●	○	○	●
1999	S70	Combined instrument	●	●	●	●
1999	S70	Lock and alarm	●	●	●	●
1999	S70	RTI	●	●	●	●
1999	S70	TCM	●	●	●	●
1999	S70	TCM	●	●	●	●
1999	S70	ABS/BCM	●	●	●	●
1999	S70	CCM	●	●	●	●
1999	S70	CPM	●	●	●	●
1999	S70	Power seat module, left	●	●	●	●
1999	S70	Power seat module, right	●	●	●	●
1999	S70	SRS	●	●	●	●
2005	S80	Petrol	●	●	●	●
2005	S80	Petrol	●	●	●	●
2005	S80	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	S80	Petrol	●	●	●	●
2005	S80	Petrol	●	●	●	●
2005	S80	Petrol	●	●	●	●
2005	S80	Petrol	●	●	●	●
2005	S80	Petrol	●	●	●	●
2005	S80	Petrol	●	●	●	●
2005	S80	Diesel	●	●	●	●
2005	S80	Diesel	●	●	●	●
2005	S80	AEM	●	●	●	●
2005	S80	AUM	●	●	●	●
2005	S80	DIM	●	●	●	●
2005	S80	PHM	●	●	●	●
2005	S80	REM	●	●	●	●
2005	S80	RTI	●	●	●	○
2005	S80	UEM	●	●	●	●
2005	S80	TCM	●	●	●	●
2005	S80	TCM	●	●	●	●
2005	S80	TCM	●	●	●	●
2005	S80	TCM	●	●	●	●
2005	S80	ABS/BCM	●	●	●	●
2005	S80	SAS	●	●	●	●
2005	S80	SUM	●	●	●	●
2005	S80	CCM	●	●	●	●
2005	S80	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	S80	PDM	●	●	●	●
2005	S80	PSM	●	●	●	●
2005	S80	SRS	●	●	●	●
2005	S80	CEM	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Petrol	●	●	●	●
2004	S80	Diesel	●	●	●	●
2004	S80	Diesel	●	●	●	●
2004	S80	AEM	●	●	●	●
2004	S80	AUM	●	●	●	●
2004	S80	CEM	●	●	●	●
2004	S80	DIM	●	●	●	●
2004	S80	PHM	●	●	●	●
2004	S80	REM	●	●	●	●
2004	S80	RTI	●	●	●	○
2004	S80	SWM	●	●	●	●
2004	S80	UEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2004	S80	TCM	●	●	●	●
2004	S80	TCM	●	●	●	●
2004	S80	TCM	●	●	●	●
2004	S80	TCM	●	●	●	●
2004	S80	ABS/BCM	●	●	●	●
2004	S80	SAS	●	●	●	●
2004	S80	SUM	●	●	●	●
2004	S80	CCM	●	●	●	●
2004	S80	DDM	●	●	●	●
2004	S80	PDM	●	●	●	●
2004	S80	PSM	●	●	●	●
2004	S80	SRS	●	●	●	●
2003	S80	CEM	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Petrol	●	●	●	●
2003	S80	Diesel	●	●	●	●
2003	S80	Diesel	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2003	S80	AEM	●	●	●	●
2003	S80	AUM	●	●	●	●
2003	S80	DIM	●	●	●	●
2003	S80	PHM	●	●	●	●
2003	S80	REM	●	●	●	●
2003	S80	RTI	●	●	●	○
2003	S80	SWM	●	●	●	●
2003	S80	UEM	●	●	●	●
2003	S80	TCM	●	●	●	●
2003	S80	TCM	●	●	●	●
2003	S80	TCM	●	●	●	●
2003	S80	TCM	●	●	●	●
2003	S80	ABS/BCM	●	●	●	●
2003	S80	SAS	●	●	●	●
2003	S80	CCM	●	●	●	●
2003	S80	DDM	●	●	●	●
2003	S80	PDM	●	●	●	●
2003	S80	PSM	●	●	●	●
2003	S80	SRS	●	●	●	●
2002	S80	CEM	●	●	●	●
2002	S80	Petrol	●	●	●	●
2002	S80	Petrol	●	●	●	●
2002	S80	Petrol	●	●	●	●
2002	S80	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2002	S80	Petrol	●	●	●	●
2002	S80	Petrol	●	●	●	●
2002	S80	Petrol	●	●	●	●
2002	S80	Petrol	●	●	●	●
2002	S80	Petrol	●	●	●	●
2002	S80	Diesel	●	●	●	●
2002	S80	Diesel	●	●	●	●
2002	S80	AEM	●	●	●	●
2002	S80	AUM	●	●	●	●
2002	S80	DIM	●	●	●	●
2002	S80	PHM	●	●	●	●
2002	S80	REM	●	●	●	●
2002	S80	RTI	●	●	●	○
2002	S80	SWM	●	●	●	●
2002	S80	UEM	●	●	●	●
2002	S80	TCM	●	●	●	●
2002	S80	TCM	●	●	●	●
2002	S80	TCM	●	●	●	●
2002	S80	TCM	●	●	●	●
2002	S80	ABS/BCM	●	●	●	●
2002	S80	SAS	●	●	●	●
2002	S80	CCM	●	●	●	●
2002	S80	DDM	●	●	●	●
2002	S80	PDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2002	S80	PSM	●	●	●	●
2002	S80	SRS	●	●	●	●
2001	S80	CEM	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Petrol	●	●	●	●
2001	S80	Diesel	●	●	●	●
2001	S80	Diesel	●	○	○	●
2001	S80	AEM	●	●	●	●
2001	S80	AUM	●	●	●	●
2001	S80	DIM	●	●	●	●
2001	S80	PHM	●	●	●	●
2001	S80	REM	●	●	●	●
2001	S80	RTI	●	●	●	○
2001	S80	SWM	●	●	●	●
2001	S80	UEM	●	●	●	●
2001	S80	TCM	●	●	●	●
2001	S80	TCM	●	●	●	●
2001	S80	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2001	S80	TCM	●	●	●	●
2001	S80	TCM	●	●	●	●
2001	S80	ABS/BCM	●	●	●	●
2001	S80	SAS	●	●	●	●
2001	S80	CCM	●	●	●	●
2001	S80	DDM	●	●	●	●
2001	S80	PDM	●	●	●	●
2001	S80	PSM	●	●	●	●
2001	S80	SRS	●	●	●	●
2000	S80	CEM	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	●	●	●
2000	S80	Petrol	●	○	○	●
2000	S80	AUM	●	●	●	●
2000	S80	DIM	●	●	●	●
2000	S80	PHM	●	●	●	○
2000	S80	REM	●	●	●	●
2000	S80	RTI	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2000	S80	SWM	●	●	●	●
2000	S80	UEM	●	●	●	●
2000	S80	TCM	●	●	●	●
2000	S80	TCM	●	●	●	●
2000	S80	TCM	●	●	●	●
2000	S80	TCM	●	●	●	●
2000	S80	ABS/BCM	●	●	●	●
2000	S80	SAS	●	●	●	●
2000	S80	CCM	●	●	●	●
2000	S80	DDM	●	●	●	●
2000	S80	PDM	●	●	●	●
2000	S80	PSM	●	●	●	●
2000	S80	SRS	●	●	●	●
1999	S80	CEM	●	●	●	●
1999	S80	Petrol	●	●	●	●
1999	S80	Petrol	●	●	●	●
1999	S80	Petrol	●	●	●	●
1999	S80	Petrol	●	●	●	●
1999	S80	Petrol	●	●	●	●
1999	S80	Petrol	●	●	●	●
1999	S80	Petrol	●	●	●	●
1999	S80	Diesel	●	○	○	●
1999	S80	AUM	●	●	●	○
1999	S80	DIM	●	●	●	●
1999	S80	PHM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1999	S80	REM	●	●	●	●
1999	S80	RTI	●	●	●	○
1999	S80	SWM	●	●	●	●
1999	S80	UEM	●	●	●	●
1999	S80	TCM	●	●	●	●
1999	S80	TCM	●	●	●	●
1999	S80	TCM	●	●	●	●
1999	S80	TCM	●	●	●	●
1999	S80	ABS/BCM	●	●	●	●
1999	S80	SAS	●	●	●	●
1999	S80	CCM	●	●	●	●
1999	S80	DDM	●	●	●	●
1999	S80	PDM	●	●	●	●
1999	S80	PSM	●	●	●	●
1999	S80	SRS	●	●	●	○
2006	S80(-06)	ECM	●	●	●	●
2006	S80(-06)	ECM	●	●	●	●
2006	S80(-06)	ECM	●	●	●	●
2006	S80(-06)	ECM	●	●	●	●
2006	S80(-06)	ECM	●	●	●	●
2006	S80(-06)	ETM	●	○	○	●
2006	S80(-06)	ECM	●	●	●	●
2006	S80(-06)	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	S80(-06)	ECM	●	●	●	●
2006	S80(-06)	ECM	●	●	●	●
2006	S80(-06)	TCM	●	●	●	●
2006	S80(-06)	TCM	●	●	●	●
2006	S80(-06)	DEM	●	●	●	●
2006	S80(-06)	TCM	●	●	●	●
2006	S80(-06)	TCM	●	●	●	●
2006	S80(-06)	REM	●	●	●	●
2006	S80(-06)	AUM	●	●	●	●
2006	S80(-06)	BCM	●	●	●	●
2006	S80(-06)	SRS	●	●	●	●
2006	S80(-06)	PSM	●	●	●	●
2006	S80(-06)	DDM	●	●	●	●
2006	S80(-06)	PDM	●	●	●	●
2006	S80(-06)	SUM	●	●	●	●
2006	S80(-06)	AEM	●	●	●	●
2006	S80(-06)	PHM	●	●	●	●
2006	S80(-06)	DIM	●	●	●	●
2006	S80(-06)	CPM	●	○	○	●
2006	S80(-06)	UEM	●	●	●	●
2006	S80(-06)	CEM	●	●	●	●
2006	S80(-06)	CCM	●	●	●	●
2006	S80(-06)	RTI	●	●	●	○
2006	S80(-06)	SAS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	S80 (07-)	DEM	●	●	●	●
2009	S80 (07-)	DEM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	TCM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	ECM	●	●	●	●
2009	S80 (07-)	SUM	●	●	●	●
2009	S80 (07-)	IAM	●	●	●	○
2009	S80 (07-)	PSM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	S80 (07-)	HLDF	●	●	●	●
2009	S80 (07-)	AUU	●	●	●	●
2009	S80 (07-)	DDM	●	●	●	●
2009	S80 (07-)	PDM	●	●	●	●
2009	S80 (07-)	PAM	●	●	●	●
2009	S80 (07-)	KVM	●	●	●	●
2009	S80 (07-)	AUD	●	●	●	○
2009	S80 (07-)	CPM	●	●	●	●
2009	S80 (07-)	HCM	●	●	●	●
2009	S80 (07-)	BCM	●	●	●	●
2009	S80 (07-)	SAS	●	●	●	●
2009	S80 (07-)	SRS	●	●	●	●
2009	S80 (07-)	CCM	●	●	●	●
2009	S80 (07-)	CEM	●	●	●	●
2009	S80 (07-)	TRM	●	●	●	●
2009	S80 (07-)	PBM	●	●	●	●
2009	S80 (07-)	FSM	●	●	●	●
2009	S80 (07-)	DIM	●	●	●	●
2009	S80 (07-)	PAC	●	●	●	●
2009	S80 (07-)	RDAR	●	●	●	○
2009	S80 (07-)	MMM	●	●	●	○
2009	S80 (07-)	ICM	●	●	●	●
2009	S80 (07-)	BPM	●	●	●	●
2009	S80 (07-)	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	S80 (07-)	DEM	●	●	●	●
2008	S80 (07-)	DEM	●	●	●	●
2008	S80 (07-)	TCM	●	●	●	●
2008	S80 (07-)	ECM	●	●	●	●
2008	S80 (07-)	TCM	●	●	●	●
2008	S80 (07-)	TCM	●	●	●	●
2008	S80 (07-)	ECM	●	●	●	●
2008	S80 (07-)	ECM	●	●	●	●
2008	S80 (07-)	TCM	●	●	●	●
2008	S80 (07-)	ECM	●	●	●	●
2008	S80 (07-)	TCM	●	●	●	●
2008	S80 (07-)	TCM	●	●	●	●
2008	S80 (07-)	ECM	●	●	●	●
2008	S80 (07-)	TCM	●	●	●	●
2008	S80 (07-)	ECM	●	●	●	●
2008	S80 (07-)	ECM	●	●	●	●
2008	S80 (07-)	ECM	●	●	●	●
2008	S80 (07-)	SUM	●	●	●	●
2008	S80 (07-)	IAM	●	●	●	○
2008	S80 (07-)	PSM	●	●	●	●
2008	S80 (07-)	RDAR	●	●	●	○
2008	S80 (07-)	HLDF	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	S80 (07-)	AUU	●	●	●	●
2008	S80 (07-)	DDM	●	●	●	●
2008	S80 (07-)	PDM	●	●	●	●
2008	S80 (07-)	PAM	●	●	●	●
2008	S80 (07-)	KVM	●	●	●	●
2008	S80 (07-)	AUD	●	●	●	○
2008	S80 (07-)	PHM	●	●	●	●
2008	S80 (07-)	CPM	●	●	●	●
2008	S80 (07-)	HCM	●	●	●	●
2008	S80 (07-)	BCM	●	●	●	●
2008	S80 (07-)	SAS	●	●	●	●
2008	S80 (07-)	SRS	●	●	●	●
2008	S80 (07-)	CEM	●	●	●	●
2008	S80 (07-)	DIM	●	●	●	●
2008	S80 (07-)	CCM	●	●	●	●
2008	S80 (07-)	TRM	●	●	●	●
2008	S80 (07-)	PBM	●	●	●	●
2008	S80 (07-)	BPM	●	●	●	●
2008	S80 (07-)	MMM	●	●	●	○
2008	S80 (07-)	FSM	●	●	●	●
2008	S80 (07-)	ICM	●	●	●	●
2008	S80 (07-)	PAC	●	●	●	●
2007	S80 (07-)	DEM	●	●	●	●
2007	S80 (07-)	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	S80 (07-)	SUM	●	●	●	●
2007	S80 (07-)	PSM	●	●	●	●
2007	S80 (07-)	HLDF	●	●	●	●
2007	S80 (07-)	AUU	●	●	●	●
2007	S80 (07-)	DDM	●	●	●	●
2007	S80 (07-)	PDM	●	●	●	●
2007	S80 (07-)	PAM	●	●	●	●
2007	S80 (07-)	KVM	●	●	●	●
2007	S80 (07-)	AUD	●	●	●	○
2007	S80 (07-)	PHM	●	●	●	●
2007	S80 (07-)	CPM	●	●	●	●
2007	S80 (07-)	HCM	●	●	●	●
2007	S80 (07-)	SAS	●	●	●	●
2007	S80 (07-)	CCM	●	●	●	●
2007	S80 (07-)	TRM	●	●	●	●
2007	S80 (07-)	TCM	●	●	●	●
2007	S80 (07-)	ECM	●	●	●	●
2007	S80 (07-)	TCM	●	●	●	●
2007	S80 (07-)	ECM	●	●	●	●
2007	S80 (07-)	TCM	●	●	●	●
2007	S80 (07-)	ECM	●	●	●	●
2007	S80 (07-)	TCM	●	●	●	●
2007	S80 (07-)	TCM	●	●	●	●
2007	S80 (07-)	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	S80 (07-)	TCM	●	●	●	●
2007	S80 (07-)	BCM	●	●	●	●
2007	S80 (07-)	FSM	●	●	●	●
2007	S80 (07-)	IAM	●	●	●	○
2007	S80 (07-)	PAC	●	●	●	●
2007	S80 (07-)	RDAR	●	●	●	○
2007	S80 (07-)	ICM	●	●	●	●
2007	S80 (07-)	SRS	●	●	●	●
2007	S80 (07-)	PBM	●	●	●	●
2007	S80 (07-)	CEM	●	●	●	●
2007	S80 (07-)	BPM	●	●	●	●
2007	S80 (07-)	DIM	●	●	●	●
2007	S80 (07-)	MMM	●	●	●	○
2004	V40	Petrol	●	●	●	●
2004	V40	Petrol	●	●	●	●
2004	V40	Petrol	●	●	●	●
2004	V40	Petrol	●	●	●	●
2004	V40	Petrol	●	●	●	●
2004	V40	Petrol	●	●	●	●
2004	V40	Petrol	●	●	●	●
2004	V40	Petrol	●	●	●	●
2004	V40	Petrol	●	●	●	●
2004	V40	Diesel	●	●	●	●
2004	V40	Diesel	●	●	●	●
2004	V40	Anti-spin system	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2004	V40	DIM	●	●	●	●
2004	V40	Gas discharge light module	●	●	●	●
2004	V40	Lock and alarm	●	●	●	●
2004	V40	TCM	●	●	●	●
2004	V40	ABS/BCM	●	●	●	●
2004	V40	CCM	●	●	●	●
2004	V40	CPM	●	●	●	●
2004	V40	SRS	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Petrol	●	●	●	●
2003	V40	Diesel	●	●	●	●
2003	V40	Diesel	●	●	●	●
2003	V40	Anti-spin system	●	●	●	●
2003	V40	DIM	●	●	●	●
2003	V40	Gas discharge light module	●	●	●	●
2003	V40	Lock and alarm	●	●	●	●
2003	V40	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2003	V40	ABS/BCM	●	●	●	●
2003	V40	CCM	●	●	●	●
2003	V40	CPM	●	●	●	●
2003	V40	SRS	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Petrol	●	●	●	●
2002	V40	Diesel	●	●	●	●
2002	V40	Diesel	●	●	●	●
2002	V40	Anti-spin system	●	●	●	●
2002	V40	DIM	●	●	●	●
2002	V40	Gas discharge light module	●	●	●	●
2002	V40	Lock and alarm	●	●	●	●
2002	V40	TCM	●	●	●	●
2002	V40	ABS/BCM	●	●	●	●
2002	V40	CCM	●	●	●	●
2002	V40	CPM	●	●	●	●
2002	V40	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Petrol	●	●	●	●
2001	V40	Diesel	●	●	●	●
2001	V40	Diesel	●	●	●	●
2001	V40	Anti-spin system	●	●	●	●
2001	V40	DIM	●	●	●	●
2001	V40	Gas discharge light module	●	●	●	●
2001	V40	Lock and alarm	●	●	●	●
2001	V40	TCM	●	●	●	●
2001	V40	ABS/BCM	●	●	●	●
2001	V40	CCM	●	●	●	●
2001	V40	CPM	●	●	●	●
2001	V40	SRS	●	●	●	●
2000	V40	Petrol	●	●	●	●
2000	V40	Petrol	●	●	●	●
2000	V40	Petrol	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2000	V40	Petrol	●	●	●	●
2000	V40	Petrol	●	●	●	●
2000	V40	Petrol	●	●	●	●
2000	V40	Petrol	●	●	●	●
2000	V40	Diesel	●	●	●	●
2000	V40	Anti-spin system	●	●	●	●
2000	V40	DIM	●	●	●	●
2000	V40	Lock and alarm	●	●	●	●
2000	V40	TCM	●	●	●	●
2000	V40	ABS/BCM	●	●	●	●
2000	V40	CCM	●	●	●	●
2000	V40	CPM	●	●	●	●
2000	V40	SRS	●	●	●	○
1999	V40	Petrol	●	●	●	●
1999	V40	Petrol	●	●	●	●
1999	V40	Petrol	●	●	●	●
1999	V40	Petrol	●	●	●	●
1999	V40	Petrol	●	●	●	●
1999	V40	Petrol	●	●	●	●
1999	V40	Petrol	●	●	●	●
1999	V40	Diesel	●	●	●	●
1999	V40	Diesel	●	●	●	●
1999	V40	DIM	●	●	●	●
1999	V40	Lock and alarm	●	●	●	●
1999	V40	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1999	V40	ABS/BCM	●	●	●	●
1999	V40	CCM	●	●	●	●
1999	V40	CPM	●	●	●	●
1999	V40	SRS	●	●	●	○
2005	V50	Petrol	●	●	●	●
2005	V50	Petrol	●	●	●	●
2005	V50	Petrol	●	●	●	●
2005	V50	Petrol	●	●	●	●
2005	V50	Petrol	●	●	●	●
2005	V50	Diesel	●	●	●	●
2005	V50	Diesel	●	●	●	●
2005	V50	Diesel	●	●	●	●
2005	V50	AFM	●	●	●	●
2005	V50	AEM	●	●	●	●
2005	V50	AUD	●	●	●	○
2005	V50	CEM	●	●	●	●
2005	V50	DIM	●	●	●	●
2005	V50	ICM	●	●	●	●
2005	V50	IAM	●	●	●	●
2005	V50	KVM	●	●	●	●
2005	V50	MPM	●	●	●	●
2005	V50	MMM	●	●	●	●
2005	V50	PAM	●	●	●	●
2005	V50	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	V50	SWM	●	●	●	●
2005	V50	SUB	●	●	●	○
2005	V50	TMC	●	●	●	●
2005	V50	TCM	●	●	●	●
2005	V50	TCM	●	●	●	●
2005	V50	ABS/BCM	●	●	●	●
2005	V50	EPS	●	●	●	●
2005	V50	CCM	●	●	●	●
2005	V50	DDM	●	●	●	●
2005	V50	PDM	●	●	●	●
2005	V50	PSM	●	●	●	●
2005	V50	SRS	●	●	●	●
2005	V50	TRM	●	●	●	●
2005	V50	DEM	●	●	●	●
2005	V50	GPS	●	●	●	●
2004	V50	Petrol	●	●	●	●
2004	V50	Petrol	●	●	●	●
2004	V50	Petrol	●	●	●	●
2004	V50	Diesel	●	●	●	●
2004	V50	Diesel	●	●	●	●
2004	V50	AFM	●	●	●	●
2004	V50	AEM	●	●	●	●
2004	V50	AUD	●	●	●	○
2004	V50	CEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2004	V50	DIM	●	●	●	●
2004	V50	ICM	●	●	●	●
2004	V50	MPM	●	●	●	●
2004	V50	MMM	●	●	●	●
2004	V50	PHM	●	●	●	●
2004	V50	SWM	●	●	●	●
2004	V50	SUB	●	●	●	○
2004	V50	TMC	●	●	●	●
2004	V50	TCM	●	●	●	●
2004	V50	ABS/BCM	●	●	●	●
2004	V50	CCM	●	●	●	●
2004	V50	DDM	●	●	●	●
2004	V50	PDM	●	●	●	●
2004	V50	PSM	●	●	●	●
2004	V50	SRS	●	●	●	●
2004	V50	TRM	●	●	●	●
2004	V50	EPS	●	●	●	●
2004	V50	GPS	●	●	●	●
2009	V50	TCM	●	●	●	●
2009	V50	DEM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	V50	ADM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ADM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	ECM	●	●	●	●
2009	V50	TCM	●	●	●	●
2009	V50	DEM	●	●	●	●
2009	V50	TCM	●	●	●	●
2009	V50	PSM	●	●	●	●
2009	V50	AEM	●	●	●	●
2009	V50	KVM	●	●	●	●
2009	V50	RDAR	●	●	●	●
2009	V50	PHM	●	●	●	●
2009	V50	CPM	●	●	●	●
2009	V50	AUD	●	●	●	○
2009	V50	BPM	●	●	●	●
2009	V50	PAM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	V50	SRS	●	●	●	●
2009	V50	DDM	●	●	●	●
2009	V50	PDM	●	●	●	●
2009	V50	AUU	●	●	●	●
2009	V50	HCM	●	●	●	●
2009	V50	BCM	●	●	●	●
2009	V50	CCM	●	●	●	○
2009	V50	SWM	●	●	●	●
2009	V50	TRM	●	●	●	●
2009	V50	EPS	●	●	●	●
2009	V50	IAM	●	●	●	●
2009	V50	CEM	●	●	●	●
2009	V50	DIM	●	●	●	●
2009	V50	ICM	●	●	●	●
2009	V50	MMM	●	●	●	○
2008	V50	TCM	●	●	●	●
2008	V50	DEM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ADM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ADM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	ECM	●	●	●	●
2008	V50	TCM	●	●	●	●
2008	V50	DEM	●	●	●	●
2008	V50	TCM	●	●	●	●
2008	V50	BCM	●	●	●	●
2008	V50	PSM	●	●	●	●
2008	V50	AEM	●	●	●	●
2008	V50	KVM	●	●	●	●
2008	V50	RDAR	●	●	●	●
2008	V50	CPM	●	●	●	●
2008	V50	AUD	●	●	●	○
2008	V50	PAM	●	●	●	●
2008	V50	SRS	●	●	●	●
2008	V50	DDM	●	●	●	●
2008	V50	PDM	●	●	●	●
2008	V50	AUU	●	●	●	●





YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	V50	ECM	●	●	●	●
2007	V50	ECM	●	●	●	●
2007	V50	TCM	●	●	●	●
2007	V50	DEM	●	●	●	●
2007	V50	TCM	●	●	●	●
2007	V50	GPS	●	●	●	●
2007	V50	BCM	●	●	●	●
2007	V50	PSM	●	●	●	●
2007	V50	TMC	●	●	●	●
2007	V50	SWM	●	●	●	●
2007	V50	KVM	●	●	●	●
2007	V50	AEM	●	●	●	●
2007	V50	PHM	●	●	●	●
2007	V50	TRM	●	●	●	●
2007	V50	CEM	●	●	●	●
2007	V50	MMM	●	●	●	○
2007	V50	RDAR	●	●	●	●
2007	V50	CPM	●	●	●	●
2007	V50	IAM	●	●	●	●
2007	V50	AUD	●	●	●	○
2007	V50	PAM	●	●	●	●
2007	V50	DDM	●	●	●	●
2007	V50	PDM	●	●	●	●
2007	V50	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	V50	CCM	●	●	●	●
2007	V50	DIM	●	●	●	●
2007	V50	ICM	●	●	●	●
2007	V50	EPS	●	●	●	●
2006	V50	DEM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ADM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ADM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ADM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	ECM	●	●	●	●
2006	V50	TCM	●	●	●	●
2006	V50	DEM	●	●	●	●
2006	V50	TCM	●	●	●	●
2006	V50	DIM	●	●	●	●
2006	V50	GPS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	V50	DDM	●	●	●	●
2006	V50	PDM	●	●	●	●
2006	V50	BCM	●	●	●	●
2006	V50	PSM	●	●	●	●
2006	V50	TMC	●	●	●	●
2006	V50	SWM	●	●	●	●
2006	V50	KVM	●	●	●	●
2006	V50	AEM	●	●	●	●
2006	V50	ICM	●	●	●	●
2006	V50	IAM	●	●	●	●
2006	V50	PHM	●	●	●	●
2006	V50	TRM	●	●	●	●
2006	V50	PAM	●	●	●	●
2006	V50	CEM	●	●	●	●
2006	V50	MMM	●	●	●	○
2006	V50	CPM	●	●	●	●
2006	V50	CCM	●	●	●	●
2006	V50	AUD	●	●	●	○
2006	V50	SRS	●	●	●	●
2006	V50	EPS	●	●	●	●
2008	V70 (00-08)	DEM	●	●	●	●
2008	V70 (00-08)	TCM	●	●	●	●
2008	V70 (00-08)	DEM	●	●	●	●
2008	V70 (00-08)	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	V70 (00-08)	ECM	●	●	●	●
2008	V70 (00-08)	ECM	●	●	●	●
2008	V70 (00-08)	ETM	●	○	○	●
2008	V70 (00-08)	ECM	●	●	●	●
2008	V70 (00-08)	ECM	●	●	●	●
2008	V70 (00-08)	ECM	●	●	●	●
2008	V70 (00-08)	DEM	●	●	●	●
2008	V70 (00-08)	TCM	●	●	●	●
2008	V70 (00-08)	DEM	●	●	●	●
2008	V70 (00-08)	TCM	●	●	●	●
2008	V70 (00-08)	PHM	●	●	●	●
2008	V70 (00-08)	AUM	●	●	●	●
2008	V70 (00-08)	BCM	●	●	●	●
2008	V70 (00-08)	SRS	●	●	●	●
2008	V70 (00-08)	PSM	●	●	●	●
2008	V70 (00-08)	DDM	●	●	●	●
2008	V70 (00-08)	PDM	●	●	●	●
2008	V70 (00-08)	SUM	●	●	●	●
2008	V70 (00-08)	AEM	●	●	●	●
2008	V70 (00-08)	REM	●	●	●	●
2008	V70 (00-08)	CPM	●	○	○	●
2008	V70 (00-08)	CEM	●	●	●	●
2008	V70 (00-08)	HCM	●	●	●	●
2008	V70 (00-08)	RTI	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	V70 (00-08)	SAS	●	●	●	●
2008	V70 (00-08)	AUU	●	●	●	●
2008	V70 (00-08)	CCM	●	●	●	●
2008	V70 (00-08)	DIM	●	●	●	●
2008	V70 (00-08)	UEM	●	●	●	●
2007	V70 (00-08)	DEM	●	●	●	●
2007	V70 (00-08)	DEM	●	●	●	●
2007	V70 (00-08)	DEM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	TCM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	TCM	●	●	●	●
2007	V70 (00-08)	TCM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	TCM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	ETM	●	○	○	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	ECM	●	●	●	●
2007	V70 (00-08)	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	V70 (00-08)	TCM	●	●	●	●
2007	V70 (00-08)	DEM	●	●	●	●
2007	V70 (00-08)	PHM	●	●	●	●
2007	V70 (00-08)	AUM	●	●	●	●
2007	V70 (00-08)	BCM	●	●	●	●
2007	V70 (00-08)	SRS	●	●	●	●
2007	V70 (00-08)	PSM	●	●	●	●
2007	V70 (00-08)	DDM	●	●	●	●
2007	V70 (00-08)	PDM	●	●	●	●
2007	V70 (00-08)	SUM	●	●	●	●
2007	V70 (00-08)	AEM	●	●	●	●
2007	V70 (00-08)	REM	●	●	●	●
2007	V70 (00-08)	CPM	●	○	○	●
2007	V70 (00-08)	CEM	●	●	●	●
2007	V70 (00-08)	HCM	●	●	●	●
2007	V70 (00-08)	CCM	●	●	●	●
2007	V70 (00-08)	RTI	●	●	●	○
2007	V70 (00-08)	SAS	●	●	●	●
2007	V70 (00-08)	DIM	●	●	●	●
2007	V70 (00-08)	UEM	●	●	●	●
2006	V70 (00-08)	DEM	●	●	●	●
2006	V70 (00-08)	TCM	●	●	●	●
2006	V70 (00-08)	DEM	●	●	●	●
2006	V70 (00-08)	DEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	TCM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	TCM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ETM	●	○	○	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	ECM	●	●	●	●
2006	V70 (00-08)	TCM	●	●	●	●
2006	V70 (00-08)	TCM	●	●	●	●
2006	V70 (00-08)	DEM	●	●	●	●
2006	V70 (00-08)	REM	●	●	●	●
2006	V70 (00-08)	AUM	●	●	●	●
2006	V70 (00-08)	BCM	●	●	●	●
2006	V70 (00-08)	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	V70 (00-08)	PSM	●	●	●	●
2006	V70 (00-08)	DDM	●	●	●	●
2006	V70 (00-08)	PDM	●	●	●	●
2006	V70 (00-08)	SUM	●	●	●	●
2006	V70 (00-08)	AEM	●	●	●	●
2006	V70 (00-08)	PHM	●	●	●	●
2006	V70 (00-08)	DIM	●	●	●	●
2006	V70 (00-08)	CPM	●	○	○	●
2006	V70 (00-08)	UEM	●	●	●	●
2006	V70 (00-08)	CEM	●	●	●	●
2006	V70 (00-08)	CCM	●	●	●	●
2006	V70 (00-08)	RTI	●	●	●	○
2006	V70 (00-08)	SAS	●	●	●	●
2009	V70 (08-)	DEM	●	●	●	●
2009	V70 (08-)	DEM	●	●	●	●
2009	V70 (08-)	TCM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●
2009	V70 (08-)	TCM	●	●	●	●
2009	V70 (08-)	TCM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●
2009	V70 (08-)	TCM	●	●	●	●
2009	V70 (08-)	TCM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	V70 (08-)	TCM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●
2009	V70 (08-)	TCM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●
2009	V70 (08-)	TCM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●
2009	V70 (08-)	ECM	●	●	●	●
2009	V70 (08-)	POT	●	●	●	○
2009	V70 (08-)	SUM	●	●	●	●
2009	V70 (08-)	IAM	●	●	●	○
2009	V70 (08-)	PSM	●	●	●	●
2009	V70 (08-)	HLDF	●	●	●	●
2009	V70 (08-)	AUU	●	●	●	●
2009	V70 (08-)	DDM	●	●	●	●
2009	V70 (08-)	PDM	●	●	●	●
2009	V70 (08-)	PAM	●	●	●	●
2009	V70 (08-)	KVM	●	●	●	●
2009	V70 (08-)	AUD	●	●	●	○
2009	V70 (08-)	CPM	●	●	●	●
2009	V70 (08-)	SUB	●	●	●	○
2009	V70 (08-)	HCM	●	●	●	●
2009	V70 (08-)	SRS	●	●	●	●
2009	V70 (08-)	BCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	V70 (08-)	SAS	●	●	●	●
2009	V70 (08-)	CCM	●	●	●	●
2009	V70 (08-)	CEM	●	●	●	●
2009	V70 (08-)	TRM	●	●	●	●
2009	V70 (08-)	PBM	●	●	●	●
2009	V70 (08-)	FSM	●	●	●	●
2009	V70 (08-)	DIM	●	●	●	●
2009	V70 (08-)	PAC	●	●	●	●
2009	V70 (08-)	RDAR	●	●	●	○
2009	V70 (08-)	MMM	●	●	●	○
2009	V70 (08-)	ICM	●	●	●	●
2009	V70 (08-)	BPM	●	●	●	●
2009	V70 (08-)	PHM	●	●	●	●
2008	V70 (08-)	DEM	●	●	●	●
2008	V70 (08-)	DEM	●	●	●	●
2008	V70 (08-)	TCM	●	●	●	●
2008	V70 (08-)	ECM	●	●	●	●
2008	V70 (08-)	TCM	●	●	●	●
2008	V70 (08-)	TCM	●	●	●	●
2008	V70 (08-)	ECM	●	●	●	●
2008	V70 (08-)	ECM	●	●	●	●
2008	V70 (08-)	TCM	●	●	●	●
2008	V70 (08-)	TCM	●	●	●	●
2008	V70 (08-)	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	V70 (08-)	TCM	●	●	●	●
2008	V70 (08-)	ECM	●	●	●	●
2008	V70 (08-)	TCM	●	●	●	●
2008	V70 (08-)	ECM	●	●	●	●
2008	V70 (08-)	ECM	●	●	●	●
2008	V70 (08-)	ECM	●	●	●	●
2008	V70 (08-)	POT	●	●	●	○
2008	V70 (08-)	SUM	●	●	●	●
2008	V70 (08-)	IAM	●	●	●	○
2008	V70 (08-)	PSM	●	●	●	●
2008	V70 (08-)	RDAR	●	●	●	○
2008	V70 (08-)	HLDF	●	●	●	●
2008	V70 (08-)	AUU	●	●	●	●
2008	V70 (08-)	DDM	●	●	●	●
2008	V70 (08-)	PDM	●	●	●	●
2008	V70 (08-)	PAM	●	●	●	●
2008	V70 (08-)	KVM	●	●	●	●
2008	V70 (08-)	AUD	●	●	●	○
2008	V70 (08-)	PHM	●	●	●	●
2008	V70 (08-)	CPM	●	●	●	●
2008	V70 (08-)	SUB	●	●	●	○
2008	V70 (08-)	HCM	●	●	●	●
2008	V70 (08-)	SRS	●	●	●	●
2008	V70 (08-)	BCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	V70 (08-)	SAS	●	●	●	●
2008	V70 (08-)	CEM	●	●	●	●
2008	V70 (08-)	DIM	●	●	●	●
2008	V70 (08-)	CCM	●	●	●	●
2008	V70 (08-)	TRM	●	●	●	●
2008	V70 (08-)	PBM	●	●	●	●
2008	V70 (08-)	BPM	●	●	●	●
2008	V70 (08-)	MMM	●	●	●	○
2008	V70 (08-)	FSM	●	●	●	●
2008	V70 (08-)	ICM	●	●	●	●
2008	V70 (08-)	PAC	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	DEM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	DEM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	DEM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	TCM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	ECM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	ECM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	DEM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	TCM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	PHM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	AUM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	BCM	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	SRS	●	●	●	●
2007	V70 XC (01-)/XC70 (-07)	PSM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	V70 XC(01-)/XC70(-07)	DDM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	PDM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	SUM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	AEM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	REM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	CPM	●	○	○	●
2007	V70 XC(01-)/XC70(-07)	CEM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	HCM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	CCM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	RTI	●	●	●	○
2007	V70 XC(01-)/XC70(-07)	SAS	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	DIM	●	●	●	●
2007	V70 XC(01-)/XC70(-07)	UEM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	TCM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	DEM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	DEM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	DEM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	ECM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	ECM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	ECM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	ECM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	TCM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	TCM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	DEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	V70 XC(01-)/XC70(-07)	REM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	AUM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	BCM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	SRS	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	PSM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	DDM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	PDM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	SUM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	AEM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	PHM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	DIM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	CPM	●	○	○	●
2006	V70 XC(01-)/XC70(-07)	UEM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	CEM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	CCM	●	●	●	●
2006	V70 XC(01-)/XC70(-07)	RTI	●	●	●	○
2006	V70 XC(01-)/XC70(-07)	SAS	●	●	●	●
2000	V70 XC(-00)	Petrol	●	●	●	●
2000	V70 XC(-00)	Combined instrument	●	●	●	●
2000	V70 XC(-00)	Lock and alarm	●	●	●	●
2000	V70 XC(-00)	RTI	●	●	●	●
2000	V70 XC(-00)	TCM	●	●	●	●
2000	V70 XC(-00)	ABS/BCM	●	●	●	●
2000	V70 XC(-00)	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2000	V70 XC(-00)	CPM	●	●	●	●
2000	V70 XC(-00)	Power seat module, left	●	●	●	●
2000	V70 XC(-00)	Power seat module, Right	●	●	●	●
2000	V70 XC(-00)	SRS	●	●	●	●
1999	V70 XC(-00)	Petrol	●	●	●	●
1999	V70 XC(-00)	Petrol	●	●	●	●
1999	V70 XC(-00)	Combined instrument	●	●	●	●
1999	V70 XC(-00)	Lock and alarm	●	●	●	●
1999	V70 XC(-00)	RTI	●	●	●	●
1999	V70 XC(-00)	TCM	●	●	●	●
1999	V70 XC(-00)	ABS/BCM	●	●	●	●
1999	V70 XC(-00)	CCM	●	●	●	●
1999	V70 XC(-00)	CPM	●	●	●	●
1999	V70 XC(-00)	Power seat module, left	●	●	●	●
1999	V70 XC(-00)	Power seat module, Right	●	●	●	●
1999	V70 XC(-00)	SRS	●	●	●	●
2005	V70 XC(01-)/XC70	Petrol	●	●	●	●
2005	V70 XC(01-)/XC70	Petrol	●	●	●	●
2005	V70 XC(01-)/XC70	Diesel	●	●	●	●
2005	V70 XC(01-)/XC70	AEM	●	●	●	●
2005	V70 XC(01-)/XC70	AUM	●	●	●	●
2005	V70 XC(01-)/XC70	CEM	●	●	●	●
2005	V70 XC(01-)/XC70	DIM	●	●	●	●
2005	V70 XC(01-)/XC70	PHM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	V70 XC(01-)/XC70	REM	●	●	●	●
2005	V70 XC(01-)/XC70	RTI	●	●	●	○
2005	V70 XC(01-)/XC70	UEM	●	●	●	●
2005	V70 XC(01-)/XC70	TCM	●	●	●	●
2005	V70 XC(01-)/XC70	DEM	●	●	●	●
2005	V70 XC(01-)/XC70	DEM	●	●	●	●
2005	V70 XC(01-)/XC70	ABS/BCM	●	●	●	●
2005	V70 XC(01-)/XC70	SAS	●	●	●	●
2005	V70 XC(01-)/XC70	SUM	●	●	●	●
2005	V70 XC(01-)/XC70	CCM	●	●	●	●
2005	V70 XC(01-)/XC70	DDM	●	●	●	●
2005	V70 XC(01-)/XC70	PDM	●	●	●	●
2005	V70 XC(01-)/XC70	PSM	●	●	●	●
2005	V70 XC(01-)/XC70	SRS	●	●	●	●
2004	V70 XC(01-)/XC70	Petrol	●	●	●	●
2004	V70 XC(01-)/XC70	Petrol	●	●	●	●
2004	V70 XC(01-)/XC70	Diesel	●	●	●	●
2004	V70 XC(01-)/XC70	AEM	●	●	●	●
2004	V70 XC(01-)/XC70	AUM	●	●	●	●
2004	V70 XC(01-)/XC70	CEM	●	●	●	●
2004	V70 XC(01-)/XC70	DIM	●	●	●	●
2004	V70 XC(01-)/XC70	PHM	●	●	●	●
2004	V70 XC(01-)/XC70	REM	●	●	●	●
2004	V70 XC(01-)/XC70	RTI	●	●	●	○



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2004	V70 XC(01-)/XC70	SWM	●	●	●	●
2004	V70 XC(01-)/XC70	UEM	●	●	●	●
2004	V70 XC(01-)/XC70	TCM	●	●	●	●
2004	V70 XC(01-)/XC70	DEM	●	●	●	●
2004	V70 XC(01-)/XC70	DEM	●	●	●	●
2004	V70 XC(01-)/XC70	ABS/BCM	●	●	●	●
2004	V70 XC(01-)/XC70	SAS	●	●	●	●
2004	V70 XC(01-)/XC70	CCM	●	●	●	●
2004	V70 XC(01-)/XC70	DDM	●	●	●	●
2004	V70 XC(01-)/XC70	PDM	●	●	●	●
2004	V70 XC(01-)/XC70	PSM	●	●	●	●
2004	V70 XC(01-)/XC70	SRS	●	●	●	●
2003	V70 XC(01-)/XC70	Petrol	●	●	●	●
2003	V70 XC(01-)/XC70	Petrol	●	●	●	●
2003	V70 XC(01-)/XC70	Diesel	●	●	●	●
2003	V70 XC(01-)/XC70	AEM	●	●	●	●
2003	V70 XC(01-)/XC70	AUM	●	●	●	●
2003	V70 XC(01-)/XC70	CEM	●	●	●	●
2003	V70 XC(01-)/XC70	DIM	●	●	●	●
2003	V70 XC(01-)/XC70	PHM	●	●	●	●
2003	V70 XC(01-)/XC70	REM	●	●	●	●
2003	V70 XC(01-)/XC70	RTI	●	●	●	○
2003	V70 XC(01-)/XC70	SWM	●	●	●	●
2003	V70 XC(01-)/XC70	UEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2003	V70 XC(01-)/XC70	TCM	●	●	●	●
2003	V70 XC(01-)/XC70	DEM	●	●	●	●
2003	V70 XC(01-)/XC70	ABS/BCM	●	●	●	●
2003	V70 XC(01-)/XC70	SAS	●	●	●	●
2003	V70 XC(01-)/XC70	CCM	●	●	●	●
2003	V70 XC(01-)/XC70	DDM	●	●	●	●
2003	V70 XC(01-)/XC70	PDM	●	●	●	●
2003	V70 XC(01-)/XC70	PSM	●	●	●	●
2003	V70 XC(01-)/XC70	SRS	●	●	●	●
2002	V70 XC(01-)/XC70	Petrol	●	●	●	●
2002	V70 XC(01-)/XC70	Petrol	●	●	●	●
2002	V70 XC(01-)/XC70	AEM	●	●	●	●
2002	V70 XC(01-)/XC70	AUM	●	●	●	●
2002	V70 XC(01-)/XC70	CEM	●	●	●	●
2002	V70 XC(01-)/XC70	DIM	●	●	●	●
2002	V70 XC(01-)/XC70	PHM	●	●	●	●
2002	V70 XC(01-)/XC70	REM	●	●	●	●
2002	V70 XC(01-)/XC70	RTI	●	●	●	○
2002	V70 XC(01-)/XC70	SWM	●	●	●	●
2002	V70 XC(01-)/XC70	UEM	●	●	●	●
2002	V70 XC(01-)/XC70	TCM	●	●	●	●
2002	V70 XC(01-)/XC70	ABS/BCM	●	●	●	●
2002	V70 XC(01-)/XC70	SAS	●	●	●	●
2002	V70 XC(01-)/XC70	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2002	V70 XC(01-)/XC70	DDM	●	●	●	●
2002	V70 XC(01-)/XC70	PDM	●	●	●	●
2002	V70 XC(01-)/XC70	PSM	●	●	●	●
2002	V70 XC(01-)/XC70	SRS	●	●	●	●
2001	V70 XC(01-)/XC70	Petrol	●	●	●	●
2001	V70 XC(01-)/XC70	Petrol	●	●	●	●
2001	V70 XC(01-)/XC70	AEM	●	●	●	●
2001	V70 XC(01-)/XC70	AUM	●	●	●	○
2001	V70 XC(01-)/XC70	CEM	●	●	●	●
2001	V70 XC(01-)/XC70	DIM	●	●	●	●
2001	V70 XC(01-)/XC70	PHM	●	●	●	●
2001	V70 XC(01-)/XC70	REM	●	●	●	●
2001	V70 XC(01-)/XC70	RTI	●	●	●	○
2001	V70 XC(01-)/XC70	SWM	●	●	●	●
2001	V70 XC(01-)/XC70	UEM	●	●	●	●
2001	V70 XC(01-)/XC70	TCM	●	●	●	●
2001	V70 XC(01-)/XC70	ABS/BCM	●	●	●	●
2001	V70 XC(01-)/XC70	SAS	●	●	●	●
2001	V70 XC(01-)/XC70	CCM	●	●	●	●
2001	V70 XC(01-)/XC70	DDM	●	●	●	●
2001	V70 XC(01-)/XC70	PDM	●	●	●	●
2001	V70 XC(01-)/XC70	PSM	●	●	●	●
2001	V70 XC(01-)/XC70	SRS	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Petrol	●	●	●	●
2000	V70(-00)	Diesel	●	○	○	●
2000	V70(-00)	Combined instrument	●	●	●	●
2000	V70(-00)	Lock and alarm	●	●	●	●
2000	V70(-00)	RTI	●	●	●	●
2000	V70(-00)	TCM	●	●	●	●
2000	V70(-00)	TCM	●	●	●	●
2000	V70(-00)	TCM	●	●	●	●
2000	V70(-00)	TCM	●	●	●	●
2000	V70(-00)	ABS/BCM	●	●	●	●
2000	V70(-00)	CCM	●	●	●	●
2000	V70(-00)	CPM	●	●	●	●
2000	V70(-00)	Power seat module, left	●	●	●	●
2000	V70(-00)	Power seat module, right	●	●	●	●
2000	V70(-00)	SRS	●	●	●	●
1999	V70(-00)	Petrol	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	V70 (00-)	Petrol	●	●	●	●
2005	V70 (00-)	Petrol	●	●	●	●
2005	V70 (00-)	Petrol	●	●	●	●
2005	V70 (00-)	Petrol	●	●	●	●
2005	V70 (00-)	Diesel	●	●	●	●
2005	V70 (00-)	Diesel	●	●	●	●
2005	V70 (00-)	Diesel	●	●	●	●
2005	V70 (00-)	AEM	●	●	●	●
2005	V70 (00-)	AUM	●	●	●	●
2005	V70 (00-)	CEM	●	●	●	●
2005	V70 (00-)	DIM	●	●	●	●
2005	V70 (00-)	PHM	●	●	●	●
2005	V70 (00-)	REM	●	●	●	●
2005	V70 (00-)	RTI	●	●	●	○
2005	V70 (00-)	UEM	●	●	●	●
2005	V70 (00-)	TCM	●	●	●	●
2005	V70 (00-)	TCM	●	●	●	●
2005	V70 (00-)	DEM	●	●	●	●
2005	V70 (00-)	DEM	●	●	●	●
2005	V70 (00-)	ABS/BCM	●	●	●	●
2005	V70 (00-)	SAS	●	●	●	●
2005	V70 (00-)	SUM	●	●	●	●
2005	V70 (00-)	CCM	●	●	●	●
2005	V70 (00-)	DDM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	V70 (00-)	PDM	●	●	●	●
2005	V70 (00-)	PSM	●	●	●	●
2005	V70 (00-)	SRS	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Petrol	●	●	●	●
2004	V70 (00-)	Diesel	●	●	●	●
2004	V70 (00-)	Diesel	●	●	●	●
2004	V70 (00-)	AEM	●	●	●	●
2004	V70 (00-)	AUM	●	●	●	●
2004	V70 (00-)	CEM	●	●	●	●
2004	V70 (00-)	DIM	●	●	●	●
2004	V70 (00-)	PHM	●	●	●	●
2004	V70 (00-)	REM	●	●	●	●
2004	V70 (00-)	RTI	●	●	●	○
2004	V70 (00-)	SWM	●	●	●	●
2004	V70 (00-)	UEM	●	●	●	●
2004	V70 (00-)	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2004	V70 (00-)	TCM	●	●	●	●
2004	V70 (00-)	ABS/BCM	●	●	●	●
2004	V70 (00-)	SAS	●	●	●	●
2004	V70 (00-)	SUM	●	●	●	●
2004	V70 (00-)	CCM	●	●	●	●
2004	V70 (00-)	DDM	●	●	●	●
2004	V70 (00-)	PDM	●	●	●	●
2004	V70 (00-)	PSM	●	●	●	●
2004	V70 (00-)	SRS	●	●	●	●
2004	V70 (00-)	DEM	●	●	●	●
2004	V70 (00-)	DEM	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Petrol	●	●	●	●
2003	V70 (00-)	Diesel	●	●	●	●
2003	V70 (00-)	Diesel	●	●	●	●
2003	V70 (00-)	AEM	●	●	●	●
2003	V70 (00-)	AUM	●	●	●	●





YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2002	V70 (00-)	Petrol	●	●	●	●
2002	V70 (00-)	Diesel	●	●	●	●
2002	V70 (00-)	Diesel	●	●	●	●
2002	V70 (00-)	AEM	●	●	●	●
2002	V70 (00-)	AUM	●	●	●	●
2002	V70 (00-)	CEM	●	●	●	●
2002	V70 (00-)	DIM	●	●	●	●
2002	V70 (00-)	PHM	●	●	●	●
2002	V70 (00-)	REM	●	●	●	●
2002	V70 (00-)	RTI	●	●	●	○
2002	V70 (00-)	SWM	●	●	●	●
2002	V70 (00-)	UEM	●	●	●	●
2002	V70 (00-)	TCM	●	●	●	●
2002	V70 (00-)	TCM	●	●	●	●
2002	V70 (00-)	ABS/BCM	●	●	●	●
2002	V70 (00-)	SAS	●	●	●	●
2002	V70 (00-)	CCM	●	●	●	●
2002	V70 (00-)	DDM	●	●	●	●
2002	V70 (00-)	PDM	●	●	●	●
2002	V70 (00-)	PSM	●	●	●	●
2002	V70 (00-)	SRS	●	●	●	●
2001	V70 (00-)	Petrol	●	●	●	●
2001	V70 (00-)	Petrol	●	●	●	●
2001	V70 (00-)	Petrol	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2001	V70 (00-)	Petrol	●	●	●	●
2001	V70 (00-)	Petrol	●	●	●	●
2001	V70 (00-)	Petrol	●	●	●	●
2001	V70 (00-)	Petrol	●	●	●	●
2001	V70 (00-)	Diesel	●	●	●	●
2001	V70 (00-)	Diesel	●	○	○	●
2001	V70 (00-)	AEM	●	●	●	●
2001	V70 (00-)	AUM	●	●	●	●
2001	V70 (00-)	CEM	●	●	●	●
2001	V70 (00-)	DIM	●	●	●	●
2001	V70 (00-)	PHM	●	●	●	●
2001	V70 (00-)	REM	●	●	●	●
2001	V70 (00-)	RTI	●	●	●	○
2001	V70 (00-)	SWM	●	●	●	●
2001	V70 (00-)	UEM	●	●	●	●
2001	V70 (00-)	TCM	●	●	●	●
2001	V70 (00-)	TCM	●	●	●	●
2001	V70 (00-)	ABS/BCM	●	●	●	●
2001	V70 (00-)	SAS	●	●	●	●
2001	V70 (00-)	CCM	●	●	●	●
2001	V70 (00-)	DDM	●	●	●	●
2001	V70 (00-)	PDM	●	●	●	●
2001	V70 (00-)	PSM	●	●	●	●
2001	V70 (00-)	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2000	V70 (00-)	Petrol	●	●	●	●
2000	V70 (00-)	Petrol	●	●	●	●
2000	V70 (00-)	Petrol	●	●	●	●
2000	V70 (00-)	Diesel	●	○	○	●
2000	V70 (00-)	AUM	●	●	●	●
2000	V70 (00-)	CEM	●	●	●	●
2000	V70 (00-)	DIM	●	●	●	●
2000	V70 (00-)	PHM	●	●	●	○
2000	V70 (00-)	REM	●	●	●	●
2000	V70 (00-)	RTI	●	●	●	○
2000	V70 (00-)	SWM	●	●	●	●
2000	V70 (00-)	UEM	●	●	●	●
2000	V70 (00-)	TCM	●	●	●	●
2000	V70 (00-)	TCM	●	●	●	●
2000	V70 (00-)	ABS/BCM	●	●	●	●
2000	V70 (00-)	SAS	●	●	●	●
2000	V70 (00-)	CCM	●	●	●	●
2000	V70 (00-)	DDM	●	●	●	●
2000	V70 (00-)	PDM	●	●	●	●
2000	V70 (00-)	PSM	●	●	●	●
2000	V70 (00-)	SRS	●	●	●	●
2009	XC60	DEM	●	●	●	●
2009	XC60	DEM	●	●	●	●
2009	XC60	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	XC60	TCM	●	●	●	●
2009	XC60	TCM	●	●	●	●
2009	XC60	SUM	●	●	●	●
2009	XC60	PSM	●	●	●	●
2009	XC60	AUU	●	●	●	●
2009	XC60	DDM	●	●	●	●
2009	XC60	PDM	●	●	●	●
2009	XC60	PAM	●	●	●	●
2009	XC60	KVM	●	●	●	●
2009	XC60	AUD	●	●	●	○
2009	XC60	CPM	●	●	●	●
2009	XC60	SUB	●	●	●	○
2009	XC60	BCM	●	●	●	●
2009	XC60	SAS	●	●	●	●
2009	XC60	TRM	●	●	●	●
2009	XC60	PBM	●	●	●	●
2009	XC60	MMM	●	●	●	○
2009	XC60	PHM	●	●	●	●
2009	XC60	ECM	●	●	●	●
2009	XC60	ECM	●	●	●	●
2009	XC60	ECM	●	●	●	●
2009	XC60	CVM	●	●	●	○
2009	XC60	HCM	●	●	●	●
2009	XC60	BPM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	XC60	CEM	●	●	●	●
2009	XC60	CCM	●	●	●	●
2009	XC60	ICM	●	●	●	●
2009	XC60	POT	●	●	●	●
2009	XC60	HLDF	●	●	●	●
2009	XC60	IAM	●	●	●	○
2009	XC60	DIM	●	●	●	●
2009	XC60	DABM	●	●	●	○
2009	XC60	RDAR	●	●	●	●
2009	XC60	SRS	●	●	●	●
2009	XC60	FSM	●	●	●	●
2009	XC60	PAC	●	●	●	●
2009	XC70 (08-)	DEM	●	●	●	●
2009	XC70 (08-)	DEM	●	●	●	●
2009	XC70 (08-)	TCM	●	●	●	●
2009	XC70 (08-)	ECM	●	●	●	●
2009	XC70 (08-)	TCM	●	●	●	●
2009	XC70 (08-)	ECM	●	●	●	●
2009	XC70 (08-)	TCM	●	●	●	●
2009	XC70 (08-)	ECM	●	●	●	●
2009	XC70 (08-)	TCM	●	●	●	●
2009	XC70 (08-)	ECM	●	●	●	●
2009	XC70 (08-)	POT	●	●	●	○
2009	XC70 (08-)	SUM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	XC70 (08-)	IAM	●	●	●	○
2009	XC70 (08-)	PSM	●	●	●	●
2009	XC70 (08-)	HLDF	●	●	●	●
2009	XC70 (08-)	AUU	●	●	●	●
2009	XC70 (08-)	DDM	●	●	●	●
2009	XC70 (08-)	PDM	●	●	●	●
2009	XC70 (08-)	PAM	●	●	●	●
2009	XC70 (08-)	KVM	●	●	●	●
2009	XC70 (08-)	AUD	●	●	●	○
2009	XC70 (08-)	CPM	●	●	●	●
2009	XC70 (08-)	SUB	●	●	●	○
2009	XC70 (08-)	HCM	●	●	●	●
2009	XC70 (08-)	SRS	●	●	●	●
2009	XC70 (08-)	BCM	●	●	●	●
2009	XC70 (08-)	SAS	●	●	●	●
2009	XC70 (08-)	CCM	●	●	●	●
2009	XC70 (08-)	CEM	●	●	●	●
2009	XC70 (08-)	TRM	●	●	●	●
2009	XC70 (08-)	PBM	●	●	●	●
2009	XC70 (08-)	FSM	●	●	●	●
2009	XC70 (08-)	DIM	●	●	●	●
2009	XC70 (08-)	PAC	●	●	●	●
2009	XC70 (08-)	RDAR	●	●	●	○
2009	XC70 (08-)	MMM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	XC70 (08-)	ICM	●	●	●	●
2009	XC70 (08-)	BPM	●	●	●	●
2009	XC70 (08-)	PHM	●	●	●	●
2008	XC70 (08-)	DEM	●	●	●	●
2008	XC70 (08-)	DEM	●	●	●	●
2008	XC70 (08-)	TCM	●	●	●	●
2008	XC70 (08-)	ECM	●	●	●	●
2008	XC70 (08-)	TCM	●	●	●	●
2008	XC70 (08-)	ECM	●	●	●	●
2008	XC70 (08-)	TCM	●	●	●	●
2008	XC70 (08-)	ECM	●	●	●	●
2008	XC70 (08-)	POT	●	●	●	○
2008	XC70 (08-)	SUM	●	●	●	●
2008	XC70 (08-)	IAM	●	●	●	○
2008	XC70 (08-)	PSM	●	●	●	●
2008	XC70 (08-)	RDAR	●	●	●	○
2008	XC70 (08-)	HLDF	●	●	●	●
2008	XC70 (08-)	AUU	●	●	●	●
2008	XC70 (08-)	DDM	●	●	●	●
2008	XC70 (08-)	PDM	●	●	●	●
2008	XC70 (08-)	PAM	●	●	●	●
2008	XC70 (08-)	KVM	●	●	●	●
2008	XC70 (08-)	AUD	●	●	●	○
2008	XC70 (08-)	PHM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	XC70 (08-)	CPM	●	●	●	●
2008	XC70 (08-)	SUB	●	●	●	○
2008	XC70 (08-)	HCM	●	●	●	●
2008	XC70 (08-)	SRS	●	●	●	●
2008	XC70 (08-)	BCM	●	●	●	●
2008	XC70 (08-)	SAS	●	●	●	●
2008	XC70 (08-)	CEM	●	●	●	●
2008	XC70 (08-)	DIM	●	●	●	●
2008	XC70 (08-)	CCM	●	●	●	●
2008	XC70 (08-)	TRM	●	●	●	●
2008	XC70 (08-)	PBM	●	●	●	●
2008	XC70 (08-)	BPM	●	●	●	●
2008	XC70 (08-)	MMM	●	●	●	○
2008	XC70 (08-)	FSM	●	●	●	●
2008	XC70 (08-)	ICM	●	●	●	●
2008	XC70 (08-)	PAC	●	●	●	●
2005	XC90	AEM	●	●	●	●
2005	XC90	ATM	●	●	●	●
2005	XC90	AUD	●	●	●	○
2005	XC90	MP2	●	●	●	●
2005	XC90	CEM	●	●	●	●
2005	XC90	DIM	●	●	●	●
2005	XC90	ICM	●	●	●	●
2005	XC90	MP1	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	XC90	MMM	●	●	●	○
2005	XC90	PHM	●	●	●	●
2005	XC90	REM	●	●	●	●
2005	XC90	SAS	●	●	●	●
2005	XC90	SAS	●	●	●	●
2005	XC90	CCM	●	●	●	●
2005	XC90	DDM	●	●	●	●
2005	XC90	PDM	●	●	●	●
2005	XC90	PSM	●	●	●	●
2004	XC90	Petrol	●	●	●	●
2004	XC90	Petrol	●	●	●	●
2004	XC90	Diesel	●	●	●	●
2004	XC90	AEM	●	●	●	●
2004	XC90	ATM	●	●	●	●
2004	XC90	AUD	●	●	●	○
2004	XC90	MP2	●	●	●	●
2004	XC90	CEM	●	●	●	●
2004	XC90	DIM	●	●	●	●
2004	XC90	ICM	●	●	●	●
2004	XC90	MP1	●	●	●	●
2004	XC90	MMM	●	●	●	○
2004	XC90	PHM	●	●	●	○
2004	XC90	REM	●	●	●	●
2004	XC90	SWM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2004	XC90	SUB	●	●	●	○
2004	XC90	UEM	●	●	●	●
2004	XC90	TCM	●	●	●	●
2004	XC90	TCM	●	●	●	●
2004	XC90	DEM	●	●	●	●
2004	XC90	ABS/BCM	●	●	●	●
2004	XC90	SAS	●	●	●	●
2004	XC90	CCM	●	●	●	●
2004	XC90	DDM	●	●	●	●
2004	XC90	PDM	●	●	●	●
2004	XC90	PSM	●	●	●	●
2004	XC90	SRS	●	●	●	●
2003	XC90	Petrol	●	●	●	●
2003	XC90	Petrol	●	●	●	●
2003	XC90	Diesel	●	●	●	●
2003	XC90	AEM	●	●	●	●
2003	XC90	ATM	●	●	●	●
2003	XC90	AUD	●	●	●	○
2003	XC90	MP2	●	●	●	●
2003	XC90	CEM	●	●	●	●
2003	XC90	DIM	●	●	●	●
2003	XC90	ICM	●	●	●	●
2003	XC90	MP1	●	●	●	●
2003	XC90	MMM	●	●	●	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2003	XC90	PHM	●	●	●	●
2003	XC90	REM	●	●	●	●
2003	XC90	SWM	●	●	●	●
2003	XC90	SUB	●	●	●	○
2003	XC90	UEM	●	●	●	●
2003	XC90	TCM	●	●	●	●
2003	XC90	TCM	●	●	●	●
2003	XC90	ABS/BCM	●	●	●	●
2003	XC90	SAS	●	●	●	●
2003	XC90	CCM	●	●	●	●
2003	XC90	DDM	●	●	●	●
2003	XC90	PDM	●	●	●	●
2003	XC90	PSM	●	●	●	●
2003	XC90	SRS	●	●	●	●
2003	XC90	DEM	●	●	●	●
2009	XC90	TCM	●	●	●	●
2009	XC90	DEM	●	●	●	●
2009	XC90	DEM	●	●	●	●
2009	XC90	BCM	●	●	●	●
2009	XC90	SAS	●	●	●	●
2009	XC90	HCM	●	●	●	●
2009	XC90	ECM	●	●	●	●
2009	XC90	CEM	●	●	●	●
2009	XC90	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	XC90	DEM	●	●	●	●
2009	XC90	DEM	●	●	●	●
2009	XC90	BCM	●	●	●	●
2009	XC90	SAS	●	●	●	●
2009	XC90	HCM	●	●	●	●
2009	XC90	CEM	●	●	●	●
2009	XC90	ECM	●	●	●	●
2009	XC90	TCM	●	●	●	●
2009	XC90	DEM	●	●	●	●
2009	XC90	BCM	●	●	●	●
2009	XC90	ECM	●	●	●	●
2009	XC90	SAS	●	●	●	●
2009	XC90	HCM	●	●	●	●
2009	XC90	CEM	●	●	●	●
2009	XC90	TCM	●	●	●	●
2009	XC90	DEM	●	●	●	●
2009	XC90	BCM	●	●	●	●
2009	XC90	SAS	●	●	●	●
2009	XC90	HCM	●	●	●	●
2009	XC90	ECM	●	●	●	●
2009	XC90	CEM	●	●	●	●
2009	XC90	DEM	●	●	●	●
2009	XC90	TCM	●	●	●	●
2009	XC90	BCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2009	XC90	SAS	●	●	●	●
2009	XC90	ECM	●	●	●	●
2009	XC90	HCM	●	●	●	●
2009	XC90	CEM	●	●	●	●
2009	XC90	GPS	●	●	●	●
2009	XC90	SRS	●	●	●	●
2009	XC90	PSM	●	●	●	●
2009	XC90	DDM	●	●	●	●
2009	XC90	PDM	●	●	●	●
2009	XC90	AEM	●	●	●	●
2009	XC90	REM	●	●	●	●
2009	XC90	CPM	●	○	○	●
2009	XC90	RDAR	●	●	●	●
2009	XC90	AUD	●	●	●	○
2009	XC90	PAC	●	○	○	○
2009	XC90	AUU	●	●	●	●
2009	XC90	CCM	●	●	●	●
2009	XC90	DIM	●	●	●	●
2009	XC90	UEM	●	●	●	●
2009	XC90	IAM	●	●	●	●
2009	XC90	ICM	●	●	●	●
2009	XC90	MMM	●	●	●	○
2009	XC90	PHM	●	●	●	●
2009	XC90	TCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	XC90	TCM	●	●	●	●
2008	XC90	DEM	●	●	●	●
2008	XC90	DEM	●	●	●	●
2008	XC90	BCM	●	●	●	●
2008	XC90	CEM	●	●	●	●
2008	XC90	HCM	●	●	●	●
2008	XC90	SAS	●	●	●	●
2008	XC90	ECM	●	●	●	●
2008	XC90	TCM	●	●	●	●
2008	XC90	DEM	●	●	●	●
2008	XC90	DEM	●	●	●	●
2008	XC90	BCM	●	●	●	●
2008	XC90	CEM	●	●	●	●
2008	XC90	HCM	●	●	●	●
2008	XC90	SAS	●	●	●	●
2008	XC90	ECM	●	●	●	●
2008	XC90	TCM	●	●	●	●
2008	XC90	DEM	●	●	●	●
2008	XC90	BCM	●	●	●	●
2008	XC90	ECM	●	●	●	●
2008	XC90	SAS	●	●	●	●
2008	XC90	CEM	●	●	●	●
2008	XC90	HCM	●	●	●	●
2008	XC90	DEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	XC90	TCM	●	●	●	●
2008	XC90	BCM	●	●	●	●
2008	XC90	SAS	●	●	●	●
2008	XC90	CEM	●	●	●	●
2008	XC90	HCM	●	●	●	●
2008	XC90	ECM	●	●	●	●
2008	XC90	DEM	●	●	●	●
2008	XC90	TCM	●	●	●	●
2008	XC90	BCM	●	●	●	●
2008	XC90	CEM	●	●	●	●
2008	XC90	HCM	●	●	●	●
2008	XC90	SAS	●	●	●	●
2008	XC90	ECM	●	●	●	●
2008	XC90	GPS	●	●	●	●
2008	XC90	SRS	●	●	●	●
2008	XC90	PSM	●	●	●	●
2008	XC90	DDM	●	●	●	●
2008	XC90	PDM	●	●	●	●
2008	XC90	AEM	●	●	●	●
2008	XC90	REM	●	●	●	●
2008	XC90	CPM	●	○	○	●
2008	XC90	RDAR	●	●	●	●
2008	XC90	IAM	●	●	●	●
2008	XC90	AUD	●	●	●	○



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2008	XC90	PAC	●	○	○	○
2008	XC90	AUU	●	●	●	●
2008	XC90	PHM	●	●	●	●
2008	XC90	CCM	●	●	●	●
2008	XC90	DIM	●	●	●	●
2008	XC90	UEM	●	●	●	●
2008	XC90	ICM	●	●	●	●
2008	XC90	MMM	●	●	●	○
2008	XC90	TCM	●	●	●	●
2007	XC90	TCM	●	●	●	●
2007	XC90	DEM	●	●	●	●
2007	XC90	DEM	●	●	●	●
2007	XC90	BCM	●	●	●	●
2007	XC90	CEM	●	●	●	●
2007	XC90	HCM	●	●	●	●
2007	XC90	SAS	●	●	●	●
2007	XC90	ECM	●	●	●	●
2007	XC90	TCM	●	●	●	●
2007	XC90	DEM	●	●	●	●
2007	XC90	BCM	●	●	●	●
2007	XC90	SAS	●	●	●	●
2007	XC90	CEM	●	●	●	●
2007	XC90	HCM	●	●	●	●
2007	XC90	ECM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	XC90	DEM	●	●	●	●
2007	XC90	TCM	●	●	●	●
2007	XC90	BCM	●	●	●	●
2007	XC90	SAS	●	●	●	●
2007	XC90	CEM	●	●	●	●
2007	XC90	HCM	●	●	●	●
2007	XC90	ECM	●	●	●	●
2007	XC90	DEM	●	●	●	●
2007	XC90	TCM	●	●	●	●
2007	XC90	DEM	●	●	●	●
2007	XC90	TCM	●	●	●	●
2007	XC90	BCM	●	●	●	●
2007	XC90	CEM	●	●	●	●
2007	XC90	HCM	●	●	●	●
2007	XC90	SAS	●	●	●	●
2007	XC90	ECM	●	●	●	●
2007	XC90	GPS	●	●	●	●
2007	XC90	SRS	●	●	●	●
2007	XC90	PSM	●	●	●	●
2007	XC90	DDM	●	●	●	●
2007	XC90	PDM	●	●	●	●
2007	XC90	AEM	●	●	●	●
2007	XC90	PHM	●	●	●	●
2007	XC90	REM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2007	XC90	CPM	●	○	○	●
2007	XC90	RDAR	●	●	●	●
2007	XC90	CCM	●	●	●	●
2007	XC90	IAM	●	●	●	●
2007	XC90	AUD	●	●	●	○
2007	XC90	PAC	●	○	○	○
2007	XC90	MMM	●	●	●	○
2007	XC90	AUU	●	●	●	●
2007	XC90	DIM	●	●	●	●
2007	XC90	UEM	●	●	●	●
2007	XC90	ICM	●	●	●	●
2007	XC90	TCM	●	●	●	●
2006	XC90	TCM	●	●	●	●
2006	XC90	DEM	●	●	●	●
2006	XC90	DEM	●	●	●	●
2006	XC90	BCM	●	●	●	●
2006	XC90	CEM	●	●	●	●
2006	XC90	SAS	●	●	●	●
2006	XC90	ECM	●	●	●	●
2006	XC90	TCM	●	●	●	●
2006	XC90	DEM	●	●	●	●
2006	XC90	ECM	●	●	●	●
2006	XC90	BCM	●	●	●	●
2006	XC90	CEM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	XC90	SAS	●	●	●	●
2006	XC90	TCM	●	●	●	●
2006	XC90	DEM	●	●	●	●
2006	XC90	BCM	●	●	●	●
2006	XC90	SAS	●	●	●	●
2006	XC90	CEM	●	●	●	●
2006	XC90	ECM	●	●	●	●
2006	XC90	TCM	●	●	●	●
2006	XC90	DEM	●	●	●	●
2006	XC90	BCM	●	●	●	●
2006	XC90	ECM	●	●	●	●
2006	XC90	CEM	●	●	●	●
2006	XC90	SAS	●	●	●	●
2006	XC90	DEM	●	●	●	●
2006	XC90	TCM	●	●	●	●
2006	XC90	DEM	●	●	●	●
2006	XC90	BCM	●	●	●	●
2006	XC90	CEM	●	●	●	●
2006	XC90	ECM	●	●	●	●
2006	XC90	SAS	●	●	●	●
2006	XC90	MP1	●	●	●	●
2006	XC90	MP2	●	●	●	●
2006	XC90	ATM	●	●	●	●
2006	XC90	REM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2006	XC90	SRS	●	●	●	●
2006	XC90	PSM	●	●	●	●
2006	XC90	DDM	●	●	●	●
2006	XC90	PDM	●	●	●	●
2006	XC90	AEM	●	●	●	●
2006	XC90	AUD	●	●	●	○
2006	XC90	ICM	●	●	●	●
2006	XC90	PHM	●	●	●	●
2006	XC90	DIM	●	●	●	●
2006	XC90	CPM	●	○	○	●
2006	XC90	UEM	●	●	●	●
2006	XC90	CCM	●	●	●	●
2006	XC90	MMM	●	●	●	○
2005	XC90	Petrol	●	●	●	●
2005	XC90	Petrol	●	●	●	●
2005	XC90	Petrol	●	●	●	●
2005	XC90	Diesel	●	●	●	●
2005	XC90	TCM	●	●	●	●
2005	XC90	TCM	●	●	●	●
2005	XC90	DEM	●	●	●	●
2005	XC90	TCM	●	●	●	●
2005	XC90	ABS/BCM	●	●	●	●
2005	XC90	SUB	●	●	●	○
2005	XC90	SRS	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
2005	XC90	UEM	●	●	●	●
1998	V90	ABS/BCM	●	●	●	●
1998	V90	Immobilizer	●	●	●	●
1998	V90	Petrol	●	●	●	●
1998	V90	CI	●	○	○	○
1998	V90	PSL	●	●	●	●
1998	V90	PSR	●	●	●	●
1998	V90	RTI	●	●	●	●
1998	V90	SRS	●	●	●	●
1998	V90	TCM	●	●	●	●
1997	V90	ABS/BCM	●	●	●	●
1997	V90	Immobilizer	●	●	●	●
1997	V90	Petrol	●	●	●	●
1997	V90	CI	●	○	○	○
1997	V90	PSL	●	●	●	●
1997	V90	PSR	●	●	●	●
1997	V90	RTI	●	●	●	●
1997	V90	SRS	●	●	●	●
1997	V90	TCM	●	●	●	●
1998	V70 (-00)	ABS/BCM	●	●	●	●
1998	V70 (-00)	ECM	●	●	●	●
1998	V70 (-00)	Motronic 4.4	●	●	●	●
1998	V70 (-00)	Immobilizer	●	●	●	●
1998	V70 (-00)	CI	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1998	V70(-00)	VGLA	●	●	●	○
1998	V70(-00)	PSL	●	●	●	●
1998	V70(-00)	PSR	●	●	●	●
1998	V70(-00)	CPM	●	●	●	●
1998	V70(-00)	RTI	●	●	●	●
1998	V70(-00)	SRS	●	●	●	●
1998	V70(-00)	TCM	●	●	●	●
1997	V70(-00)	ABS/BCM	●	●	●	●
1997	V70(-00)	ECM	●	●	●	●
1997	V70(-00)	Motronic 4.4	●	●	●	●
1997	V70(-00)	Immobilizer	●	●	●	●
1997	V70(-00)	CI	●	●	●	●
1997	V70(-00)	VGLA	●	●	●	○
1997	V70(-00)	PSL	●	●	●	●
1997	V70(-00)	PSR	●	●	●	●
1997	V70(-00)	CPM	●	●	●	●
1997	V70(-00)	RTI	●	●	●	●
1997	V70(-00)	SRS	●	●	●	●
1997	V70(-00)	TCM	●	●	●	●
1998	V70 XC(-00)	ABS/BCM	●	●	●	●
1998	V70 XC(-00)	CI	●	●	●	●
1998	V70 XC(-00)	VGLA	●	●	●	○
1998	V70 XC(-00)	PSL	●	●	●	●
1998	V70 XC(-00)	PSR	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1998	V70 XC(-00)	Immobilizer	●	●	●	●
1998	V70 XC(-00)	ECM	●	●	●	●
1998	V70 XC(-00)	RTI	●	●	●	●
1998	V70 XC(-00)	SRS	●	●	●	●
1998	V70 XC(-00)	TCM	●	●	●	●
1998	V40	ABS/BCM	●	●	●	●
1998	V40	CI	●	●	●	●
1998	V40	Immobilizer	●	●	●	●
1998	V40	VGLA	●	●	●	●
1998	V40	CPM	●	●	●	●
1998	V40	DSA	●	●	●	●
1998	V40	SRS	●	●	●	●
1998	V40	TCM	●	●	●	●
1998	V40	CCM	●	●	●	●
1998	V40	RTI	●	●	●	●
1997	V40	ABS/BCM	●	●	●	●
1997	V40	CI	●	●	●	●
1997	V40	Immobilizer	●	●	●	●
1997	V40	VGLA	●	●	●	●
1997	V40	CPM	●	●	●	●
1997	V40	DSA	●	●	●	●
1997	V40	SRS	●	●	●	●
1997	V40	TCM	●	●	●	●
1997	V40	CCM	●	●	●	●



YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1997	V40	RTI	●	●	●	●
1996	V40	ABS/BCM	●	●	●	●
1996	V40	CI	●	●	●	●
1996	V40	Immobilizer	●	●	●	●
1996	V40	VGLA	●	●	●	●
1996	V40	CPM	●	●	●	●
1996	V40	DSA	●	●	●	●
1996	V40	SRS	●	●	●	●
1996	V40	TCM	●	●	●	●
1996	V40	CCM	●	●	●	●
1996	V40	RTI	●	●	●	●
1998	S90	ABS/BCM	●	●	●	●
1998	S90	Immobilizer	●	●	●	●
1998	S90	CI	●	○	○	○
1998	S90	PSL	●	●	●	●
1998	S90	PSR	●	●	●	●
1998	S90	Engine 1	●	●	●	●
1998	S90	SRS	●	●	●	●
1998	S90	RTI	●	●	●	●
1998	S90	TCM	●	●	●	●
1997	S90	ABS/BCM	●	●	●	●
1997	S90	Immobilizer	●	●	●	●
1997	S90	CI	●	○	○	○
1997	S90	PSL	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1997	S90	PSR	●	●	●	●
1997	S90	Engine 1	●	●	●	●
1997	S90	SRS	●	●	●	●
1997	S90	RTI	●	●	●	●
1997	S90	TCM	●	●	●	●
1998	S70	ABS/BCM	●	●	●	●
1998	S70	Motronic 4.4	●	●	●	●
1998	S70	ECM	●	●	●	●
1998	S70	Engine 1	●	●	●	●
1998	S70	Immobilizer	●	●	●	●
1998	S70	CI	●	○	○	○
1998	S70	VGLA	●	●	●	○
1998	S70	PSL	●	●	●	●
1998	S70	PSR	●	●	●	●
1998	S70	CPM	●	●	●	●
1998	S70	RTI	●	●	●	●
1998	S70	SRS	●	●	●	●
1998	S70	TCM	●	●	●	●
1997	S70	ABS/BCM	●	●	●	●
1997	S70	Petrol	●	●	●	●
1997	S70	Motronic 4.4	●	●	●	●
1997	S70	ECM	●	●	●	●
1997	S70	Immobilizer	●	●	●	●
1997	S70	CI	●	○	○	○

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1997	S70	VGLA	●	●	●	○
1997	S70	PSL	●	●	●	●
1997	S70	PSR	●	●	●	●
1997	S70	CPM	●	●	●	●
1997	S70	RTI	●	●	●	●
1997	S70	SRS	●	●	●	●
1997	S70	TCM	●	●	●	●
1998	S40(-04)	ABS/BCM	●	●	●	●
1998	S40(-04)	CI	●	●	●	●
1998	S40(-04)	immobilizer	●	●	●	●
1998	S40(-04)	VGLA	●	●	●	●
1998	S40(-04)	CPM	●	●	●	●
1998	S40(-04)	DSA	●	●	●	●
1998	S40(-04)	CCM	●	●	●	●
1998	S40(-04)	RTI	●	●	●	●
1998	S40(-04)	SRS	●	●	●	●
1998	S40(-04)	TCM	●	●	●	●
1997	S40(-04)	ABS/BCM	●	●	●	●
1997	S40(-04)	CI	●	●	●	●
1997	S40(-04)	immobilizer	●	●	●	●
1997	S40(-04)	VGLA	●	●	●	●
1997	S40(-04)	CPM	●	●	●	●
1997	S40(-04)	DSA	●	●	●	●
1997	S40(-04)	CCM	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1997	S40(-04)	RTI	●	●	●	●
1997	S40(-04)	SRS	●	●	●	●
1997	S40(-04)	TCM	●	●	●	●
1996	S40(-04)	ABS/BCM	●	●	●	●
1996	S40(-04)	CI	●	●	●	●
1996	S40(-04)	immobilizer	●	●	●	●
1996	S40(-04)	VGLA	●	●	●	●
1996	S40(-04)	CPM	●	●	●	●
1996	S40(-04)	DSA	●	●	●	●
1996	S40(-04)	CCM	●	●	●	●
1996	S40(-04)	RTI	●	●	●	●
1996	S40(-04)	SRS	●	●	●	●
1996	S40(-04)	TCM	●	●	●	●
1997	960	Petrol	●	●	●	●
1997	960	CI	●	●	●	●
1997	960	immobilizer	●	●	●	●
1997	960	PSL	●	●	●	●
1997	960	PSR	●	●	●	●
1997	960	TCM	●	●	●	●
1997	960	ABS/BCM	●	●	●	●
1997	960	SRS	●	●	●	●
1996	960	Petrol	●	●	●	●
1996	960	CI	●	●	●	●
1996	960	immobilizer	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1996	960	PSL	●	●	●	●
1996	960	PSR	●	●	●	●
1996	960	TCM	●	●	●	●
1996	960	ABS/BCM	●	●	●	●
1996	960	SRS	●	●	●	●
1995	960	Petrol	●	●	●	●
1995	960	CI	●	●	●	●
1995	960	immobilizer	●	●	●	●
1995	960	PSL	●	●	●	●
1995	960	PSR	●	●	●	●
1995	960	TCM	●	●	●	●
1995	960	ABS/BCM	●	●	●	●
1995	960	SRS	●	●	●	●
1997	850	Motronic 4.4	●	●	●	●
1997	850	CI	●	●	●	●
1997	850	immobilizer	●	●	●	●
1997	850	PSL	●	●	●	●
1997	850	PSR	●	●	●	●
1997	850	TCM	●	●	●	●
1997	850	ABS/BCM	●	●	●	●
1997	850	SRS	●	●	●	●
1996	850	CI	●	●	●	●
1996	850	Immobilizer	●	●	●	●
1996	850	PSL	●	●	●	●

YEAR	Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Read Value
1996	850	PSR	●	●	●	●
1996	850	Motronic 4.4	●	●	●	●
1996	850	TCM	●	●	●	●
1996	850	ABS/BCM	●	●	●	●
1996	850	SRS	●	●	●	●
1995	850	CI	●	●	●	●
1995	850	Immobilizer	●	●	●	●
1995	850	PSL	●	●	●	●
1995	850	PSR	●	●	●	●
1995	850	Petrol	●	●	●	●
1995	850	TCM	●	●	●	●
1995	850	ABS/BCM	●	●	●	●
1995	850	SRS	●	●	●	●