

MaxiSys_Ford_V4.11 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--|----------|-----------------|-------------|---------|------------|-------------|-----------|-------------|--|
| (All MY05) Escape/Tribute/Maverick/Mariner | 2.3L | DURATEC-HE / I4 | 2005 | 4X4 | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2.3L | DURATEC-HE / I4 | 2005 | ABS | ● | ● | ● | ● | 0x0008 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2.3L | DURATEC-HE / I4 | 2005 | GEM | ● | ● | ● | ● | 0x000A 0x000F |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2.3L | DURATEC-HE / I4 | 2005 | IC | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2.3L | DURATEC-HE / I4 | 2005 | PAM | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2.3L | DURATEC-HE / I4 | 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2.3L | DURATEC-HE / I4 | 2005 | RCM | ● | ● | ● | ● | 0x000C |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3.0L | 4V | 2005 | 4X4 | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3.0L | 4V | 2005 | ABS | ● | ● | ● | ● | 0x0008 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3.0L | 4V | 2005 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057 0xF058 0xF059 0xF090 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3.0L | 4V | 2005 | IC | ● | ● | ● | ● | 0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053 0xF054 0xF055 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3.0L | 4V | 2005 | PAM | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3.0L | 4V | 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3.0L | 4V | 2005 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| 626 / 626 WAGON / TELSTAR | 1.8L | FP | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0082 0x0083 |
| 626 / 626 WAGON / TELSTAR | 1.8L | FP | 1999 | ABS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 1.8L | FP | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2.0L | FS | 1997 - 1999 | ABS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2.0L | FS | 1997 - 2001 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0023 0x0025 |
| 626 / 626 WAGON / TELSTAR | 2.0L | FS | 1998 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2.0L | RF-T | 1997 - 2000 | PCM | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2.0L | RF-T | 1999 - 2000 | ABS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2.5L | KL | 1997 - 2001 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| 626 / 626 WAGON / TELSTAR | 2.5L | KL | 1998 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| AEROSTAR | 3.0L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| AEROSTAR | 4.0L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Aspire | 1.3L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | ○ |
| Aspire | 1.5L | Other | 1997 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Aviator | 4.6L | 4V | 2003 | VEMS | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | 4X4 | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Aviator | 4.6L | 4V | 2003 - 2005 | DCSM | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | DSM | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | EATC | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | IC | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | NAV | ● | ● | ● | ● | 0x0016 |
| Aviator | 4.6L | 4V | 2003 - 2005 | PAM | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 |
| Aviator | 4.6L | 4V | 2003 - 2005 | PCSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Aviator | 4.6L | 4V | 2003 - 2005 | RCM | ● | ● | ● | ● | 0x000C |
| Aviator | 4.6L | 4V | 2003 - 2005 | TPM | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | VAPS | ● | ● | ● | ● | ○ |
| Aviator | 4.6L | 4V | 2003 - 2005 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | ACM | ● | ● | ● | ○ | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | APIM | ● | ● | ● | ● | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | BCMii | ● | ● | ● | ● | 0x00FE 0x0101 0x0118 0x0207 |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | DDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | FDSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | GPSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | GWM | ● | ● | ● | ○ | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | HVAC | ● | ● | ● | ● | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | IPC | ● | ● | ● | ● | 0x0009 |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114 |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | PDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00DC |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | RCM | ● | ● | ● | ○ | 0x00EF |
| B-Max | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | RFA | ● | ● | ● | ○ | 0x000A |
| B-Max | 1.25L | DURATEC 16V | 2008 | ABS | ● | ● | ● | ● | ○ |
| B-Max | 1.25L | DURATEC 16V | 2008 | ACM | ● | ● | ● | ● | ○ |
| B-Max | 1.25L | DURATEC 16V | 2008 | BCMii | ● | ● | ● | ● | ○ |
| B-Max | 1.25L | DURATEC 16V | 2008 | FCDIM | ● | ● | ● | ● | ○ |
| B-Max | 1.25L | DURATEC 16V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| B-Max | 1.25L | DURATEC 16V | 2008 | IPC | ● | ● | ● | ● | 0x0009 |
| B-Max | 1.25L | DURATEC 16V | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| B-Max | 1.25L | DURATEC 16V | 2008 | PSCM | ● | ● | ● | ● | ○ |
| B-Max | 1.25L | DURATEC 16V | 2008 | RCM | ● | ● | ● | ● | ○ |
| B-Max | 1.25L | DURATEC 16V | 2008 | RFA | ● | ● | ● | ● | ○ |
| B-Max | 1.25L | DURATEC 16V | 2008 | SRM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | DURATEC 16V | 2008 | SRM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | DURATEC 16V | 2008 | TCM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | ABS | ● | ● | ● | ● | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | ACM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | BCMii | ● | ● | ● | ● | 0x00FE 0x0101 0x0118 0x0207 |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | FCDIM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | IPC | ● | ● | ● | ● | 0x0009 |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00BC |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | PSCM | ● | ● | ● | ● | 0x00D7 0x00DC |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | RCM | ● | ● | ● | ● | 0x00EF |
| B-Max | 1.4L | DURATEC 16V | 2008 - 2012 | RFA | ● | ● | ● | ● | 0x000A |
| B-Max | 1.4L | DURATEC 16V | 2012 | APIM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | DURATEC 16V | 2012 | DDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.4L | DURATEC 16V | 2012 | FDSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.4L | DURATEC 16V | 2012 | GPSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.4L | DURATEC 16V | 2012 | GWM | ● | ● | ● | ○ | ○ |
| B-Max | 1.4L | DURATEC 16V | 2012 | PDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ABS | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ACM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | BCMii | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|--------|------------|-------------|-----------|-------------|--|
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | FCDIM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | HVAC | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | IPC | ● | ● | ● | ● | 0x0009 |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PSCM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RCM | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RFA | ● | ● | ● | ● | ○ |
| B-Max | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | SRM | ● | ● | ● | ● | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D7 0x00D9 0x00DB 0x00E8 0x0119 |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | ACM | ● | ● | ● | ○ | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | APIM | ● | ● | ● | ● | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | BCMii | ● | ● | ● | ● | 0x00FE 0x0101 0x0118 0x0207 |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | DDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | FDSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | GPSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | GWM | ● | ● | ● | ○ | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | HVAC | ● | ● | ● | ● | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | IPC | ● | ● | ● | ● | 0x0009 |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00BD |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | PDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | PSCM | ● | ● | ● | ○ | 0x00DC |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | RCM | ● | ● | ● | ○ | 0x00EF |
| B-Max | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | RFA | ● | ● | ● | ○ | 0x000A |
| B-Max | 1.6L | DURATEC VCT | 2008 | SRM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | ABS | ● | ● | ● | ● | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | ACM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | BCMii | ● | ● | ● | ● | 0x00FE 0x0101 0x0118 0x0207 |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | FCDIM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | IPC | ● | ● | ● | ● | 0x0009 |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00BC |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | PSCM | ● | ● | ● | ● | 0x00D7 0x00DC |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | RCM | ● | ● | ● | ● | 0x00EF |
| B-Max | 1.6L | DURATEC VCT | 2008 - 2012 | RFA | ● | ● | ● | ● | 0x000A |
| B-Max | 1.6L | DURATEC VCT | 2012 | APIM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | DURATEC VCT | 2012 | DDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | DURATEC VCT | 2012 | FDSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | DURATEC VCT | 2012 | GPSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | DURATEC VCT | 2012 | GWM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | DURATEC VCT | 2012 | PDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | DURATEC VCT | 2012 | TCM | ● | ● | ● | ● | 0x0117 |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ABS | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ACM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | BCMii | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | FCDIM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | HVAC | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | IPC | ● | ● | ● | ● | 0x0009 |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PSCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|---|--------------|---------|------------|-------------|-----------|-------------|--|
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RCM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RFA | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | SRM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D7 0x00D9 0x00DB 0x00E8 0x0119 |
| B-Max | 1.6L | TDCi ECO II | 2012 | ACM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | APIM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | BCMii | ● | ● | ● | ● | 0x00FE 0x0101 0x0118 0x0207 |
| B-Max | 1.6L | TDCi ECO II | 2012 | DDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | FDSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | GPSM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | GWM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | HVAC | ● | ● | ● | ● | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | IPC | ● | ● | ● | ● | 0x0009 |
| B-Max | 1.6L | TDCi ECO II | 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00BD |
| B-Max | 1.6L | TDCi ECO II | 2012 | PDM | ● | ● | ● | ○ | ○ |
| B-Max | 1.6L | TDCi ECO II | 2012 | PSCM | ● | ● | ● | ○ | 0x00DC |
| B-Max | 1.6L | TDCi ECO II | 2012 | RCM | ● | ● | ● | ○ | 0x00EF |
| B-Max | 1.6L | TDCi ECO II | 2012 | RFA | ● | ● | ● | ○ | 0x000A |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2.2L | F2 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2.5L | WL | 2001 | PCM | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2.5L | WL | 2001 - 2002 | ABS | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2.5L | WL_T | 2001 - 2005 | ABS | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2.5L | WL_T | 2001 - 2005 | PCM | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2.6L | G6 | 1996 - 1999 | PCM | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2.6L | G6 | 1999 | ABS | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2.9L | W9 | 2002 | ABS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1.8L | F8 | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1.8L | F8 | 1999 - 2002 | PCM | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1.8L | F8 | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1.8L | F8 | 2002 | TCM | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1.8L | L8 | 2010 | ABS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1.8L | L8 | 2010 | IC | ● | ● | ● | ○ | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1.8L | L8 | 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| BONGO / BONGO BRAWNY / SPECTRON | 1.8L | L8 | 2010 | TCM | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 2.0L | RF-T | 2003 - 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 2.0L | RF-T | 2003 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0055 0x005C |
| BONGO / BONGO BRAWNY / SPECTRON | 2.0L | RF-T | 2003 - 2007 | TCM | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 2.2L | R2 | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 2.2L | R2 | 1999 | PCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 1.8L | F8 | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 1.8L | F8 | 1999 | PCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2.0L | FE | 1997 - 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2.0L | FE | 1997 - 2002 | PCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2.0L | FE | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2.0L | FE | 2002 | TCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2.2L | R2 | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2.2L | R2 | 1999 | PCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2.5L | WL | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2.5L | WL | 1999 | PCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.2L | F2 | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.2L | F2 | 2007 | PCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.2L | F2 | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.5L | L5 | 2012 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| BT-50 / Ranger | 2.5L | WL | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.5L | WL | 2007 | PCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.5L | WL | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.5L | WL-CD | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.5L | WL-CD | 2007 | PCM | ● | ● | ● | ● | 0x0055 0x0080 0x0081 0x0082 0x0083 |
| BT-50 / Ranger | 2.5L | WL-CD | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.5L | WL-CD | 2007 | TCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.6L | G6 | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2.6L | G6 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| BT-50 / Ranger | 2.6L | G6 | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 3.0L | WE-CD | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 3.0L | WE-CD | 2007 | PCM | ● | ● | ● | ● | 0x0055 0x0080 0x0081 0x0082 0x0083 |
| BT-50 / Ranger | 3.0L | WE-CD | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 3.0L | WE-CD | 2007 | TCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 4.0L | V6 SOHC | 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| BT-50 / Ranger | 4.0L | V6 SOHC | 2007 | ESOF | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 4.0L | V6 SOHC | 2007 | PCM | ● | ● | ● | ● | 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 |
| BT-50 / Ranger | 4.0L | V6 SOHC | 2007 | RCM | ● | ● | ● | ● | ○ |
| Bantam | 1.3L | Zetec Rocam | 2001 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Bantam | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2009 | IC | ● | ● | ● | ○ | ○ |
| Bantam | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Bantam | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2009 | RCM | ● | ● | ● | ● | ○ |
| Bantam | 1.6L | Zetec Rocam | 2001 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Blackwood | 5.4L | 4V | 2002 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Blackwood | 5.4L | 4V | 2002 - 2003 | DSM | ● | ● | ● | ● | ○ |
| Blackwood | 5.4L | 4V | 2002 - 2003 | EATC | ● | ● | ● | ● | ○ |
| Blackwood | 5.4L | 4V | 2002 - 2003 | GEM | ● | ● | ● | ● | ○ |
| Blackwood | 5.4L | 4V | 2002 - 2003 | HEC | ● | ● | ● | ● | 0x0009 |
| Blackwood | 5.4L | 4V | 2002 - 2003 | LTM | ● | ● | ● | ● | ○ |
| Blackwood | 5.4L | 4V | 2002 - 2003 | PAM | ● | ● | ● | ● | ○ |
| Blackwood | 5.4L | 4V | 2002 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Blackwood | 5.4L | 4V | 2002 - 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Blackwood | 5.4L | 4V | 2002 - 2003 | RASM | ● | ● | ● | ● | ○ |
| Blackwood | 5.4L | 4V | 2002 - 2003 | RCM | ● | ● | ● | ● | ○ |
| Blue Bird C-Class Vision | 6.8L | 3V | 2012 | PCM | ● | ● | ● | ● | 0x0067 0x0080 0x0081 0x0082 0x0083 |
| Bronco | 5.0L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Bronco | 5.8L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0012 0x0074 0x010A |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | ACM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | BECM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------------------------|-------------|---------|------------|-------------|-----------|-------------|--|
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | DDM | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | GWM | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | IPC | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | PSCM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | RFA | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2014 | FCIM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | Full Hybrid Electric Vehicle | 2014 | RGTM | ● | ● | ● | ○ | 0x013D |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0012 0x0074 0x010A |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | ACM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | BECM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | DDM | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | GFM | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | GWM | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | IPC | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | PSCM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | RFA | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | SOBDM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | PHEV | 2013 - 2014 | TCU#1 | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | PHEV | 2014 | FCIM | ● | ● | ● | ● | ○ |
| C-MAX | 2.0L | PHEV | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| C-MAX | 2.0L | PHEV | 2014 | RGTM | ● | ● | ● | ○ | 0x013D |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 1.8L | FP | 1997 - 1999 | PCM | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 1.8L | FP | 1999 | ABS | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 2.0L | FS | 1997 - 1999 | PCM | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 2.0L | FS | 1999 | ABS | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 2.0L | RF | 1997 | PCM | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 2.5L | KL | 1999 | ABS | ● | ● | ● | ● | ○ |
| CF/LCF | 4.5L | Direct Injection - Turbo | 2006 - 2009 | ABS | ● | ● | ● | ● | 0x0008 |
| CF/LCF | 4.5L | Direct Injection - Turbo | 2006 - 2009 | TCM | ● | ● | ● | ● | ○ |
| Cargo | 7.3L | ECOTORQ | 2004 | PCM | ● | ● | ● | ● | ○ |
| Cargo | Other | ISBe | 2009 - 2012 | TBM | ● | ● | ● | ● | 0x0009 0x00D1 0x00D2 0x00D3 0x012F 0x0130 |
| Cargo | Other | ISBe | 2012 | HEC | ● | ● | ● | ○ | 0x0009 |
| Cargo | Other | ISBe | 2012 | RKE | ● | ● | ● | ● | ○ |
| Cargo | Other | ISCe | 2009 - 2012 | TBM | ● | ● | ● | ● | 0x0009 0x00D1 0x00D2 0x00D3 0x012F 0x0130 |
| Cargo | Other | ISCe | 2012 | HEC | ● | ● | ● | ○ | 0x0009 |
| Cargo | Other | ISCe | 2012 | RKE | ● | ● | ● | ● | ○ |
| Cargo | Other | Mechanical | 2009 - 2012 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 0x012F 0x0130 |
| Cargo | Other | Mechanical | 2012 | HEC | ● | ● | ● | ○ | 0x0009 |
| Cargo | Other | Mechanical | 2012 | RKE | ● | ● | ● | ● | ○ |
| Continental | 4.6L | 4V | 1995 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Continental | 4.6L | 4V | 1995 - 2002 | ACM | ● | ● | ● | ● | ○ |
| Continental | 4.6L | 4V | 1995 - 2002 | CPM | ● | ● | ● | ● | ○ |
| Continental | 4.6L | 4V | 1995 - 2002 | DDM | ● | ● | ● | ● | 0x000F 0x000A |
| Continental | 4.6L | 4V | 1995 - 2002 | DSM | ● | ● | ● | ● | ○ |
| Continental | 4.6L | 4V | 1995 - 2002 | EATC | ● | ● | ● | ● | ○ |
| Continental | 4.6L | 4V | 1995 - 2002 | LCM | ● | ● | ● | ● | ○ |
| Continental | 4.6L | 4V | 1995 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|---|
| Continental | 4. 6L | 4V | 1995 - 2002 | VDM | ● | ● | ● | ● | 0x000E |
| Continental | 4. 6L | 4V | 1995 - 2002 | VIC | ● | ● | ● | ● | 0x0009 |
| Continental | 4. 6L | 4V | 1996 - 1997 | IAB | ● | ● | ● | ● | ○ |
| Continental | 4. 6L | 4V | 1996 - 2000 | RESCU | ● | ● | ● | ● | ○ |
| Continental | 4. 6L | 4V | 1998 | ECS | ● | ● | ● | ● | ○ |
| Continental | 4. 6L | 4V | 1998 - 2002 | NGSC | ● | ● | ● | ● | ○ |
| Continental | 4. 6L | 4V | 1999 - 2002 | RCM | ● | ● | ● | ● | ○ |
| Contour | 2. 0L | GFP | 1996 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Contour | 2. 0L | GFP | 1996 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| Contour | 2. 0L | GFP | 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Contour | 2. 0L | GFP | 1998 - 2000 | CSM | ● | ● | ● | ● | ○ |
| Contour | 2. 0L | GFP | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Contour | 2. 0L | Zetec | 1996 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Contour | 2. 0L | Zetec | 1996 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| Contour | 2. 0L | Zetec | 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Contour | 2. 0L | Zetec | 1998 - 2000 | CSM | ● | ● | ● | ● | ○ |
| Contour | 2. 0L | Zetec | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Contour | 2. 5L | Duratec-VE | 1996 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Contour | 2. 5L | Duratec-VE | 1996 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| Contour | 2. 5L | Duratec-VE | 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Contour | 2. 5L | Duratec-VE | 1998 - 2000 | CSM | ● | ● | ● | ● | ○ |
| Contour | 2. 5L | Duratec-VE | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Contour | 2. 5L | HO | 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Contour | 2. 5L | HO | 1998 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Contour | 2. 5L | HO | 1998 - 2000 | CSM | ● | ● | ● | ● | ○ |
| Contour | 2. 5L | HO | 1998 - 2000 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| Contour | 2. 5L | HO | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Cougar | 2. 0L | Zetec | 1998 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Cougar | 2. 0L | Zetec | 1998 - 2002 | CSM | ● | ● | ● | ● | ○ |
| Cougar | 2. 0L | Zetec | 1998 - 2002 | HEC | ● | ● | ● | ● | ○ |
| Cougar | 2. 0L | Zetec | 1998 - 2002 | IAB | ● | ● | ● | ● | ○ |
| Cougar | 2. 0L | Zetec | 1998 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| Cougar | 2. 5L | Duratec-VE | 1998 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Cougar | 2. 5L | Duratec-VE | 1998 - 2002 | CSM | ● | ● | ● | ● | ○ |
| Cougar | 2. 5L | Duratec-VE | 1998 - 2002 | HEC | ● | ● | ● | ● | ○ |
| Cougar | 2. 5L | Duratec-VE | 1998 - 2002 | IAB | ● | ● | ● | ● | ○ |
| Cougar | 2. 5L | Duratec-VE | 1998 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 |
| Cougar | 2. 5L | Duratec-VE | 2001 | ABS | ● | ● | ● | ● | ○ |
| Cougar | 2. 5L | Duratec-VE | 2001 | IC | ● | ● | ● | ● | ○ |
| Cougar | 2. 5L | Duratec-VE | 2001 | MC | ● | ● | ● | ● | ○ |
| Cougar | 2. 5L | Duratec-VE | 2001 | REM | ● | ● | ● | ● | ○ |
| Cougar | 3. 8L | Other | 1996 - 1997 | ABS/TCS | ● | ● | ● | ● | ○ |
| Cougar | 3. 8L | Other | 1996 - 1997 | HEC | ● | ● | ● | ● | ○ |
| Cougar | 3. 8L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Cougar | 4. 6L | 2V | 1994 - 1997 | ABS/TCS | ● | ● | ● | ● | ○ |
| Cougar | 4. 6L | 2V | 1994 - 1997 | HEC | ● | ● | ● | ● | ○ |
| Cougar | 4. 6L | 2V | 1994 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Crown Victoria | 4. 6L | 2V | 1995 - 1997 | DSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------------|----------|------------|--------------|-----------|------------|-------------|-----------|-------------|---|
| Crown Victoria | 4. 6L | 2V | 1995 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Crown Victoria | 4. 6L | 2V | 1995 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V | 1995 - 2011 | DDM | ● | ● | ● | ● | 0x000F 0x000A 0x0042 0x0005 0xF044 0xF04C 0xF06A |
| Crown Victoria | 4. 6L | 2V | 1995 - 2011 | LCM | ● | ● | ● | ● | 0xF042 0xF043 |
| Crown Victoria | 4. 6L | 2V | 1995 - 2011 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024 0x00C5 |
| Crown Victoria | 4. 6L | 2V | 1996 - 1997 | IAB | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V | 1998 - 2000 | ECS | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V | 1998 - 2002 | PATS | ● | ● | ● | ● | 0x0009 |
| Crown Victoria | 4. 6L | 2V | 2000 - 2011 | RCM | ● | ● | ● | ● | 0x000C |
| Crown Victoria | 4. 6L | 2V | 2003 - 2006 | RASM | ● | ● | ● | ● | 0x0013 |
| Crown Victoria | 4. 6L | 2V | 2003 - 2006 | VAPS | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V | 2004 - 2010 | MC | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V | 2005 - 2011 | ABS | ● | ● | ● | ● | 0x0008 |
| Crown Victoria | 4. 6L | 2V | 2005 - 2011 | FSSM | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V | 2006 - 2011 | IC | ● | ● | ● | ● | 0x0005 |
| Crown Victoria | 4. 6L | 2V | 2007 - 2011 | VDM | ● | ● | ● | ● | 0x0005 0x0013 0x0014 |
| Crown Victoria | 4. 6L | 2V | 2008 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V NGV | 1996 - 1997 | DSM | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V NGV | 1996 - 1997 | IAB | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V NGV | 1996 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Crown Victoria | 4. 6L | 2V NGV | 1996 - 2000 | DDM | ● | ● | ● | ● | 0x000F 0x000A |
| Crown Victoria | 4. 6L | 2V NGV | 1996 - 2000 | FIM | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V NGV | 1996 - 2000 | LCM | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V_NGV | 1996 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Crown Victoria | 4. 6L | 2V_NGV | 1998 - 2000 | EATC | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V NGV | 1998 - 2000 | ECS | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | 2V NGV | 1998 - 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Crown Victoria | 4. 6L | 2V NGV | 2000 | RCM | ● | ● | ● | ● | ○ |
| Crown Victoria | 4. 6L | Other | 1995 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Crown Victoria | 4. 6L | Other | 1995 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| DEMIO / FESTIVA MINI WAGON | 1. 3L | B3 | 1996 - 1999 | ABS | ● | ● | ● | ● | ○ |
| DEMIO / FESTIVA MINI WAGON | 1. 3L | B3 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO / FESTIVA MINI WAGON | 1. 3L | B3 | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| DEMIO / FESTIVA MINI WAGON | 1. 5L | B5 | 1996 - 1999 | ABS | ● | ● | ● | ● | ○ |
| E-Series | 4. 2L | Other | 1997 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 4. 2L | Other | 1997 - 2003 | ECS | ● | ● | ● | ● | ○ |
| E-Series | 4. 2L | Other | 1997 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| E-Series | 4. 6L | 2V | 2003 | ECS | ● | ● | ● | ● | ○ |
| E-Series | 4. 6L | 2V | 2003 - 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| E-Series | 4. 6L | 2V | 2003 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 0x0009 0x0067 |
| E-Series | 4. 6L | 2V | 2004 - 2006 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| E-Series | 4. 6L | 2V | 2004 - 2008 | IC | ● | ● | ● | ● | 0x0005 0xF027 0xF066 0xF067 0x0009 |
| E-Series | 4. 6L | 2V | 2004 - 2014 | RCM | ● | ● | ● | ● | ○ |
| E-Series | 4. 6L | 2V | 2006 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| E-Series | 4. 6L | 2V | 2007 - 2008 | VSM | ● | ● | ● | ● | 0x000A 0x0042 |
| E-Series | 4. 6L | 2V | 2007 - 2014 | PAM | ● | ● | ● | ● | ○ |
| E-Series | 4. 6L | 2V | 2009 - 2014 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| E-Series | 4. 6L | 2V | 2009 - 2014 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 0xF03C 0xF042 0xF049 0xF04B 0xF04C 0xF068 0xF069 0xF06A |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|--------------------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| E-Series | 4.6L | 2V | 2009 - 2014 | IPC | ● | ● | ● | ● | 0x0009 |
| E-Series | 4.6L | 2V | 2009 - 2014 | TBC | ● | ● | ● | ● | ○ |
| E-Series | 4.6L | 2V | 2010 - 2013 | SDARS | ● | ● | ● | ● | ○ |
| E-Series | 4.6L | 2V | 2010 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| E-Series | 4.6L | 2V | 2010 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| E-Series | 4.6L | Other | 1997 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 4.6L | Other | 1997 - 2002 | ECS | ● | ● | ● | ● | ○ |
| E-Series | 4.6L | Other | 1997 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| E-Series | 4.9L | GFP | 1996 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 4.9L | GFP | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 |
| E-Series | 4.9L | Other | 1996 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 4.9L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| E-Series | 5.0L | Other | 1996 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 5.0L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| E-Series | 5.4L | 2V | 2004 | AFCM | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | 2V | 2004 - 2006 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| E-Series | 5.4L | 2V | 2004 - 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| E-Series | 5.4L | 2V | 2004 - 2008 | IC | ● | ● | ● | ● | 0x0005 0xF066 0xF067 0x0009 0xF027 |
| E-Series | 5.4L | 2V | 2004 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 0x0067 |
| E-Series | 5.4L | 2V | 2004 - 2014 | RCM | ● | ● | ● | ● | 0x0005 0xF022 |
| E-Series | 5.4L | 2V | 2006 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| E-Series | 5.4L | 2V | 2007 - 2008 | VSM | ● | ● | ● | ● | 0x000A 0xF044 0x0042 |
| E-Series | 5.4L | 2V | 2007 - 2014 | PAM | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | 2V | 2009 - 2014 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| E-Series | 5.4L | 2V | 2009 - 2014 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| E-Series | 5.4L | 2V | 2009 - 2014 | IPC | ● | ● | ● | ● | 0x0009 |
| E-Series | 5.4L | 2V | 2009 - 2014 | TBC | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | 2V | 2010 - 2013 | SDARS | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | 2V | 2010 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| E-Series | 5.4L | 2V | 2010 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| E-Series | 5.4L | BIF | 1999 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 5.4L | BIF | 1999 | AFCM | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | BIF | 1999 | ECS | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | BIF | 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 |
| E-Series | 5.4L | NGV | 1997 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 5.4L | NGV | 1997 - 2000 | ECS | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | NGV | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| E-Series | 5.4L | NGV | 1998 - 2000 | FIM | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | Other | 1997 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 5.4L | Other | 1997 - 2003 | ECS | ● | ● | ● | ● | ○ |
| E-Series | 5.4L | Other | 1997 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| E-Series | 5.8L | Other | 1996 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 5.8L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| E-Series | 6.0L | Direct Injection - Turbo | 2004 - 2006 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| E-Series | 6.0L | Direct Injection - Turbo | 2004 - 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| E-Series | 6.0L | Direct Injection - Turbo | 2004 - 2008 | IC | ● | ● | ● | ● | 0x0005 0xF027 0xF066 0xF067 0x0009 |
| E-Series | 6.0L | Direct Injection - Turbo | 2004 - 2010 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------|----------|--------------------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| E-Series | 6.0L | Direct Injection - Turbo | 2004 - 2010 | RCM | ● | ● | ● | ● | ○ |
| E-Series | 6.0L | Direct Injection - Turbo | 2004 - 2010 | TCM | ● | ● | ● | ● | ○ |
| E-Series | 6.0L | Direct Injection - Turbo | 2006 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x0005 |
| E-Series | 6.0L | Direct Injection - Turbo | 2007 - 2008 | VSM | ● | ● | ● | ● | 0x000A 0x0042 |
| E-Series | 6.0L | Direct Injection - Turbo | 2007 - 2010 | PAM | ● | ● | ● | ● | ○ |
| E-Series | 6.0L | Direct Injection - Turbo | 2009 - 2010 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| E-Series | 6.0L | Direct Injection - Turbo | 2009 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 0xF03C 0xF042 0xF049 0xF04B 0xF04C 0xF068 0xF069 0xF06A |
| E-Series | 6.0L | Direct Injection - Turbo | 2009 - 2010 | IPC | ● | ● | ● | ● | ○ |
| E-Series | 6.0L | Direct Injection - Turbo | 2009 - 2010 | TBC | ● | ● | ● | ● | ○ |
| E-Series | 6.0L | Direct Injection - Turbo | 2010 | APIM | ● | ● | ● | ● | 0x0019 |
| E-Series | 6.0L | Direct Injection - Turbo | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| E-Series | 6.0L | Direct Injection - Turbo | 2010 | SDARS | ● | ● | ● | ● | ○ |
| E-Series | 6.8L | 2V | 2004 - 2006 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| E-Series | 6.8L | 2V | 2004 - 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| E-Series | 6.8L | 2V | 2004 - 2008 | IC | ● | ● | ● | ● | 0x0009 |
| E-Series | 6.8L | 2V | 2004 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0067 0x0009 |
| E-Series | 6.8L | 2V | 2004 - 2014 | RCM | ● | ● | ● | ● | ○ |
| E-Series | 6.8L | 2V | 2006 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x0005 |
| E-Series | 6.8L | 2V | 2007 - 2008 | VSM | ● | ● | ● | ● | 0x000A 0x0042 |
| E-Series | 6.8L | 2V | 2007 - 2014 | PAM | ● | ● | ● | ● | ○ |
| E-Series | 6.8L | 2V | 2009 - 2014 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| E-Series | 6.8L | 2V | 2009 - 2014 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 0xF03C 0xF042 0xF049 0xF04B 0xF04C 0xF068 0xF069 0xF06A |
| E-Series | 6.8L | 2V | 2009 - 2014 | IPC | ● | ● | ● | ● | 0x0009 |
| E-Series | 6.8L | 2V | 2009 - 2014 | TBC | ● | ● | ● | ● | ○ |
| E-Series | 6.8L | 2V | 2010 - 2013 | SDARS | ● | ● | ● | ● | ○ |
| E-Series | 6.8L | 2V | 2010 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| E-Series | 6.8L | 2V | 2010 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| E-Series | 6.8L | Other | 1997 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 6.8L | Other | 1997 - 2003 | ECS | ● | ● | ● | ● | ○ |
| E-Series | 6.8L | Other | 1997 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| E-Series | 7.3L | Direct Injection - Turbo | 1995 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 7.3L | Direct Injection - Turbo | 1995 - 2003 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 0x0010 0x0028 0x0031 0x0033 |
| E-Series | 7.3L | Direct Injection - Turbo | 1997 - 2003 | ECS | ● | ● | ● | ● | ○ |
| E-Series | 7.5L | Other | 1996 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| E-Series | 7.5L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| E-Series | Other | Other | 2012 | ABS | ● | ● | ● | ● | ○ |
| E-Series | Other | Other | 2012 | ACM | ● | ● | ● | ● | ○ |
| E-Series | Other | Other | 2012 | APIM | ● | ● | ● | ● | ○ |
| E-Series | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| E-Series | Other | Other | 2012 | GPSM | ● | ● | ● | ● | ○ |
| E-Series | Other | Other | 2012 | IPC | ● | ● | ● | ● | ○ |
| E-Series | Other | Other | 2012 | PAM | ● | ● | ● | ● | ○ |
| E-Series | Other | Other | 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| E-Series | Other | Other | 2012 | RCM | ● | ● | ● | ● | ○ |
| E-Series | Other | Other | 2012 | SDARS | ● | ● | ● | ● | ○ |
| E-Series | Other | Other | 2012 | TBC | ● | ● | ● | ● | ○ |
| E-Series Shuttle Bus | 6.8L | H2ICE | 2006 | ABS/TCS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------|----------|--|-------------|---------|------------|-------------|-----------|-------------|--|
| E-Series Shuttle Bus | 6.8L | H2ICE | 2006 | AFCM | ● | ● | ● | ● | ○ |
| E-Series Shuttle Bus | 6.8L | H2ICE | 2006 | EMM | ● | ● | ● | ● | ○ |
| E-Series Shuttle Bus | 6.8L | H2ICE | 2006 | IC | ● | ● | ● | ● | ○ |
| E-Series Shuttle Bus | 6.8L | H2ICE | 2006 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 |
| E-Series Shuttle Bus | 6.8L | H2ICE | 2006 | RCM | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ABS | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ACM | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | DDM | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HVAC | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| EcoSport | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | RCM | ● | ● | ● | ○ | ○ |
| EcoSport | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | Zetec Rocam | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x000B |
| EcoSport | 1.0L | Zetec Rocam | 2003 | GEM | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | Zetec Rocam | 2003 | IC | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | Zetec Rocam | 2003 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| EcoSport | 1.0L | Zetec Rocam | 2003 | RCM | ● | ● | ● | ● | ○ |
| EcoSport | 1.0L | Zetec Rocam | 2003 | RKE | ● | ● | ● | ● | ○ |
| EcoSport | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x000B |
| EcoSport | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2003 | GEM | ● | ● | ● | ● | ○ |
| EcoSport | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2003 | IC | ● | ● | ● | ● | ○ |
| EcoSport | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2003 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| EcoSport | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2003 | RCM | ● | ● | ● | ● | ○ |
| EcoSport | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2003 | RKE | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | DURATEC VCT | 2014 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | ABS | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | ACM | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | HVAC | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | RCM | ● | ● | ● | ○ | ○ |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2012 | TBM | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | TivCT | 2012 | ABS | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | TivCT | 2012 | ACM | ● | ● | ● | ○ | ○ |
| EcoSport | 1.5L | TivCT | 2012 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | TivCT | 2012 | BCM#1 | ● | ● | ● | ● | 0x000A |
| EcoSport | 1.5L | TivCT | 2012 | DDM | ● | ● | ● | ○ | ○ |
| EcoSport | 1.5L | TivCT | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | TivCT | 2012 | HVAC | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | TivCT | 2012 | IPC | ● | ● | ● | ● | ○ |
| EcoSport | 1.5L | TivCT | 2012 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| EcoSport | 1.5L | TivCT | 2012 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| EcoSport | 1.5L | TivCT | 2012 | RCM | ● | ● | ● | ○ | ○ |
| EcoSport | 1.5L | TivCT | 2012 | TCM | ● | ● | ● | ● | 0x0117 0x0158 |
| EcoSport | 1.6L | FFV | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | FFV | 2003 - 2011 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x000B |
| EcoSport | 1.6L | FFV | 2003 - 2011 | IC | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | FFV | 2003 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E |
| EcoSport | 1.6L | FFV | 2003 - 2011 | RCM | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | FFV | 2003 - 2011 | RKE | ● | ● | ● | ● | 0x000A |
| EcoSport | 1.6L | FFV | 2011 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|-----------------|-------------|---------|------------|-------------|-----------|-------------|--|
| EcoSport | 1.6L | Sigma | 2012 | ABS | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Sigma | 2012 | ACM | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Sigma | 2012 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Sigma | 2012 | BCM#1 | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Sigma | 2012 | DDM | ● | ● | ● | ○ | ○ |
| EcoSport | 1.6L | Sigma | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Sigma | 2012 | HVAC | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Sigma | 2012 | IPC | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Sigma | 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0084 |
| EcoSport | 1.6L | Sigma | 2012 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| EcoSport | 1.6L | Sigma | 2012 | RCM | ● | ● | ● | ○ | ○ |
| EcoSport | 1.6L | Sigma | 2012 | RFA | ● | ● | ● | ○ | ○ |
| EcoSport | 1.6L | Sigma | 2012 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| EcoSport | 1.6L | Zetec Rocam | 2003 | GEM | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Zetec Rocam | 2003 – 2009 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x000B |
| EcoSport | 1.6L | Zetec Rocam | 2003 – 2009 | IC | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Zetec Rocam | 2003 – 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| EcoSport | 1.6L | Zetec Rocam | 2003 – 2009 | RCM | ● | ● | ● | ● | ○ |
| EcoSport | 1.6L | Zetec Rocam | 2003 – 2009 | RKE | ● | ● | ● | ● | 0x000A |
| EcoSport | 2.0L | DURATEC | 2013 | ABS | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC | 2013 | ACM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC | 2013 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC | 2013 | DDM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC | 2013 | HVAC | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC | 2013 | PSCM | ● | ● | ● | ○ | ○ |
| EcoSport | 2.0L | DURATEC | 2013 | RCM | ● | ● | ● | ○ | ○ |
| EcoSport | 2.0L | DURATEC | 2013 | TBM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2003 – 2006 | GEM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2003 – 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x000B |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2003 – 2007 | IC | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2003 – 2007 | RKE | ● | ● | ● | ● | 0x000A |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2003 – 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0023 0x0067 0x0084 |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2003 – 2012 | RCM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | ABS | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | ACM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | BCM#1 | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | DDM | ● | ● | ● | ○ | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | HVAC | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | IPC | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | RFA | ● | ● | ● | ○ | ○ |
| EcoSport | 2.0L | DURATEC-HE / I4 | 2012 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| EcoSport | 2.0L | FFV | 2009 – 2011 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x000B |
| EcoSport | 2.0L | FFV | 2009 – 2011 | IC | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | FFV | 2009 – 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00C5 |
| EcoSport | 2.0L | FFV | 2009 – 2011 | RCM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | FFV | 2009 – 2011 | RKE | ● | ● | ● | ● | 0x000A |
| EcoSport | 2.0L | FFV | 2011 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| EcoSport | 2.0L | Zetec Rocam | 2009 | ABS/TCS | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | Zetec Rocam | 2009 | IC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| EcoSport | 2.0L | Zetec Rocam | 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| EcoSport | 2.0L | Zetec Rocam | 2009 | RCM | ● | ● | ● | ● | ○ |
| EcoSport | 2.0L | Zetec Rocam | 2009 | RKE | ● | ● | ● | ● | 0x000A |
| EcoSport | Other | Other | 2012 | ABS | ● | ● | ● | ● | ○ |
| EcoSport | Other | Other | 2012 | ACM | ● | ● | ● | ○ | ○ |
| EcoSport | Other | Other | 2012 | APIM | ● | ● | ● | ● | ○ |
| EcoSport | Other | Other | 2012 | BCM#1 | ● | ● | ● | ● | 0x000A |
| EcoSport | Other | Other | 2012 | DDM | ● | ● | ● | ○ | ○ |
| EcoSport | Other | Other | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| EcoSport | Other | Other | 2012 | HVAC | ● | ● | ● | ● | ○ |
| EcoSport | Other | Other | 2012 | IPC | ● | ● | ● | ● | ○ |
| EcoSport | Other | Other | 2012 | PSCM | ● | ● | ● | ○ | ○ |
| EcoSport | Other | Other | 2012 | RCM | ● | ● | ● | ○ | ○ |
| Econovan | 2.0L | OHC | 2008 | IC | ● | ● | ● | ● | ○ |
| Econovan | 2.0L | OHC | 2008 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 | TPM | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2013 | HVAC | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2013 | PCM | ● | ● | ● | ● | 0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2013 | RCM | ● | ● | ● | ○ | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2013 | TCM | ● | ● | ● | ● | 0x0010 0x0028 0x0031 0x0033 0x0038 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | ACM | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | BCM#1 | ● | ● | ● | ● | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A 0x0112 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | FLM | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | IPC | ● | ● | ● | ● | 0x00D0 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | LTM | ● | ● | ● | ○ | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2012 - 2014 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Edge | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Edge | 3.5L | 4V | 2007 | EATC | ● | ● | ● | ● | ○ |
| Edge | 3.5L | 4V | 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0x001A |
| Edge | 3.5L | 4V | 2007 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Edge | 3.5L | 4V | 2007 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x0005 |
| Edge | 3.5L | 4V | 2007 - 2010 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 0x0019 0x0005 |
| Edge | 3.5L | 4V | 2007 - 2010 | DSM | ● | ● | ● | ● | 0x0005 0xF041 |
| Edge | 3.5L | 4V | 2007 - 2010 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF027 0xF047 0xF04A |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Edge | 3.5L | 4V | 2007 - 2010 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| Edge | 3.5L | 4V | 2007 - 2010 | PAM | ● | ● | ● | ● | 0x0005 |
| Edge | 3.5L | 4V | 2007 - 2010 | PCM | ● | ● | ● | ● | 0x0024 0x0025 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0202 0x0010 0x0023 0x0028 0x0031 0x0033 0x00C5 |
| Edge | 3.5L | 4V | 2007 - 2010 | RCM | ● | ● | ● | ● | 0x0005 |
| Edge | 3.5L | 4V | 2007 - 2010 | RETM | ● | ● | ● | ● | 0x0005 0xF04D |
| Edge | 3.5L | 4V | 2007 - 2010 | SASM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | 4V | 2007 - 2010 | SDARS | ● | ● | ● | ● | 0x0019 0x0005 |
| Edge | 3.5L | 4V | 2007 - 2010 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Edge | 3.5L | 4V | 2008 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Edge | 3.5L | 4V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C |
| Edge | 3.5L | 4V | 2008 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| Edge | 3.5L | 4V | 2008 - 2010 | LTM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | 4V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Edge | 3.5L | TiVCT | 2011 - 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2013 | HVAC | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| Edge | 3.5L | TiVCT | 2011 - 2013 | PCM | ● | ● | ● | ● | 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0108 |
| Edge | 3.5L | TiVCT | 2011 - 2013 | RCM | ● | ● | ● | ○ | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Edge | 3.5L | TiVCT | 2011 - 2014 | ACM | ● | ● | ● | ○ | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | APIM | ● | ● | ● | ○ | 0x00D6 |
| Edge | 3.5L | TiVCT | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A 0x0112 |
| Edge | 3.5L | TiVCT | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | FLM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x00D0 |
| Edge | 3.5L | TiVCT | 2011 - 2014 | LTM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | PAM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Edge | 3.5L | TiVCT | 2011 - 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Edge | 3.5L | TiVCT | 2011 - 2014 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Edge | 3.5L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Edge | 3.7L | TiVCT | 2011 - 2013 | FCDIM | ● | ● | ● | ○ | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2013 | HVAC | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------------|----------|-------------------|-------------|--------|------------|-------------|-----------|-------------|---|
| Edge | 3.7L | TiVCT | 2011 - 2013 | PCM | ● | ● | ● | ● | 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0108 |
| Edge | 3.7L | TiVCT | 2011 - 2013 | RCM | ● | ● | ● | ○ | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Edge | 3.7L | TiVCT | 2011 - 2014 | ACM | ● | ● | ● | ○ | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | APIM | ● | ● | ● | ○ | 0x00D6 |
| Edge | 3.7L | TiVCT | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A 0x0112 |
| Edge | 3.7L | TiVCT | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | FLM | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x00D0 |
| Edge | 3.7L | TiVCT | 2011 - 2014 | LTM | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | PAM | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Edge | 3.7L | TiVCT | 2011 - 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Edge | 3.7L | TiVCT | 2011 - 2014 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Edge | 3.7L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Edge | Other | Other | 2014 | ABS | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | ACM | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | APIM | ● | ● | ● | ○ | ○ |
| Edge | Other | Other | 2014 | BCM#1 | ● | ● | ● | ○ | ○ |
| Edge | Other | Other | 2014 | DCSM | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | DSM | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | DSP | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Edge | Other | Other | 2014 | FLM | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Edge | Other | Other | 2014 | HUD | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | IPC | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | LTM | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | PAM | ● | ● | ● | ○ | ○ |
| Edge | Other | Other | 2014 | RFA | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | RTM | ● | ● | ● | ○ | ○ |
| Edge | Other | Other | 2014 | SCCM | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Edge | Other | Other | 2014 | TBM | ● | ● | ● | ● | ○ |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | ABS | ● | ● | ● | ● | 0x0012 0x0074 |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | BCM | ● | ● | ● | ● | 0x006E |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | EPS | ● | ● | ● | ● | ○ |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------------------|----------|-------------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0009 0x0023 0x0024 0x0025 0x0084 0x00C5 |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | RCM | ● | ● | ● | ● | 0x000C |
| Escape / Mariner Hybrid | 2.3L | HEV / ATKINSON 4V | 2005 - 2007 | TCM | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | ABS | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | GEM | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | ABS | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | GEM | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 0x0053 |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 0xF05A |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | FDIM | ● | ● | ● | ● | 0xF05A |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F 0xF060 0xF061 |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | IC | ● | ● | ● | ● | 0x0005 0x0009 0xF027 0xF04B 0xF04C 0xF054 |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | PSCM | ● | ● | ○ | ○ | 0x0005 0x0053 |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | SDARS | ● | ● | ● | ● | 0x0019 |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0012 0x0053 0x0074 |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | ACM | ● | ● | ● | ● | 0x0005 0x0016 0x0017 0x0018 0xF05A |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | BCM | ● | ● | ● | ● | 0x006E |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | FDIM | ● | ● | ● | ● | 0x0005 0xF05A |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F 0xF060 0xF061 |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | IC | ● | ● | ● | ● | 0x0005 0x0009 0xF027 0xF04B 0xF04C 0xF054 |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | OCSM | ● | ● | ● | ○ | 0x000C |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | PSCM | ● | ● | ○ | ○ | 0x0005 0x0053 |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | SDARS | ● | ● | ● | ● | 0x0019 |
| Escape / Tribute / Mariner | 2.3L | HEV / ATKINSON 4V | 2008 | TCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 | SDARS | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x0053 |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------------|----------|-------------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | IC | ● | ● | ● | ● | 0x0009 |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | PCM | ● | ● | ● | ● | 0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023 0x0038 |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | PSCM | ● | ● | ○ | ○ | 0x0053 0x00CC |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2009 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 | SDARS | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | ABS | ● | ● | ● | ● | 0x0053 0x0074 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | BCM | ● | ● | ● | ● | 0x006E |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | IC | ● | ● | ● | ● | 0x0009 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | PCM | ● | ● | ● | ● | 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | PSCM | ● | ● | ○ | ○ | 0x0053 0x00CC |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | TCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | ACCM#2 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2009 | SDARS | ● | ● | ● | ● | 0x0019 0x0005 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 0x0053 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 0xF05A |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | FDIM | ● | ● | ● | ● | 0xF05A 0x0005 0xF062 0xF063 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F 0xF060 0xF061 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | HVAC | ● | ● | ● | ● | 0x0005 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | IC | ● | ● | ● | ● | 0x0009 0xF027 0xF04B 0xF04C 0xF054 0x0005 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 0x0038 0x0067 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | PSCM | ● | ● | ○ | ○ | 0x0005 0x0053 0x00CC |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | RCM | ● | ● | ● | ● | 0xF022 0xF05D 0x0005 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x001C 0x0019 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | 4X4 | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| Escape / Tribute / Mariner | Other | Other | 2012 | ABS | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | ACM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | APIM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | FDIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| Escape / Tribute / Mariner | Other | Other | 2012 | GPSM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | OCSM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | PAM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | PSCM | ● | ● | ○ | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | GEM | ● | ● | ● | ● | 0x000A |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2003 - 2004 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0008 |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | RCM | ● | ● | ● | ● | 0x000C |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057 0xF058 0xF059 0xF090 |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2007 | IC | ● | ● | ● | ● | 0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053 0xF054 0xF055 |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 0x00C5 0x0202 |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2007 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| Escape / Tribute / Maverick | 3.0L | 4V | 2003 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 3.0L | 4V | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 3.0L | 4V | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0005 0x0008 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ABS | ● | ● | ● | ● | 0x0012 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ACM | ● | ● | ● | ● | 0x0017 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ● | 0x000F 0x00D5 0x0101 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | DSM | ● | ● | ● | ● | 0x00F2 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPM-B | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | RGTM | ● | ● | ● | ○ | 0x013D |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RFA | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SASM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | TRM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ABS | ● | ● | ● | ● | 0x0012 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ACM | ● | ● | ● | ● | 0x0017 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ● | 0x00D5 0x0101 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | DSM | ● | ● | ● | ● | 0x00F2 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPM-B | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | RGTM | ● | ● | ● | ○ | 0x013D |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RFA | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SASM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | TRM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.5L | IVCT | 2013 | ABS | ● | ● | ● | ● | 0x0012 |
| Escape/Kuga | 2.5L | IVCT | 2013 | ACM | ● | ● | ● | ● | 0x0017 |
| Escape/Kuga | 2.5L | IVCT | 2013 | BCM#1 | ● | ● | ● | ● | 0x00D5 0x0101 |
| Escape/Kuga | 2.5L | IVCT | 2013 | DSM | ● | ● | ● | ● | 0x00F2 |
| Escape/Kuga | 2.5L | IVCT | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.5L | IVCT | 2013 | IPC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.5L | IVCT | 2013 | IPM-B | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2.5L | IVCT | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Escape/Kuga | 2.5L | IVCT | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escape/Kuga | 2.5L | IVCT | 2013 | RGTM | ● | ● | ● | ○ | 0x013D |
| Escape/Kuga | 2.5L | IVCT | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|---------------|--------------|---------|------------|-------------|-----------|-------------|--|
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | DDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | DSP | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | FCIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | GPSM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | HCM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | HVAC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | PDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | RCM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | RFA | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | SASM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 – 2014 | TRM | ● | ● | ● | ● | ○ |
| Escort | 1. 3L | Endura-E | 1995 – 1998 | ABS | ● | ● | ● | ● | ○ |
| Escort | 1. 3L | Endura-E | 1995 – 1998 | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1. 3L | Endura-E | 1995 – 1998 | CSM | ● | ● | ● | ● | ○ |
| Escort | 1. 3L | Endura-E | 1995 – 1998 | HEC | ● | ● | ● | ● | ○ |
| Escort | 1. 3L | Endura-E | 1995 – 1998 | PATS | ● | ● | ● | ● | ○ |
| Escort | 1. 3L | Endura-E | 1995 – 1998 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Escort | 1. 4L | 1. 4 PT-E SFI | 1994 – 1998 | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1. 4L | 1. 4 PT-E SFI | 1994 – 1998 | CSM | ● | ● | ● | ● | ○ |
| Escort | 1. 4L | 1. 4 PT-E SFI | 1994 – 1998 | HEC | ● | ● | ● | ● | ○ |
| Escort | 1. 4L | 1. 4 PT-E SFI | 1994 – 1998 | PATS | ● | ● | ● | ● | ○ |
| Escort | 1. 4L | 1. 4 PT-E SFI | 1994 – 1998 | PCM | ● | ● | ● | ● | ○ |
| Escort | 1. 4L | 1. 4 PT-E SFI | 1995 – 1998 | ABS | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | PT-E | Other | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | PT-E | Other | CSM | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | PT-E | Other | HEC | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | PT-E | Other | PATS | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | PT-E | Other | PCM | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec | 1993 – 1997 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Escort | 1. 6L | Zetec | 1993 – 1998 | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec | 1993 – 1998 | CSM | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec | 1993 – 1998 | HEC | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec | 1993 – 1998 | PATS | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec | 1995 – 1998 | ABS | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec Rocam | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec Rocam | 2000 | CSM | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec Rocam | 2000 | HEC | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec Rocam | 2000 | PATS | ● | ● | ● | ● | ○ |
| Escort | 1. 6L | Zetec Rocam | 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escort | 1. 8L | Endura-DE | 1996 – Other | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Endura-DE | 1996 – Other | CSM | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Endura-DE | 1996 – Other | HEC | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Endura-DE | 1996 – Other | PATS | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Endura-DE | 1996 – Other | PCM | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Endura-DE | 1997 | ABS | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Other | 1996 | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Other | 1996 | CSM | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Other | 1996 | HEC | ● | ● | ● | ● | ○ |
| Escort | 1. 8L | Other | 1996 | PATS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------|----------|---------------|-------------|---------|------------|-------------|-----------|-------------|--|
| Escort | 1.8L | Other | 1996 | PCM | ● | ● | ● | ● | ○ |
| Escort | 1.8L | Zetec | 1992 – 1996 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Escort | 1.8L | Zetec | 1992 – 1998 | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1.8L | Zetec | 1992 – 1998 | CSM | ● | ● | ● | ● | ○ |
| Escort | 1.8L | Zetec | 1992 – 1998 | HEC | ● | ● | ● | ● | ○ |
| Escort | 1.8L | Zetec | 1992 – 1998 | PATS | ● | ● | ● | ● | ○ |
| Escort | 1.8L | Zetec | 1995 – 1998 | ABS | ● | ● | ● | ● | ○ |
| Escort | 1.9L | Other | 1996 | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 1.9L | Other | 1996 | PATS | ● | ● | ● | ● | ○ |
| Escort | 1.9L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Escort | 2.0L | DOHC Cosworth | 1994 – 1995 | ABS/TCS | ● | ● | ● | ● | ○ |
| Escort | 2.0L | DOHC Cosworth | 1994 – 1995 | PATS | ● | ● | ● | ● | ○ |
| Escort | 2.0L | DOHC Cosworth | 1994 – 1995 | PCM | ● | ● | ● | ● | ○ |
| Escort | 2.0L | DOHC Cosworth | 1995 | ABS | ● | ● | ● | ● | ○ |
| Escort | 2.0L | SPI | 1997 – 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Escort | 2.0L | SPI | 1997 – 2002 | PATS | ● | ● | ● | ● | ○ |
| Escort | 2.0L | SPI | 1997 – 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escort | 2.0L | SPI | 1997 – 2002 | RAP | ● | ● | ● | ● | 0x000A |
| Escort | 2.0L | SPI | 1998 – 1999 | ABS | ● | ● | ● | ● | 0x0008 |
| Escort | 2.0L | SPI | 1998 – 2002 | ECS | ● | ● | ● | ● | ○ |
| Escort | 2.0L | Zetec | 1998 – 1999 | ABS | ● | ● | ● | ● | 0x0008 |
| Escort | 2.0L | Zetec | 1998 – 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Escort | 2.0L | Zetec | 1998 – 2003 | ECS | ● | ● | ● | ● | ○ |
| Escort | 2.0L | Zetec | 1998 – 2003 | PATS | ● | ● | ● | ● | ○ |
| Escort | 2.0L | Zetec | 1998 – 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escort | 2.0L | Zetec | 1998 – 2003 | RAP | ● | ● | ● | ● | 0x000A |
| Everest / Endeavour | 2.5L | WL-CD | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| Everest / Endeavour | 2.5L | WL-CD | 2007 | PCM | ● | ● | ● | ● | 0x0055 0x0080 0x0081 0x0082 0x0083 0x00CE |
| Everest / Endeavour | 2.5L | WL-CD | 2007 | RCM | ● | ● | ● | ● | ○ |
| Everest / Endeavour | 2.5L | WL-CD | 2007 | TCM | ● | ● | ● | ● | ○ |
| Everest / Endeavour | 2.6L | G6 | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| Everest / Endeavour | 2.6L | G6 | 2007 | PCM | ● | ● | ● | ● | ○ |
| Everest / Endeavour | 2.6L | G6 | 2007 | RCM | ● | ● | ● | ● | ○ |
| Everest / Endeavour | 3.0L | WE-CD | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| Everest / Endeavour | 3.0L | WE-CD | 2007 | PCM | ● | ● | ● | ● | 0x0055 0x0080 0x0081 0x0082 0x0083 0x00CE |
| Everest / Endeavour | 3.0L | WE-CD | 2007 | RCM | ● | ● | ● | ● | ○ |
| Everest / Endeavour | 3.0L | WE-CD | 2007 | TCM | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | 2V | 2004 | ECS | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | 2V | 2004 – 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| Excursion | 5.4L | 2V | 2004 – 2005 | DSM | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | 2V | 2004 – 2005 | EATC | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | 2V | 2004 – 2005 | GEM | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | 2V | 2004 – 2005 | HEC | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | 2V | 2004 – 2005 | OTC | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | 2V | 2004 – 2005 | PAM | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | 2V | 2004 – 2005 | PATS | ● | ● | ● | ● | 0x0009 |
| Excursion | 5.4L | 2V | 2004 – 2005 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Excursion | 5.4L | 2V | 2004 – 2005 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Excursion | 5.4L | 2V | 2005 | RCM | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | Other | 2000 | MC | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | Other | 2000 – 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Excursion | 5.4L | Other | 2000 – 2003 | ECS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------|----------|--------------------------|-------------|---------|------------|-------------|-----------|-------------|--|
| Excursion | 5.4L | Other | 2000 - 2003 | GEM | ● | ● | ● | ● | 0x000F |
| Excursion | 5.4L | Other | 2000 - 2003 | PAM | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | Other | 2000 - 2003 | PATS | ● | ● | ● | ● | 0x0009 |
| Excursion | 5.4L | Other | 2000 - 2003 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Excursion | 5.4L | Other | 2002 | CSM | ● | ● | ● | ● | 0x000A 0x000F |
| Excursion | 5.4L | Other | 2002 - 2003 | DSM | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | Other | 2002 - 2003 | EATC | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | Other | 2002 - 2003 | HEC | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | Other | 2002 - 2003 | OTC | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | Other | 2003 | FOH | ● | ● | ● | ● | ○ |
| Excursion | 5.4L | Other | 2003 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 | FOH | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2004 | ECS | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | DSM | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | EATC | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | GEM | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | HEC | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | OTC | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | PAM | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | PATS | ● | ● | ● | ● | 0x0009 |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5 0x0084 |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | TCM | ● | ● | ● | ● | ○ |
| Excursion | 6.0L | Direct Injection - Turbo | 2003 - 2005 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Excursion | 6.0L | Direct Injection - Turbo | 2005 | RCM | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | 2V | 2004 | ECS | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | 2V | 2004 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| Excursion | 6.8L | 2V | 2004 - 2005 | DSM | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | 2V | 2004 - 2005 | EATC | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | 2V | 2004 - 2005 | GEM | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | 2V | 2004 - 2005 | HEC | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | 2V | 2004 - 2005 | OTC | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | 2V | 2004 - 2005 | PAM | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | 2V | 2004 - 2005 | PATS | ● | ● | ● | ● | 0x0009 |
| Excursion | 6.8L | 2V | 2004 - 2005 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Excursion | 6.8L | 2V | 2004 - 2005 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Excursion | 6.8L | 2V | 2005 | RCM | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | Other | 2000 | MC | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | Other | 2000 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Excursion | 6.8L | Other | 2000 - 2003 | ECS | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | Other | 2000 - 2003 | GEM | ● | ● | ● | ● | 0x000F |
| Excursion | 6.8L | Other | 2000 - 2003 | PAM | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | Other | 2000 - 2003 | PATS | ● | ● | ● | ● | 0x0009 |
| Excursion | 6.8L | Other | 2000 - 2003 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Excursion | 6.8L | Other | 2002 | CSM | ● | ● | ● | ● | 0x000A 0x000F |
| Excursion | 6.8L | Other | 2002 - 2003 | DSM | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | Other | 2002 - 2003 | EATC | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | Other | 2002 - 2003 | HEC | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | Other | 2002 - 2003 | OTC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|------------|----------|--------------------------|-------------|---------|------------|-------------|-----------|-------------|--|
| Excursion | 6.8L | Other | 2003 | FOH | ● | ● | ● | ● | ○ |
| Excursion | 6.8L | Other | 2003 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Excursion | 7.3L | Direct Injection - Turbo | 2000 | MC | ● | ● | ● | ● | ○ |
| Excursion | 7.3L | Direct Injection - Turbo | 2000 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Excursion | 7.3L | Direct Injection - Turbo | 2000 - 2003 | ECS | ● | ● | ● | ● | ○ |
| Excursion | 7.3L | Direct Injection - Turbo | 2000 - 2003 | GEM | ● | ● | ● | ● | 0x000F |
| Excursion | 7.3L | Direct Injection - Turbo | 2000 - 2003 | PAM | ● | ● | ● | ● | ○ |
| Excursion | 7.3L | Direct Injection - Turbo | 2000 - 2003 | PATS | ● | ● | ● | ● | 0x0009 |
| Excursion | 7.3L | Direct Injection - Turbo | 2000 - 2003 | PCM | ● | ● | ● | ● | 0x0010 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 |
| Excursion | 7.3L | Direct Injection - Turbo | 2002 | CSM | ● | ● | ● | ● | 0x000A 0x000F |
| Excursion | 7.3L | Direct Injection - Turbo | 2002 - 2003 | DSM | ● | ● | ● | ● | ○ |
| Excursion | 7.3L | Direct Injection - Turbo | 2002 - 2003 | EATC | ● | ● | ● | ● | ○ |
| Excursion | 7.3L | Direct Injection - Turbo | 2002 - 2003 | HEC | ● | ● | ● | ● | ○ |
| Excursion | 7.3L | Direct Injection - Turbo | 2002 - 2003 | OTC | ● | ● | ● | ● | ○ |
| Excursion | 7.3L | Direct Injection - Turbo | 2003 | FOH | ● | ● | ● | ● | ○ |
| Excursion | 7.3L | Direct Injection - Turbo | 2003 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Expedition | 4.6L | 2V | 2003 - 2004 | 4X4 | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | 2V | 2003 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Expedition | 4.6L | 2V | 2003 - 2004 | DCSM | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | 2V | 2003 - 2004 | DSM | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | 2V | 2003 - 2004 | EATC | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | 2V | 2003 - 2004 | HEC | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | 2V | 2003 - 2004 | PAM | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | 2V | 2003 - 2004 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Expedition | 4.6L | 2V | 2003 - 2004 | PCSM | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | 2V | 2003 - 2004 | RCM | ● | ● | ● | ● | 0x000C |
| Expedition | 4.6L | 2V | 2003 - 2004 | TPM | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | 2V | 2003 - 2004 | VDM | ● | ● | ● | ● | 0x000E 0x0013 0x0014 |
| Expedition | 4.6L | 2V | 2003 - 2004 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Expedition | 4.6L | Other | 1997 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | Other | 1997 - 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Expedition | 4.6L | Other | 1997 - 2000 | 4WAS | ● | ● | ● | ● | 0x000E |
| Expedition | 4.6L | Other | 1997 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Expedition | 4.6L | Other | 1997 - 2000 | GEM | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | Other | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Expedition | 4.6L | Other | 1997 - 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Expedition | 4.6L | Other | 1998 | RCC | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | Other | 1999 - 2000 | EATC | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | Other | 1999 - 2000 | HEC | ● | ● | ● | ● | 0x0009 |
| Expedition | 4.6L | Other | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | Other | 2000 | DSM | ● | ● | ● | ● | ○ |
| Expedition | 4.6L | Other | 2000 | PAM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 2V | 2003 - 2004 | 4X4 | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 2V | 2003 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Expedition | 5.4L | 2V | 2003 - 2004 | DCSM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 2V | 2003 - 2004 | DSM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 2V | 2003 - 2004 | EATC | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 2V | 2003 - 2004 | HEC | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 2V | 2003 - 2004 | PAM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|------------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Expedition | 5.4L | 2V | 2003 - 2004 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Expedition | 5.4L | 2V | 2003 - 2004 | PCSM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 2V | 2003 - 2004 | RCM | ● | ● | ● | ● | 0x000C |
| Expedition | 5.4L | 2V | 2003 - 2004 | TPM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 2V | 2003 - 2004 | VDM | ● | ● | ● | ● | 0x000E 0x0013 0x0014 |
| Expedition | 5.4L | 2V | 2003 - 2004 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Expedition | 5.4L | 3V | 2005 - 2006 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Expedition | 5.4L | 3V | 2005 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 3V | 2005 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 3V | 2005 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 3V | 2005 - 2014 | ABS | ● | ● | ● | ● | 0x0012 0x0008 |
| Expedition | 5.4L | 3V | 2005 - 2014 | DCSM | ● | ● | ● | ● | 0xF070 |
| Expedition | 5.4L | 3V | 2005 - 2014 | DSM | ● | ● | ● | ● | 0xF041 0xF06C 0xF06D 0xF06F |
| Expedition | 5.4L | 3V | 2005 - 2014 | IC | ● | ● | ● | ● | 0xF041 0xF044 0xF04A 0xF04D 0xF06B 0xF06E 0x0009 0x0023 0x0080 0x0081 0x0082 0x0083 0x0083 0x0084 0x0009 0x0010 0x0024 0x0025 0x0028 0x0031 0x0033 0x00C5 0x0067 |
| Expedition | 5.4L | 3V | 2005 - 2014 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0083 0x0084 0x0009 0x0010 0x0024 0x0025 0x0028 0x0031 0x0033 0x00C5 0x0067 |
| Expedition | 5.4L | 3V | 2005 - 2014 | RCM | ● | ● | ● | ● | 0xF022 0xF05D 0x000C |
| Expedition | 5.4L | 3V | 2005 - 2014 | VDM | ● | ● | ● | ● | 0x000E 0x0013 0x0014 |
| Expedition | 5.4L | 3V | 2007 | GEM | ● | ● | ● | ● | 0xF03C 0xF042 0xF049 0xF05C 0xF060 0xF068 0xF069 0xF06A |
| Expedition | 5.4L | 3V | 2007 - 2011 | TCM | ● | ● | ● | ● | 0x00CE |
| Expedition | 5.4L | 3V | 2007 - 2012 | RETM | ● | ● | ● | ● | 0xF04D 0xF05A |
| Expedition | 5.4L | 3V | 2007 - 2014 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Expedition | 5.4L | 3V | 2007 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 3V | 2007 - 2014 | LTM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 3V | 2007 - 2014 | RCU | ● | ● | ● | ● | 0xF05A |
| Expedition | 5.4L | 3V | 2007 - 2014 | SDARS | ● | ● | ● | ● | 0x0019 |
| Expedition | 5.4L | 3V | 2008 - 2014 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 0x000A |
| Expedition | 5.4L | 3V | 2008 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 3V | 2008 - 2014 | PRB | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 3V | 2009 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Expedition | 5.4L | 3V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Expedition | 5.4L | 3V | 2010 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | 3V | 2013 - 2014 | TBC | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | Other | 1997 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | Other | 1997 - 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Expedition | 5.4L | Other | 1997 - 2000 | 4WAS | ● | ● | ● | ● | 0x000E |
| Expedition | 5.4L | Other | 1997 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Expedition | 5.4L | Other | 1997 - 2000 | GEM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | Other | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Expedition | 5.4L | Other | 1997 - 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Expedition | 5.4L | Other | 1998 | RCC | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | Other | 1999 - 2000 | EATC | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | Other | 1999 - 2000 | HEC | ● | ● | ● | ● | 0x0009 |
| Expedition | 5.4L | Other | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | Other | 2000 | DSM | ● | ● | ● | ● | ○ |
| Expedition | 5.4L | Other | 2000 | PAM | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | ABS | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | ACM | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | APIM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|------------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| Expedition | Other | Other | 2013 | DCSM | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | DSM | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | DSP | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | GEM / SJB | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | HVAC | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | IC | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | LTM | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | PCM | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | PRB | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | RCM | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | RCU | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | SDARS | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | TBC | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | TCCM | ● | ● | ● | ● | ○ |
| Expedition | Other | Other | 2013 | VDM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | ACM | ● | ● | ● | ○ | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | BCM#1 | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x00D5 0x00FE 0x0009 0x00D4 |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | HVAC | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0024 0x0038 |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | SCCM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | TCM | ● | ● | ● | ● | 0x0038 0x0010 0x0028 0x0031 0x0033 |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | ATCM | ● | ● | ● | ○ | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | CLM#1 | ● | ● | ● | ○ | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | FLM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | LTM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | PAM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GFM | ● | ● | ● | ● | ○ |
| Explorer | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ACM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HVAC | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCCM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | ATCM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | CLM#1 | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FLM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GFM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | LTM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PSCM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | ACM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | BCM#1 | ● | ● | ● | ● | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | HVAC | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | PCM | ● | ● | ● | ● | 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0108 |
| Explorer | 3.5L | TiVCT | 2011 - 2013 | SCCM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | ATCM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | CLM#1 | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | FLM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|------------|-------------|--------|------------|-------------|-----------|-------------|--|
| Explorer | 3.5L | TiVCT | 2011 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | LTM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | PAM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2011 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Explorer | 3.5L | TiVCT | 2013 - 2014 | GFM | ● | ● | ● | ● | ○ |
| Explorer | 3.5L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer | 3.7L | TiVCT | 2013 | ACM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| Explorer | 3.7L | TiVCT | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Explorer | 3.7L | TiVCT | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 | HVAC | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| Explorer | 3.7L | TiVCT | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Explorer | 3.7L | TiVCT | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Explorer | 3.7L | TiVCT | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 |
| Explorer | 3.7L | TiVCT | 2013 | SCCM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | ATCM | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | CLM#1 | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | FLM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | GFM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | LTM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | PSCM | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Explorer | 3.7L | TiVCT | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Explorer | 4.0L | 2V | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Explorer | 4.0L | 2V | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C |
| Explorer | 4.0L | 2V | 2006 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Explorer | 4.0L | 2V | 2006 - 2010 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Explorer | 4.0L | 2V | 2006 - 2010 | ACM | ● | ● | ● | ● | 0x0005 0x0016 0x0017 0x0018 0xF05A 0xF073 |
| Explorer | 4.0L | 2V | 2006 - 2010 | DSM | ● | ● | ● | ● | 0xF041 0xF074 0xF075 0x0005 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Explorer | 4. 0L | 2V | 2006 - 2010 | IC | ● | ● | ● | ● | 0x0009 0xF027 0xF040 0xF044 0xF04D 0xF054 0xF06B 0x0005 |
| Explorer | 4. 0L | 2V | 2006 - 2010 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| Explorer | 4. 0L | 2V | 2006 - 2010 | PAM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | 2V | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6 |
| Explorer | 4. 0L | 2V | 2006 - 2010 | PRB | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | 2V | 2006 - 2010 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Explorer | 4. 0L | 2V | 2006 - 2010 | RETM | ● | ● | ● | ● | 0xF04D 0xF05A 0xF076 |
| Explorer | 4. 0L | 2V | 2006 - 2010 | SDARS | ● | ● | ● | ● | 0x0005 0x0019 |
| Explorer | 4. 0L | 2V | 2008 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Explorer | 4. 0L | 2V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0x0042 0xF042 0xF044 0xF04C |
| Explorer | 4. 0L | 2V | 2008 - 2010 | HVAC | ● | ● | ● | ● | 0x0005 |
| Explorer | 4. 0L | 2V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| Explorer | 4. 0L | Other | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | Other | 1996 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Explorer | 4. 0L | Other | 1996 - 2000 | ARC | ● | ● | ● | ● | 0x000E |
| Explorer | 4. 0L | Other | 1996 - 2000 | EATC | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | Other | 1996 - 2000 | GEM | ● | ● | ● | ● | 0x0203 0x0204 |
| Explorer | 4. 0L | Other | 1996 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Explorer | 4. 0L | Other | 1996 - 2000 | RAP | ● | ● | ● | ● | 0x000F 0x000A |
| Explorer | 4. 0L | Other | 1998 - 2000 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | Other | 1998 - 2000 | PAM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | Other | 1998 - 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Explorer | 4. 0L | Other | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 OHV | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 OHV | 1996 - 1999 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Explorer | 4. 0L | V6 OHV | 1996 - 1999 | ARC | ● | ● | ● | ● | 0x000E |
| Explorer | 4. 0L | V6 OHV | 1996 - 1999 | EATC | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 OHV | 1996 - 1999 | GEM | ● | ● | ● | ● | 0x0203 |
| Explorer | 4. 0L | V6 OHV | 1996 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Explorer | 4. 0L | V6 OHV | 1996 - 1999 | RAP | ● | ● | ● | ● | 0x000F 0x000A |
| Explorer | 4. 0L | V6 OHV | 1998 - 1999 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 OHV | 1998 - 1999 | PAM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 OHV | 1998 - 1999 | PATS | ● | ● | ● | ● | 0x0009 |
| Explorer | 4. 0L | V6 OHV | 1999 | RCM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 SOHC | 1997 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 SOHC | 1997 - 2000 | ARC | ● | ● | ● | ● | 0x000E |
| Explorer | 4. 0L | V6 SOHC | 1997 - 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Explorer | 4. 0L | V6 SOHC | 1997 - 2002 | GEM | ● | ● | ● | ● | 0x0203 0x0204 |
| Explorer | 4. 0L | V6 SOHC | 1997 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer | 4. 0L | V6 SOHC | 1997 - 2005 | EATC | ● | ● | ● | ● | 0x0005 |
| Explorer | 4. 0L | V6 SOHC | 1997 - 2005 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x00C6 0x0024 |
| Explorer | 4. 0L | V6 SOHC | 1998 - 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Explorer | 4. 0L | V6 SOHC | 1998 - 2005 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 SOHC | 1998 - 2005 | PAM | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 SOHC | 1999 | MC | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 SOHC | 1999 - 2005 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| Explorer | 4. 0L | V6 SOHC | 2002 | CSM | ● | ● | ● | ● | 0x000F |
| Explorer | 4. 0L | V6 SOHC | 2002 - 2003 | HEC | ● | ● | ● | ● | ○ |
| Explorer | 4. 0L | V6 SOHC | 2002 - 2005 | 4X4 | ● | ● | ● | ● | 0x0111 |
| Explorer | 4. 0L | V6 SOHC | 2002 - 2005 | IC | ● | ● | ● | ● | 0x0005 0xF027 0xF044 0xF04D 0xF054 0xF071 0xF072 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Explorer | 4.0L | V6 SOHC | 2002 - 2005 | TPM | ● | ● | ● | ● | 0x0005 |
| Explorer | 4.0L | V6 SOHC | 2003 - 2005 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Explorer | 4.0L | V6 SOHC | 2004 - 2005 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x0005 |
| Explorer | 4.6L | 2V | 2002 | CSM | ● | ● | ● | ● | 0x000F |
| Explorer | 4.6L | 2V | 2002 | GEM | ● | ● | ● | ● | 0x0203 0x0204 |
| Explorer | 4.6L | 2V | 2002 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer | 4.6L | 2V | 2002 - 2003 | HEC | ● | ● | ● | ● | ○ |
| Explorer | 4.6L | 2V | 2002 - 2005 | 4X4 | ● | ● | ● | ● | ○ |
| Explorer | 4.6L | 2V | 2002 - 2005 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 4.6L | 2V | 2002 - 2005 | EATC | ● | ● | ● | ● | 0x0005 |
| Explorer | 4.6L | 2V | 2002 - 2005 | IC | ● | ● | ● | ● | 0x0005 |
| Explorer | 4.6L | 2V | 2002 - 2005 | PAM | ● | ● | ● | ● | ○ |
| Explorer | 4.6L | 2V | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x0024 |
| Explorer | 4.6L | 2V | 2002 - 2005 | RCM | ● | ● | ● | ● | 0x000C |
| Explorer | 4.6L | 2V | 2002 - 2005 | TPM | ● | ● | ● | ● | 0x0005 |
| Explorer | 4.6L | 2V | 2003 - 2005 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Explorer | 4.6L | 2V | 2004 - 2005 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer | 4.6L | 3V | 2006 - 2007 | EATC | ● | ● | ● | ● | 0x0005 |
| Explorer | 4.6L | 3V | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C |
| Explorer | 4.6L | 3V | 2006 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Explorer | 4.6L | 3V | 2006 - 2010 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Explorer | 4.6L | 3V | 2006 - 2010 | ACM | ● | ● | ● | ● | 0x0005 0x0016 0x0017 0x0018 0xF04D 0xF05A 0xF073 |
| Explorer | 4.6L | 3V | 2006 - 2010 | DSM | ● | ● | ● | ● | 0x0005 0xF041 0xF074 0xF075 |
| Explorer | 4.6L | 3V | 2006 - 2010 | IC | ● | ● | ● | ● | 0x0009 0xF044 0x0005 0xF027 0xF04D 0xF054 |
| Explorer | 4.6L | 3V | 2006 - 2010 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| Explorer | 4.6L | 3V | 2006 - 2010 | PAM | ● | ● | ● | ● | 0x0005 |
| Explorer | 4.6L | 3V | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6 |
| Explorer | 4.6L | 3V | 2006 - 2010 | PRB | ● | ● | ● | ● | ○ |
| Explorer | 4.6L | 3V | 2006 - 2010 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Explorer | 4.6L | 3V | 2006 - 2010 | RETM | ● | ● | ● | ● | 0x0005 0xF04D 0xF05A 0xF076 |
| Explorer | 4.6L | 3V | 2006 - 2010 | SDARS | ● | ● | ● | ● | 0x0005 0x0019 |
| Explorer | 4.6L | 3V | 2006 - 2010 | TCM | ● | ● | ● | ● | 0x00CE |
| Explorer | 4.6L | 3V | 2008 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Explorer | 4.6L | 3V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x0005 0xF042 0xF044 0xF04C |
| Explorer | 4.6L | 3V | 2008 - 2010 | HVAC | ● | ● | ● | ● | 0x0005 |
| Explorer | 4.6L | 3V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| Explorer | 5.0L | Other | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Explorer | 5.0L | Other | 1996 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0005 |
| Explorer | 5.0L | Other | 1996 - 2000 | EATC | ● | ● | ● | ● | ○ |
| Explorer | 5.0L | Other | 1996 - 2000 | GEM | ● | ● | ● | ● | 0x0203 0x0005 0x0204 |
| Explorer | 5.0L | Other | 1996 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Explorer | 5.0L | Other | 1996 - 2000 | RAP | ● | ● | ● | ● | 0x000F 0x000A 0x0005 0xF044 |
| Explorer | 5.0L | Other | 1997 - 2000 | ARC | ● | ● | ● | ● | 0x000E |
| Explorer | 5.0L | Other | 1998 - 2000 | DSM | ● | ● | ● | ● | ○ |
| Explorer | 5.0L | Other | 1998 - 2000 | PAM | ● | ● | ● | ● | ○ |
| Explorer | 5.0L | Other | 1998 - 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Explorer | 5.0L | Other | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | APIM | ● | ● | ● | ○ | ○ |
| Explorer | Other | Other | 2014 | ATCM | ● | ● | ● | ○ | ○ |
| Explorer | Other | Other | 2014 | CLM#1 | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Explorer | Other | Other | 2014 | DCSM | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | DSM | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | DSP | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Explorer | Other | Other | 2014 | FLM | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | GFM | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Explorer | Other | Other | 2014 | HSWM | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | HUD | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | LTM | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | PAM | ● | ● | ● | ○ | ○ |
| Explorer | Other | Other | 2014 | PSCM | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | RCM | ● | ● | ● | ○ | ○ |
| Explorer | Other | Other | 2014 | RFA | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | RLCM-A | ● | ● | ● | ● | ○ |
| Explorer | Other | Other | 2014 | RTM | ● | ● | ● | ○ | ○ |
| Explorer | Other | Other | 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Explorer | Other | Other | 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Explorer Sport | 4.0L | V6 SOHC | 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Explorer Sport | 4.0L | V6 SOHC | 2000 - 2003 | 4X4 | ● | ● | ● | ● | ○ |
| Explorer Sport | 4.0L | V6 SOHC | 2000 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Explorer Sport | 4.0L | V6 SOHC | 2000 - 2003 | GEM | ● | ● | ● | ● | 0x0203 0x0204 |
| Explorer Sport | 4.0L | V6 SOHC | 2000 - 2003 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Explorer Sport | 4.0L | V6 SOHC | 2000 - 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Explorer Sport | 4.0L | V6 SOHC | 2000 - 2003 | RCM | ● | ● | ● | ● | 0x000C |
| Explorer SportTrac | 4.0L | 2V | 2007 | EATC | ● | ● | ● | ● | ○ |
| Explorer SportTrac | 4.0L | 2V | 2007 | GEM | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | IC | ● | ● | ● | ● | 0x0009 0xF027 0xF040 0xF044 0xF04D 0xF054 0xF06B 0x0005 |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | PAM | ● | ● | ● | ● | ○ |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6 |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | RETM | ● | ● | ● | ● | 0xF04D 0xF05A |
| Explorer SportTrac | 4.0L | 2V | 2007 - 2010 | SDARS | ● | ● | ● | ● | 0x0005 0x0019 |
| Explorer SportTrac | 4.0L | 2V | 2008 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Explorer SportTrac | 4.0L | 2V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0x0042 0xF042 0xF044 0xF04C |
| Explorer SportTrac | 4.0L | 2V | 2008 - 2010 | HVAC | ● | ● | ● | ● | 0x0005 |
| Explorer SportTrac | 4.0L | 2V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| Explorer SportTrac | 4.0L | V6 SOHC | 2000 - 2003 | GEM | ● | ● | ● | ● | 0x0203 0x0204 |
| Explorer SportTrac | 4.0L | V6 SOHC | 2000 - 2005 | 4X4 | ● | ● | ● | ● | ○ |
| Explorer SportTrac | 4.0L | V6 SOHC | 2000 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Explorer SportTrac | 4.0L | V6 SOHC | 2000 - 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Explorer SportTrac | 4.0L | V6 SOHC | 2000 - 2005 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Explorer SportTrac | 4.0L | V6 SOHC | 2000 - 2005 | RCM | ● | ● | ● | ● | 0x000C |
| Explorer SportTrac | 4.0L | V6 SOHC | 2004 - 2005 | HEC | ● | ● | ● | ● | ○ |
| Explorer SportTrac | 4.6L | 3V | 2007 | EATC | ● | ● | ● | ● | 0x0005 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|---|
| Explorer SportTrac | 4.6L | 3V | 2007 | GEM | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 0x0005 |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | IC | ● | ● | ● | ● | 0x0009 0xF044 0x0005 0xF027 0xF04D 0xF054 |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | PAM | ● | ● | ● | ● | 0x0005 |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6 |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | RETM | ● | ● | ● | ● | 0x0005 0xF04D 0xF05A |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | SDARS | ● | ● | ● | ● | 0x0005 0x0019 |
| Explorer SportTrac | 4.6L | 3V | 2007 - 2010 | TCM | ● | ● | ● | ● | 0x00CE |
| Explorer SportTrac | 4.6L | 3V | 2008 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Explorer SportTrac | 4.6L | 3V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x0005 0xF042 0xF044 0xF04C |
| Explorer SportTrac | 4.6L | 3V | 2008 - 2010 | HVAC | ● | ● | ● | ● | 0x0005 |
| Explorer SportTrac | 4.6L | 3V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | DSP | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | GPSM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | ILCM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0095 0x0010 0x0028 0x0031 0x0033 0x0084 |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | SCCM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x0112 |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | FDIM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x00D0 |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | PAM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | PRB | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | PSCM | ● | ● | ● | ● | 0x00CB |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | TBC | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| F-150 | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | DSP | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | GPSM | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | HVAC | ● | ● | ● | ● | 0x0005 |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | ILCM | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|---|
| F-150 | 3.7L | TiVCT | 2011 - 2012 | SCCM | ● | ● | ● | ● | 0x0005 |
| F-150 | 3.7L | TiVCT | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x0112 |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | DSM | ● | ● | ● | ● | 0x0005 |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | FDIM | ● | ● | ● | ● | 0x0005 |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x0005 0x00D0 |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | PAM | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | PRB | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | PSCM | ● | ● | ● | ● | 0x0005 0x00CB |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | TBC | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2011 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| F-150 | 3.7L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| F-150 | 4.2L | 2V | 2005 - 2007 | EATC | ● | ● | ● | ● | ○ |
| F-150 | 4.2L | 2V | 2005 - 2008 | 4X4 | ● | ● | ● | ● | ○ |
| F-150 | 4.2L | 2V | 2005 - 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x000B |
| F-150 | 4.2L | 2V | 2005 - 2008 | DSM | ● | ● | ● | ● | ○ |
| F-150 | 4.2L | 2V | 2005 - 2008 | IC | ● | ● | ● | ● | 0xF071 |
| F-150 | 4.2L | 2V | 2005 - 2008 | PAM | ● | ● | ● | ● | ○ |
| F-150 | 4.2L | 2V | 2005 - 2008 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 | 4.2L | 2V | 2005 - 2008 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| F-150 | 4.2L | 2V | 2005 - 2008 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 4.2L | 2V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| F-150 | 4.2L | 2V | 2008 | RETM | ● | ● | ● | ● | 0x0018 |
| F-150 | 4.2L | Other | 1997 - 2000 | IAB | ● | ● | ● | ● | ○ |
| F-150 | 4.2L | Other | 1997 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| F-150 | 4.2L | Other | 1997 - 2006 | GEM | ● | ● | ● | ● | ○ |
| F-150 | 4.2L | Other | 1997 - 2006 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| F-150 | 4.2L | Other | 1997 - 2006 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 4.2L | Other | 1999 - 2006 | IC | ● | ● | ● | ● | 0x0009 |
| F-150 | 4.2L | Other | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2003 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| F-150 | 4.6L | 2V | 2003 - 2005 | GEM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2003 - 2005 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 4.6L | 2V | 2003 - 2010 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF071 0xF077 |
| F-150 | 4.6L | 2V | 2003 - 2010 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0010 0x0028 0x0031 0x0033 0x0024 0x0067 |
| F-150 | 4.6L | 2V | 2003 - 2010 | RCM | ● | ● | ● | ● | 0x000C |
| F-150 | 4.6L | 2V | 2004 - 2007 | EATC | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2004 - 2008 | 4X4 | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2004 - 2008 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 4.6L | 2V | 2004 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x000B 0x0005 0x0012 |
| F-150 | 4.6L | 2V | 2004 - 2010 | DSM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2004 - 2010 | PAM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2008 | RETM | ● | ● | ● | ● | 0x0018 |
| F-150 | 4.6L | 2V | 2008 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2009 - 2010 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| F-150 | 4.6L | 2V | 2009 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| F-150 | 4.6L | 2V | 2009 - 2010 | DCSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| F-150 | 4.6L | 2V | 2009 - 2010 | DSP | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2009 - 2010 | FCIM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2009 - 2010 | FDIM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2009 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| F-150 | 4.6L | 2V | 2009 - 2010 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| F-150 | 4.6L | 2V | 2009 - 2010 | PRB | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2009 - 2010 | TBC | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2009 - 2010 | TCCM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 2V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| F-150 | 4.6L | 2V | 2010 | ILCM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| F-150 | 4.6L | 3V | 2009 - 2010 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| F-150 | 4.6L | 3V | 2009 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| F-150 | 4.6L | 3V | 2009 - 2010 | DCSM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | DSM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | DSP | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | FCIM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | FDIM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 |
| F-150 | 4.6L | 3V | 2009 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | IC | ● | ● | ● | ● | 0x0009 |
| F-150 | 4.6L | 3V | 2009 - 2010 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| F-150 | 4.6L | 3V | 2009 - 2010 | PAM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | PCM | ● | ● | ● | ● | 0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 | 4.6L | 3V | 2009 - 2010 | PRB | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | TBC | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | TCCM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2009 - 2010 | TCM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | 3V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| F-150 | 4.6L | 3V | 2010 | ILCM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | Other | 1997 - 2000 | IAB | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | Other | 1997 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-150 | 4.6L | Other | 1997 - 2002 | GEM | ● | ● | ● | ● | ○ |
| F-150 | 4.6L | Other | 1997 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 | 4.6L | Other | 1997 - 2002 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 4.6L | Other | 1999 - 2002 | IC | ● | ● | ● | ● | 0x0009 |
| F-150 | 4.6L | Other | 2002 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TivCT | 2011 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| F-150 | 5.0L | TivCT | 2011 - 2012 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 |
| F-150 | 5.0L | TivCT | 2011 - 2012 | DSP | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TivCT | 2011 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TivCT | 2011 - 2012 | GPSM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TivCT | 2011 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TivCT | 2011 - 2012 | ILCM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TivCT | 2011 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| F-150 | 5.0L | TivCT | 2011 - 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0028 0x0031 0x0033 |
| F-150 | 5.0L | TivCT | 2011 - 2012 | SCCM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TivCT | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TivCT | 2011 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| F-150 | 5.0L | TivCT | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x0112 |
| F-150 | 5.0L | TivCT | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| F-150 | 5.0L | TiVCT | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TiVCT | 2011 - 2014 | FDIM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TiVCT | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x00D0 |
| F-150 | 5.0L | TiVCT | 2011 - 2014 | PAM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TiVCT | 2011 - 2014 | PRB | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TiVCT | 2011 - 2014 | PSCM | ● | ● | ● | ● | 0x00CB |
| F-150 | 5.0L | TiVCT | 2011 - 2014 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TiVCT | 2011 - 2014 | TBC | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TiVCT | 2011 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| F-150 | 5.0L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| F-150 | 5.4L | 2V | 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| F-150 | 5.4L | 2V | 2004 | GEM | ● | ● | ● | ● | 0x0143 |
| F-150 | 5.4L | 2V | 2004 | IC | ● | ● | ● | ● | 0x0009 |
| F-150 | 5.4L | 2V | 2004 | PCM | ● | ● | ● | ● | 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 |
| F-150 | 5.4L | 2V | 2004 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 5.4L | 2V | 2004 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2004 - 2007 | EATC | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2004 - 2008 | 4X4 | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2004 - 2008 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 5.4L | 3V | 2004 - 2010 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x000B 0x0012 |
| F-150 | 5.4L | 3V | 2004 - 2010 | DSM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2004 - 2010 | IC | ● | ● | ● | ● | 0xF071 0x0005 0xF044 0x0009 |
| F-150 | 5.4L | 3V | 2004 - 2010 | PAM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2004 - 2010 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 0x0067 0x00C5 |
| F-150 | 5.4L | 3V | 2004 - 2010 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| F-150 | 5.4L | 3V | 2008 | RETM | ● | ● | ● | ● | 0x0018 |
| F-150 | 5.4L | 3V | 2008 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2009 - 2010 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| F-150 | 5.4L | 3V | 2009 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| F-150 | 5.4L | 3V | 2009 - 2010 | DCSM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2009 - 2010 | DSP | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2009 - 2010 | FCIM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2009 - 2010 | FDIM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2009 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| F-150 | 5.4L | 3V | 2009 - 2010 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| F-150 | 5.4L | 3V | 2009 - 2010 | PRB | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2009 - 2010 | TBC | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2009 - 2010 | TCCM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | 3V | 2009 - 2010 | TCM | ● | ● | ● | ● | 0x00CE |
| F-150 | 5.4L | 3V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| F-150 | 5.4L | 3V | 2010 | ILCM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | BIF | 1998 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-150 | 5.4L | BIF | 1998 - 2000 | AFCM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | BIF | 1998 - 2000 | GEM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | BIF | 1998 - 2000 | IAB | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | BIF | 1998 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0025 0x0084 |
| F-150 | 5.4L | BIF | 1998 - 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 5.4L | BIF | 1999 - 2000 | IC | ● | ● | ● | ● | 0x0009 |
| F-150 | 5.4L | NGV | 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-150 | 5.4L | NGV | 2000 | FIM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | NGV | 2000 | GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| F-150 | 5.4L | NGV | 2000 | IAB | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | NGV | 2000 | IC | ● | ● | ● | ● | 0x0009 |
| F-150 | 5.4L | NGV | 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 | 5.4L | NGV | 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 5.4L | Other | 1997 - 2000 | IAB | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | Other | 1997 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-150 | 5.4L | Other | 1997 - 2003 | GEM | ● | ● | ● | ● | ○ |
| F-150 | 5.4L | Other | 1997 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 | 5.4L | Other | 1997 - 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 | 5.4L | Other | 1999 - 2003 | IC | ● | ● | ● | ● | 0x0009 |
| F-150 | 5.4L | Other | 2002 - 2003 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| F-150 | 6.2L | 2V | 2010 | IC | ● | ● | ● | ● | 0x0009 |
| F-150 | 6.2L | 2V | 2010 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| F-150 | 6.2L | 2V | 2010 - 2012 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 |
| F-150 | 6.2L | 2V | 2010 - 2012 | DSP | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| F-150 | 6.2L | 2V | 2010 - 2012 | HVAC | ● | ● | ● | ● | 0x0005 |
| F-150 | 6.2L | 2V | 2010 - 2012 | IHCM | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| F-150 | 6.2L | 2V | 2010 - 2012 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0095 |
| F-150 | 6.2L | 2V | 2010 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| F-150 | 6.2L | 2V | 2010 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 - 2014 | DSM | ● | ● | ● | ● | 0x0005 |
| F-150 | 6.2L | 2V | 2010 - 2014 | FDIM | ● | ● | ● | ● | 0x0005 |
| F-150 | 6.2L | 2V | 2010 - 2014 | PAM | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 - 2014 | PRB | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 - 2014 | RCM | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 - 2014 | TBC | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2010 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2011 - 2012 | SCCM | ● | ● | ● | ● | 0x0005 |
| F-150 | 6.2L | 2V | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| F-150 | 6.2L | 2V | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x0112 |
| F-150 | 6.2L | 2V | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x0005 0x00D0 |
| F-150 | 6.2L | 2V | 2011 - 2014 | PSCM | ● | ● | ● | ● | 0x0005 0x00CB |
| F-150 | 6.2L | 2V | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| F-150 | Other | Other | 2004 | 4X4 | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2004 | EATC | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2004 | IC | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2004 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| F-150 | Other | Other | 2004 | VSM | ● | ● | ● | ● | 0x000A |
| F-150 | Other | Other | 2004 - 2012 | ABS | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2004 - 2012 | DSM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2004 - 2012 | PAM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2004 - 2012 | RCM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | ACM | ● | ● | ● | ○ | ○ |
| F-150 | Other | Other | 2012 | BCM#1 | ● | ● | ● | ○ | 0x0112 |
| F-150 | Other | Other | 2012 | DCSM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | DSP | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | FCIM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------------------------|----------|----------------|-------------|---------|------------|-------------|-----------|-------------|--|
| F-150 | Other | Other | 2012 | FDIM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | HVAC | ● | ● | ● | ○ | ○ |
| F-150 | Other | Other | 2012 | ILCM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | IPC | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | OCSM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | PRB | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | PSCM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | SCCM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | TBC | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | TCCM | ● | ● | ● | ● | ○ |
| F-150 | Other | Other | 2012 | TPM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 4.6L | 2V | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-150 SuperCrew (4 full size doors) | 4.6L | 2V | 2003 | EATC | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 4.6L | 2V | 2003 | GEM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 4.6L | 2V | 2003 | HEC | ● | ● | ● | ● | 0x0009 |
| F-150 SuperCrew (4 full size doors) | 4.6L | 2V | 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 SuperCrew (4 full size doors) | 4.6L | 2V | 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 SuperCrew (4 full size doors) | 4.6L | 2V | 2003 | RCM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 4.6L | Other | 2001 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-150 SuperCrew (4 full size doors) | 4.6L | Other | 2001 - 2002 | GEM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 4.6L | Other | 2001 - 2002 | HEC | ● | ● | ● | ● | 0x0009 |
| F-150 SuperCrew (4 full size doors) | 4.6L | Other | 2001 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 SuperCrew (4 full size doors) | 4.6L | Other | 2001 - 2002 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 SuperCrew (4 full size doors) | 4.6L | Other | 2001 - 2002 | RCM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 4.6L | Other | 2002 | EATC | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 5.4L | 2V | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-150 SuperCrew (4 full size doors) | 5.4L | 2V | 2003 | EATC | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 5.4L | 2V | 2003 | GEM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 5.4L | 2V | 2003 | HEC | ● | ● | ● | ● | 0x0009 |
| F-150 SuperCrew (4 full size doors) | 5.4L | 2V | 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 SuperCrew (4 full size doors) | 5.4L | 2V | 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 SuperCrew (4 full size doors) | 5.4L | 2V | 2003 | RCM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 5.4L | Other | 2001 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-150 SuperCrew (4 full size doors) | 5.4L | Other | 2001 - 2002 | GEM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 5.4L | Other | 2001 - 2002 | HEC | ● | ● | ● | ● | 0x0009 |
| F-150 SuperCrew (4 full size doors) | 5.4L | Other | 2001 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-150 SuperCrew (4 full size doors) | 5.4L | Other | 2001 - 2002 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-150 SuperCrew (4 full size doors) | 5.4L | Other | 2001 - 2002 | RCM | ● | ● | ● | ● | ○ |
| F-150 SuperCrew (4 full size doors) | 5.4L | Other | 2002 | EATC | ● | ● | ● | ● | ○ |
| F-250 | 3.9L | Cummins Diesel | 2006 | 4X4 | ● | ● | ● | ● | ○ |
| F-250 | 3.9L | Cummins Diesel | 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-250 | 3.9L | Cummins Diesel | 2006 | GEM | ● | ● | ● | ● | ○ |
| F-250 | 3.9L | Cummins Diesel | 2006 | HEC | ● | ● | ● | ● | ○ |
| F-250 | 3.9L | Cummins Diesel | 2006 | OTC | ● | ● | ● | ● | ○ |
| F-250 | 3.9L | Cummins Diesel | 2006 | PAM | ● | ● | ● | ● | ○ |
| F-250 | 3.9L | Cummins Diesel | 2006 | RCM | ● | ● | ● | ● | ○ |
| F-250 | 3.9L | Cummins Diesel | 2006 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| F-250 Light Duty | 4.2L | Other | 1999 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-250 Light Duty | 4.2L | Other | 1999 | GEM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 4.2L | Other | 1999 | IC | ● | ● | ● | ● | 0x0009 |
| F-250 Light Duty | 4.2L | Other | 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| F-250 Light Duty | 4.2L | Other | 1999 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-250 Light Duty | 4.2L | Other | 1999 | RCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|------------------|----------|--------------------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| F-250 Light Duty | 4.6L | Other | 1997 - 1998 | IAB | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 4.6L | Other | 1997 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-250 Light Duty | 4.6L | Other | 1997 - 2000 | GEM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 4.6L | Other | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-250 Light Duty | 4.6L | Other | 1997 - 2000 | RAP | ● | ● | ● | ● | 0x000A |
| F-250 Light Duty | 4.6L | Other | 1999 - 2000 | IC | ● | ● | ● | ● | 0x0009 |
| F-250 Light Duty | 4.6L | Other | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | BIF | 1998 | IAB | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | BIF | 1998 - 1999 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-250 Light Duty | 5.4L | BIF | 1998 - 1999 | AFCM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | BIF | 1998 - 1999 | GEM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | BIF | 1998 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 |
| F-250 Light Duty | 5.4L | BIF | 1998 - 1999 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-250 Light Duty | 5.4L | BIF | 1999 | IC | ● | ● | ● | ● | 0x0009 |
| F-250 Light Duty | 5.4L | BIF | 1999 | RCM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | NGV | 1997 - 1998 | IAB | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | NGV | 1997 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-250 Light Duty | 5.4L | NGV | 1997 - 2000 | FIM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | NGV | 1997 - 2000 | GEM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | NGV | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-250 Light Duty | 5.4L | NGV | 1997 - 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-250 Light Duty | 5.4L | NGV | 1999 - 2000 | IC | ● | ● | ● | ● | 0x0009 |
| F-250 Light Duty | 5.4L | NGV | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | Other | 1997 - 1998 | IAB | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | Other | 1997 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-250 Light Duty | 5.4L | Other | 1997 - 2000 | GEM | ● | ● | ● | ● | ○ |
| F-250 Light Duty | 5.4L | Other | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-250 Light Duty | 5.4L | Other | 1997 - 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| F-250 Light Duty | 5.4L | Other | 1999 - 2000 | IC | ● | ● | ● | ● | 0x0009 |
| F-250 Light Duty | 5.4L | Other | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 5.9L | Cummins Diesel | 2000 - 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-650 / F-750 | 5.9L | Cummins Diesel | 2000 - 2007 | GEM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 6.0L | Direct Injection - Turbo | 2004 - 2007 | GEM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 6.0L | Direct Injection - Turbo | 2005 - 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 6.7L | Cummins Diesel | 2008 - 2012 | GEM / SJB | ● | ● | ● | ○ | ○ |
| F-650 / F-750 | 6.7L | Cummins Diesel | 2011 - 2013 | ACM | ● | ● | ● | ○ | ○ |
| F-650 / F-750 | 6.7L | Cummins Diesel | 2011 - 2013 | HVAC | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 6.7L | Cummins Diesel | 2011 - 2013 | IPC | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 6.7L | Cummins Diesel | 2012 - 2013 | APIM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 6.8L | 3V | 2012 | GEM / SJB | ● | ● | ● | ○ | ○ |
| F-650 / F-750 | 6.8L | 3V | 2012 | PCM | ● | ● | ● | ● | 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-650 / F-750 | 6.8L | 3V | 2012 - 2013 | ACM | ● | ● | ● | ○ | ○ |
| F-650 / F-750 | 6.8L | 3V | 2012 - 2013 | IPC | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 6.8L | 3V | 2012 - 2014 | APIM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 6.8L | 3V | 2012 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 7.2L | Caterpillar Diesel | 2000 - 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-650 / F-750 | 7.2L | Caterpillar Diesel | 2000 - 2007 | GEM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 7.2L | Caterpillar Diesel | 2008 - 2010 | GEM / SJB | ● | ● | ● | ○ | ○ |
| F-650 / F-750 | 7.3L | Direct Injection - Turbo | 2000 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-650 / F-750 | 7.3L | Direct Injection - Turbo | 2000 - 2003 | GEM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | 7.3L | Direct Injection - Turbo | 2000 - 2003 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| F-650 / F-750 | Other | Other | 2005 - 2006 | ABS/TCS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------|----------|--------------------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| F-650 / F-750 | Other | Other | 2005 - 2006 | GEM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | Other | Other | 2013 | ACM | ● | ● | ● | ○ | ○ |
| F-650 / F-750 | Other | Other | 2013 | APIM | ● | ● | ● | ● | ○ |
| F-650 / F-750 | Other | Other | 2013 | HVAC | ● | ● | ● | ● | ○ |
| F-650 / F-750 | Other | Other | 2013 | IPC | ● | ● | ● | ● | ○ |
| F-Series | 4.9L | GFP | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 |
| F-Series | 4.9L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| F-Series | 5.0L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| F-Series | 5.8L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| F-Series | 7.3L | Direct Injection - Turbo | 1994 - 1997 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 |
| F-Series | 7.5L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | FOH | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | HEC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | PATS | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Direct Injection - Turbo | 2003 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 4.2L | Other | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 4.2L | Other | 2001 | ECS | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Other | 2001 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Other | 2001 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Other | 2001 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 4.2L | Other | 2001 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-Series Super Duty | 4.2L | Other | 2001 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| F-Series Super Duty | 5.4L | 2V | 2004 | HEC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2004 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2004 | PATS | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 5.4L | 2V | 2004 - 2006 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2004 - 2006 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 5.4L | 2V | 2004 - 2008 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2004 - 2008 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-Series Super Duty | 5.4L | 2V | 2004 - 2008 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2005 - 2006 | EATC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2005 - 2008 | ABS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 5.4L | 2V | 2005 - 2008 | IC | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 5.4L | 2V | 2005 - 2008 | TBC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2008 | 4X4 | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2008 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| F-Series Super Duty | 5.4L | 2V | 2008 | DSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2008 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| F-Series Super Duty | 5.4L | 2V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2008 | RETM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 2V | 2008 | SDARS | ● | ● | ● | ● | 0x0019 |
| F-Series Super Duty | 5.4L | 3V | 2005 - 2007 | EATC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 3V | 2005 - 2007 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 3V | 2005 - 2007 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 5.4L | 3V | 2005 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0005 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------|----------|--------------------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| F-Series Super Duty | 5.4L | 3V | 2005 - 2010 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF027 0xF04D 0xF07E |
| F-Series Super Duty | 5.4L | 3V | 2005 - 2010 | PAM | ● | ● | ● | ● | 0x0005 |
| F-Series Super Duty | 5.4L | 3V | 2005 - 2010 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| F-Series Super Duty | 5.4L | 3V | 2005 - 2010 | RCM | ● | ● | ● | ● | 0x0005 0xF022 |
| F-Series Super Duty | 5.4L | 3V | 2005 - 2010 | TBC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 3V | 2008 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 3V | 2008 - 2010 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| F-Series Super Duty | 5.4L | 3V | 2008 - 2010 | DSM | ● | ● | ● | ● | 0x0005 0xF041 |
| F-Series Super Duty | 5.4L | 3V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05C 0xF065 0xF06A 0xF080 0xF081 0xF0B0 |
| F-Series Super Duty | 5.4L | 3V | 2008 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | 3V | 2008 - 2010 | RETM | ● | ● | ● | ● | 0x0005 0xF04D 0xF05A |
| F-Series Super Duty | 5.4L | 3V | 2008 - 2010 | SDARS | ● | ● | ● | ● | 0x0019 0x0005 0xF07F |
| F-Series Super Duty | 5.4L | 3V | 2009 - 2010 | APIM | ● | ● | ● | ● | 0x001C 0x0019 |
| F-Series Super Duty | 5.4L | 3V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 5.4L | BIF | 1999 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 5.4L | BIF | 1999 | AFCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | BIF | 1999 | ECS | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | BIF | 1999 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | BIF | 1999 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | BIF | 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 |
| F-Series Super Duty | 5.4L | Other | 1999 - 2001 | ECS | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | Other | 1999 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 5.4L | Other | 1999 - 2003 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | Other | 1999 - 2003 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | Other | 1999 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| F-Series Super Duty | 5.4L | Other | 2000 - 2003 | PATS | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 5.4L | Other | 2001 - 2003 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | Other | 2001 - 2003 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | Other | 2002 | CSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 5.4L | Other | 2002 - 2003 | HEC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | Other | 2003 | FOH | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 5.4L | Other | 2003 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2004 | FOH | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2004 | HEC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2004 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2004 | PATS | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2007 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2007 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2007 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2007 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2007 | TCM | ● | ● | ● | ● | 0x0010 0x0028 0x0031 0x0033 0x00C5 |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2003 - 2007 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2005 - 2007 | ABS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2005 - 2007 | EATC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.0L | Direct Injection - Turbo | 2005 - 2007 | TBC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2012 | ABS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2012 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| F-Series Super Duty | 6.2L | 2V | 2011 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2012 | IPC | ● | ● | ● | ● | 0x00D0 |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2012 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2012 | SDARS | ● | ● | ● | ● | 0x0019 |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x00D4 0x00FE 0x0112 |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | TBC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2011 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.2L | 2V | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.2L | 2V | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | ABS | ● | ● | ● | ● | 0x0005 0xF046 0xF084 |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | ACM | ● | ● | ● | ● | 0x0005 0x0017 0x0018 0xF05A 0xF07A 0xF07F |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | AHCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | CDIM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | DSM | ● | ● | ● | ● | 0x0005 |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF05C 0xF06A 0xF080 0xF081 |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | IC | ● | ● | ● | ● | 0xF027 0xF04D 0xF07E 0xF082 0xF083 |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0047 0x0048 0x0058 0x0080 0x0081 0x0082 0x0083 0x0084 0x00A2 0x00A3 |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | RCM | ● | ● | ● | ● | 0x0005 0xF022 |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | RETM | ● | ● | ● | ● | 0x0005 0xF04D 0xF05A |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | SDARS | ● | ● | ● | ● | 0x0005 0xF07F |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | TBC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2008 - 2010 | TCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2009 - 2010 | APIM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.4L | Power Stroke - Direct Injection Turbo Diesel | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 | NOx#1 | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2012 | ABS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2012 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 0x0005 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2012 | IPC | ● | ● | ● | ● | 0x00D0 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2012 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2012 | SDARS | ● | ● | ● | ● | 0x0005 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2013 | GPCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2013 | PCM | ● | ● | ● | ● | 0x0009 0x0058 0x0059 0x0080 0x0081 0x0082 0x0083 0x0091 0x0093 0x0095 0x009B 0x009C 0x009D 0x009E 0x009F 0x00A0 0x00CE 0x000F 0x0010 0x0028 0x0031 0x0033 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2013 | TCM | ● | ● | ● | ● | 0x0038 0x00CE |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|---|
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | AHCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x00D4 0x00FE 0x0112 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | CDIM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | DCSM | ● | ● | ● | ● | 0x0005 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | RCM | ● | ● | ● | ● | 0x0005 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | SCCM | ● | ● | ● | ● | 0x0005 |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | TBC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2011 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.7L | Power Stroke - Direct Injection Turbo Diesel | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.8L | 2V | 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| F-Series Super Duty | 6.8L | 2V | 2004 | HEC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2004 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2004 | PATS | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 6.8L | 2V | 2004 - 2007 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2004 - 2007 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 6.8L | 2V | 2004 - 2008 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2004 - 2008 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| F-Series Super Duty | 6.8L | 2V | 2004 - 2008 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2005 - 2007 | EATC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2005 - 2008 | ABS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 6.8L | 2V | 2005 - 2008 | IC | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 6.8L | 2V | 2005 - 2008 | TBC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2008 | 4X4 | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2008 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| F-Series Super Duty | 6.8L | 2V | 2008 | DSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2008 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| F-Series Super Duty | 6.8L | 2V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2008 | RETM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 2V | 2008 | SDARS | ● | ● | ● | ● | 0x0019 |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2007 | EATC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2007 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2007 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2010 | IC | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2012 | ABS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2012 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2012 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 0x0067 0x0095 |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2014 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2005 - 2014 | TBC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2008 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| F-Series Super Duty | 6.8L | 3V | 2008 - 2010 | RETM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2008 - 2011 | SDARS | ● | ● | ● | ● | 0x0019 |
| F-Series Super Duty | 6.8L | 3V | 2008 - 2012 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| F-Series Super Duty | 6.8L | 3V | 2008 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2008 - 2014 | DSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2009 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| F-Series Super Duty | 6.8L | 3V | 2010 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.8L | 3V | 2011 - 2012 | IPC | ● | ● | ● | ● | 0x00D0 |
| F-Series Super Duty | 6.8L | 3V | 2011 - 2012 | TPM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x000F 0x0042 0x00D4 0x00FE 0x0112 |
| F-Series Super Duty | 6.8L | 3V | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2011 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2011 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | 3V | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.8L | 3V | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| F-Series Super Duty | 6.8L | Other | 1999 - 2001 | ECS | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | Other | 1999 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 6.8L | Other | 1999 - 2003 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | Other | 1999 - 2003 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | Other | 1999 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| F-Series Super Duty | 6.8L | Other | 2000 - 2001 | AFCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | Other | 2000 - 2003 | PATS | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 6.8L | Other | 2001 - 2003 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | Other | 2001 - 2003 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | Other | 2002 | CSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 6.8L | Other | 2002 - 2003 | HEC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | Other | 2003 | FOH | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 6.8L | Other | 2003 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 1999 - 2001 | ECS | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 1999 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 1999 - 2003 | GEM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 1999 - 2003 | OTC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 1999 - 2003 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 2000 - 2003 | PATS | ● | ● | ● | ● | 0x0009 |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 2001 - 2003 | PAM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 2001 - 2003 | RCM | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 2002 | CSM | ● | ● | ● | ● | 0x000A 0x000F |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 2002 - 2003 | HEC | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 2003 | FOH | ● | ● | ● | ● | ○ |
| F-Series Super Duty | 7.3L | Direct Injection - Turbo | 2003 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| F350/4000 | 3.9L | Cummins Diesel | 2009 | 4X4 | ● | ● | ● | ● | ○ |
| F350/4000 | 3.9L | Cummins Diesel | 2009 | GEM | ● | ● | ● | ● | ○ |
| F350/4000 | 3.9L | Cummins Diesel | 2009 | TBM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.3L | B3 | 1998 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.3L | B3 | 1998 | PCM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.5L | ZL | 1998 - 2000 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.5L | ZL | 1998 - 2002 | PCM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.5L | ZL | 2000 - 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.8L | FP | 1998 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.8L | FP | 1998 | PCM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | FS | 1999 - 2000 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | FS | 1999 - 2002 | PCM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | FS | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | RF | 1998 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | RF | 1998 | PCM | ● | ● | ● | ● | ○ |
| FIGO | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2010 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| FIGO | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2010 | IC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| FIGO | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2010 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| FIGO | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2010 | RCM | ● | ● | ● | ● | ○ |
| FIGO | 1.4L | DURATEC 16V | 2010 - 2011 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| FIGO | 1.4L | DURATEC 16V | 2010 - 2011 | IC | ● | ● | ● | ● | ○ |
| FIGO | 1.4L | DURATEC 16V | 2010 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| FIGO | 1.4L | DURATEC 16V | 2010 - 2011 | RCM | ● | ● | ● | ● | ○ |
| FIGO | 1.4L | DURATEC 16V | 2011 | GEM | ● | ● | ● | ● | ○ |
| FIGO | 1.6L | DURATEC 16V | 2011 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| FIGO | 1.6L | DURATEC 16V | 2011 | GEM | ● | ● | ● | ● | ○ |
| FIGO | 1.6L | DURATEC 16V | 2011 | IC | ● | ● | ● | ● | ○ |
| FIGO | 1.6L | DURATEC 16V | 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| FIGO | 1.6L | DURATEC 16V | 2011 | RCM | ● | ● | ● | ● | ○ |
| FIGO | 1.19L | DURATEC 16V | 2010 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| FIGO | 1.19L | DURATEC 16V | 2010 | IC | ● | ● | ● | ● | ○ |
| FIGO | 1.19L | DURATEC 16V | 2010 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| FIGO | 1.19L | DURATEC 16V | 2010 | RCM | ● | ● | ● | ● | ○ |
| FIGO | Other | DURATEC 16V | 2011 | ABS/TCS | ● | ● | ● | ● | ○ |
| FIGO | Other | DURATEC 16V | 2011 | GEM | ● | ● | ● | ● | ○ |
| FIGO | Other | DURATEC 16V | 2011 | IC | ● | ● | ● | ● | ○ |
| FIGO | Other | DURATEC 16V | 2011 | RCM | ● | ● | ● | ● | ○ |
| FORD GT | 5.4L | 4V | 2005 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| FORD GT | 5.4L | 4V | 2005 - 2006 | AFCM | ● | ● | ● | ● | ○ |
| FORD GT | 5.4L | 4V | 2005 - 2006 | GEM | ● | ● | ● | ● | 0x000A |
| FORD GT | 5.4L | 4V | 2005 - 2006 | IC | ● | ● | ● | ● | ○ |
| FORD GT | 5.4L | 4V | 2005 - 2006 | PATS | ● | ● | ● | ● | 0x0009 |
| FORD GT | 5.4L | 4V | 2005 - 2006 | PCM | ● | ● | ● | ● | 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 |
| FORD GT | 5.4L | 4V | 2005 - 2006 | RCM | ● | ● | ● | ● | ○ |
| FRIENDEE / FREDA / BONGO FRIENDEE | 2.0L | FE | 1997 - 2002 | PCM | ● | ● | ● | ● | ○ |
| FRIENDEE / FREDA / BONGO FRIENDEE | 2.0L | FE | 2002 | TCM | ● | ● | ● | ● | ○ |
| FRIENDEE / FREDA / BONGO FRIENDEE | 2.5L | WL T | 1999 | PCM | ● | ● | ● | ● | ○ |
| Fairlane / LTD | 4.0L | DOHC VCT | 2003 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Fairlane / LTD | 4.0L | DOHC VCT | 2003 - 2006 | ACM | ● | ● | ● | ● | 0x003B 0x0040 |
| Fairlane / LTD | 4.0L | DOHC VCT | 2003 - 2006 | BEM | ● | ● | ● | ● | 0x0005 0x0009 0x0035 0xF002 0xF003 0xF004 0xF005 0xF007 0xF008 0xF009 0xF00A 0xF00D 0xF00E 0xF010 0xF011 |
| Fairlane / LTD | 4.0L | DOHC VCT | 2003 - 2006 | HIM | ● | ● | ● | ● | 0x0005 0x003A |
| Fairlane / LTD | 4.0L | DOHC VCT | 2003 - 2006 | IC | ● | ● | ● | ● | 0x0044 0x005F 0x0061 0x0062 0x0069 0xF006 0xF00B 0xF00C 0xF00F |
| Fairlane / LTD | 4.0L | DOHC VCT | 2003 - 2006 | PAM | ● | ● | ● | ● | 0x0005 |
| Fairlane / LTD | 4.0L | DOHC VCT | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0045 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fairlane / LTD | 4.0L | DOHC VCT | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fairlane / LTD | 4.0L | DOHC VCT | 2006 | ABS | ● | ● | ● | ● | 0x0005 0x0008 |
| Fairlane / LTD | 4.0L | DOHC VCT | 2006 | TCM | ● | ● | ● | ● | ○ |
| Fairlane / LTD | 4.0L | Other | Other | ABS | ● | ● | ● | ● | 0x0008 |
| Fairlane / LTD | 5.0L | Other | Other | ABS | ● | ● | ● | ● | 0x0008 |
| Fairlane / LTD | 5.4L | 3V | 2003 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Fairlane / LTD | 5.4L | 3V | 2003 - 2006 | ACM | ● | ● | ● | ● | 0x003B 0x0040 |
| Fairlane / LTD | 5.4L | 3V | 2003 - 2006 | BEM | ● | ● | ● | ● | 0x0009 0x0035 0xF002 0xF003 0xF004 0xF005 0xF007 0xF008 0xF009 0xF00A 0xF00D 0xF00E 0xF010 0xF011 0x0005 |
| Fairlane / LTD | 5.4L | 3V | 2003 - 2006 | HIM | ● | ● | ● | ● | 0x003A 0x0005 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------|----------|--|-------------|---------|------------|-------------|-----------|-------------|--|
| Fairlane / LTD | 5.4L | 3V | 2003 - 2006 | IC | ● | ● | ● | ● | 0x0044 0x005F 0x0061 0x0062 0x0069 0xF006 0xF00B 0xF00C 0xF00F |
| Fairlane / LTD | 5.4L | 3V | 2003 - 2006 | PAM | ● | ● | ● | ● | 0x0005 |
| Fairlane / LTD | 5.4L | 3V | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0045 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fairlane / LTD | 5.4L | 3V | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fairlane / LTD | 5.4L | 3V | 2006 | ABS | ● | ● | ● | ● | 0x0005 0x0008 |
| Fairlane / LTD | 5.4L | 3V | 2006 | TCM | ● | ● | ● | ● | ○ |
| Fairmont | 4.0L | DOHC VCT | 2003 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Fairmont | 4.0L | DOHC VCT | 2003 - 2006 | ACM | ● | ● | ● | ● | 0x003B 0x0040 |
| Fairmont | 4.0L | DOHC VCT | 2003 - 2006 | BEM | ● | ● | ● | ● | 0x0005 0x0009 0x0035 0xF002 0xF003 0xF004 0xF005 0xF007 0xF008 0xF009 0xF00A 0xF00D 0xF00E 0xF010 0xF011 |
| Fairmont | 4.0L | DOHC VCT | 2003 - 2006 | HIM | ● | ● | ● | ● | 0x0005 0x003A |
| Fairmont | 4.0L | DOHC VCT | 2003 - 2006 | IC | ● | ● | ● | ● | 0x0044 0x005F 0x0061 0x0062 0x0069 0xF006 0xF00B 0xF00C 0xF00F |
| Fairmont | 4.0L | DOHC VCT | 2003 - 2006 | PAM | ● | ● | ● | ● | 0x0005 |
| Fairmont | 4.0L | DOHC VCT | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0045 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fairmont | 4.0L | DOHC VCT | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fairmont | 4.0L | DOHC VCT | 2006 | ABS | ● | ● | ● | ● | 0x0005 0x0008 |
| Fairmont | 4.0L | DOHC VCT | 2006 | TCM | ● | ● | ● | ● | ○ |
| Fairmont | 4.0L | Other | Other | ABS | ● | ● | ● | ● | 0x0008 |
| Fairmont | 5.0L | Other | Other | ABS | ● | ● | ● | ● | 0x0008 |
| Fairmont | 5.4L | 3V | 2003 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Fairmont | 5.4L | 3V | 2003 - 2006 | ACM | ● | ● | ● | ● | 0x003B 0x0040 |
| Fairmont | 5.4L | 3V | 2003 - 2006 | BEM | ● | ● | ● | ● | 0x0009 0x0035 0xF002 0xF003 0xF004 0xF005 0xF007 0xF008 0xF009 0xF00A 0xF00D 0xF00E 0xF010 0xF011 0x0005 |
| Fairmont | 5.4L | 3V | 2003 - 2006 | HIM | ● | ● | ● | ● | 0x003A 0x0005 |
| Fairmont | 5.4L | 3V | 2003 - 2006 | IC | ● | ● | ● | ● | 0x0044 0x005F 0x0061 0x0062 0x0069 0xF006 0xF00B 0xF00C 0xF00F |
| Fairmont | 5.4L | 3V | 2003 - 2006 | PAM | ● | ● | ● | ● | 0x0005 |
| Fairmont | 5.4L | 3V | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0045 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fairmont | 5.4L | 3V | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fairmont | 5.4L | 3V | 2006 | ABS | ● | ● | ● | ● | 0x0005 0x0008 |
| Fairmont | 5.4L | 3V | 2006 | TCM | ● | ● | ● | ● | ○ |
| Festiva | 1.5L | Other | Other | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Festiva Sedan | 1.5L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| Fiesta | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | DDM | ● | ● | ● | ● | ○ |
| Fiesta | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | RCM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | RFA | ● | ● | ● | ○ | ○ |
| Fiesta | 1.0L | GTDI FGEC | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.0L | GTDI FGEC | 2013 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00BC 0x0115 |
| Fiesta | 1.0L | GTDI FGEC | 2013 | TCM | ● | ● | ● | ● | 0x0117 |
| Fiesta | 1.0L | Gasoline Direct injection | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.25L | DURATEC 16V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta | 1.25L | DURATEC 16V | 2002 - 2006 | GEM | ● | ● | ● | ● | 0x0005 0xF02D 0xF030 0xF0A2 0xF0B3 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| Fiesta | 1.25L | DURATEC 16V | 2002 – 2006 | IC | ● | ● | ● | ● | 0x0005 0xF020 |
| Fiesta | 1.25L | DURATEC 16V | 2002 – 2008 | RCM | ● | ● | ● | ● | 0x00F0 0x0102 |
| Fiesta | 1.25L | DURATEC 16V | 2002 – 2013 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00BC |
| Fiesta | 1.25L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta | 1.25L | DURATEC 16V | 2006 – 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.25L | DURATEC 16V | 2006 – 2008 | SRM | ● | ● | ● | ● | ○ |
| Fiesta | 1.25L | DURATEC 16V | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.25L | DURATEC 16V | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.25L | DURATEC 16V | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.25L | DURATEC 16V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.25L | DURATEC 16V | 2008 | IPC | ● | ● | ● | ● | 0x0009 0xF020 |
| Fiesta | 1.25L | DURATEC 16V | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.25L | DURATEC 16V | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.25L | DURATEC 16V | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | BZ | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.3L | BZ | 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | BZ | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | BZ | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.3L | BZ | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | BZ | 2008 | IPC | ● | ● | ● | ● | 0x0009 |
| Fiesta | 1.3L | BZ | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Fiesta | 1.3L | BZ | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.3L | BZ | 2008 | RCM | ● | ● | ● | ○ | 0x00F0 0x0102 |
| Fiesta | 1.3L | BZ | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.3L | BZ | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.3L | DURATEC 8V | 2002 – 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta | 1.3L | DURATEC 8V | 2002 – 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | DURATEC 8V | 2002 – 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | DURATEC 8V | 2002 – 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta | 1.3L | DURATEC 8V | 2002 – 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | DURATEC 8V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | DURATEC 8V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta | 1.3L | DURATEC 8V | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | DURATEC 16V | 2002 – 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta | 1.4L | DURATEC 16V | 2002 – 2006 | GEM | ● | ● | ● | ● | 0x0005 0xF020 0xF030 0xF0A2 0xF0B3 0xF0B6 |
| Fiesta | 1.4L | DURATEC 16V | 2002 – 2006 | IC | ● | ● | ● | ● | 0x0005 0xF020 0xF063 0xF0B5 0xF0B7 |
| Fiesta | 1.4L | DURATEC 16V | 2002 – 2006 | TCM | ● | ● | ● | ● | 0x003F |
| Fiesta | 1.4L | DURATEC 16V | 2002 – 2008 | RCM | ● | ● | ● | ● | 0x00F0 0x0102 |
| Fiesta | 1.4L | DURATEC 16V | 2002 – 2013 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00BC |
| Fiesta | 1.4L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | DURATEC 16V | 2006 – 2008 | ACM | ● | ● | ● | ● | 0x0005 |
| Fiesta | 1.4L | DURATEC 16V | 2006 – 2008 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Fiesta | 1.4L | DURATEC 16V | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.4L | DURATEC 16V | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | DURATEC 16V | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.4L | DURATEC 16V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | DURATEC 16V | 2008 | IPC | ● | ● | ● | ● | 0x0009 0xF020 |
| Fiesta | 1.4L | DURATEC 16V | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.4L | DURATEC 16V | 2008 | RFA | ● | ● | ● | ○ | ○ |
| Fiesta | 1.4L | DURATEC 16V | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 – 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 – 2006 | GEM | ● | ● | ● | ● | 0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 0xF0B7 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 – 2006 | IC | ● | ● | ● | ● | 0xF020 0xF063 0xF0B5 0xF0B7 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | TCM | ● | ● | ● | ● | 0x003F |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RCM | ● | ● | ● | ● | 0x00F0 0x0102 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2008 | ACM | ● | ● | ● | ● | 0x0005 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2008 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | IPC | ● | ● | ● | ● | 0x0009 0xF020 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | IPC | ● | ● | ● | ● | 0x0009 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RCM | ● | ● | ● | ○ | 0x00F0 |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RFA | ● | ● | ● | ○ | ○ |
| Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.5L | BZ | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.5L | BZ | 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | BZ | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | BZ | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.5L | BZ | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | BZ | 2008 | IPC | ● | ● | ● | ● | 0x0009 0xF020 |
| Fiesta | 1.5L | BZ | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Fiesta | 1.5L | BZ | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.5L | BZ | 2008 | RCM | ● | ● | ● | ○ | 0x00F0 0x0102 |
| Fiesta | 1.5L | BZ | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.5L | BZ | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.5L | DURATEC 16V | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | DURATEC 16V | 2013 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | IPC | ● | ● | ● | ● | 0x0009 |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 0x0092 0x0099 0x009A 0x00B4 0x00BC |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RCM | ● | ● | ● | ○ | 0x00F0 0x0102 |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.5L | Duratorq Turbo Diesel Common Rail Injection StgV | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | TivCT | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.5L | TivCT | 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | TivCT | 2008 | BCMii | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|---------|------------|-------------|-----------|-------------|--|
| Fiesta | 1.5L | TiVCT | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.5L | TiVCT | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | TiVCT | 2008 | IPC | ● | ● | ● | ● | 0x0009 |
| Fiesta | 1.5L | TiVCT | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.5L | TiVCT | 2008 | RCM | ● | ● | ● | ○ | 0x00F0 0x0102 |
| Fiesta | 1.5L | TiVCT | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.5L | TiVCT | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.5L | TiVCT | 2008 - 2013 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Fiesta | 1.5L | TiVCT | 2008 - 2013 | TCM | ● | ● | ● | ● | 0x0117 0x0158 |
| Fiesta | 1.5L | TiVCT | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.5L | Zetec-SE | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC 16V | 2002 | TCM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC 16V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta | 1.6L | DURATEC 16V | 2002 - 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC 16V | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC 16V | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta | 1.6L | DURATEC 16V | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC 16V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC 16V | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC VCT | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.6L | DURATEC VCT | 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC VCT | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC VCT | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.6L | DURATEC VCT | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | DURATEC VCT | 2008 | IPC | ● | ● | ● | ● | 0x0009 0xF020 |
| Fiesta | 1.6L | DURATEC VCT | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.6L | DURATEC VCT | 2008 | RCM | ● | ● | ● | ○ | 0x00F0 0x0102 |
| Fiesta | 1.6L | DURATEC VCT | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.6L | DURATEC VCT | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | DURATEC VCT | 2008 - 2013 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x00BC |
| Fiesta | 1.6L | DURATEC VCT | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | EPS | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE 0x0090 0x0098 0x00AA 0x00B0 0x00B1 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RCM | ● | ● | ● | ● | 0x00F0 0x0102 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2008 | ACM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2008 | SRM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | IPC | ● | ● | ● | ● | 0x0009 0xF020 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | BCMii | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | IPC | ● | ● | ● | ● | 0x0009 0xF020 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00B9 0x00BD |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RCM | ● | ● | ● | ○ | 0x00F0 |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RFA | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | DDM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | RCM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | RFA | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | ACM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | BCM#1 | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | FCDIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x012B 0x020A 0x0211 |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC 0x011E |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | RCM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | RFA | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | TCM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | Sigma | 2011 - 2012 | VSM | ● | ● | ● | ● | 0x0042 |
| Fiesta | 1.6L | TDCi ECO II | 2008 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |
| Fiesta | 1.6L | TDCi ECO II | 2008 | ACM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | TDCi ECO II | 2008 | BCMii | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | TDCi ECO II | 2008 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.6L | TDCi ECO II | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | TDCi ECO II | 2008 | IPC | ● | ● | ● | ● | 0x0009 |
| Fiesta | 1.6L | TDCi ECO II | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00BD 0x00C3 |
| Fiesta | 1.6L | TDCi ECO II | 2008 | PSCM | ● | ● | ● | ○ | 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.6L | TDCi ECO II | 2008 | RCM | ● | ● | ● | ○ | 0x00F0 0x0102 |
| Fiesta | 1.6L | TDCi ECO II | 2008 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.6L | TDCi ECO II | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | TDCi ECO II | 2013 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | TivCT | 2008 | BCMii | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | TivCT | 2008 | SRM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | TivCT | 2008 - 2012 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC 0x011E 0x00D7 0x00D8 0x00DA 0x00DC |
| Fiesta | 1.6L | TivCT | 2008 - 2013 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| Fiesta | 1.6L | TiVCT | 2008 – 2013 | ACM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | TiVCT | 2008 – 2013 | FCDIM | ● | ● | ● | ● | 0x00E9 |
| Fiesta | 1.6L | TiVCT | 2008 – 2013 | IPC | ● | ● | ● | ● | 0x0009 |
| Fiesta | 1.6L | TiVCT | 2008 – 2013 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023 |
| Fiesta | 1.6L | TiVCT | 2008 – 2013 | TCM | ● | ● | ● | ● | 0x0117 |
| Fiesta | 1.6L | TiVCT | 2008 – 2014 | HVAC | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | TiVCT | 2008 – 2014 | RCM | ● | ● | ● | ○ | 0x00F0 0x0102 |
| Fiesta | 1.6L | TiVCT | 2008 – 2014 | RFA | ● | ● | ● | ○ | 0x000A |
| Fiesta | 1.6L | TiVCT | 2011 – 2013 | BCM#1 | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | TiVCT | 2011 – 2013 | OCSM | ● | ● | ● | ○ | 0x000C |
| Fiesta | 1.6L | TiVCT | 2011 – 2013 | VSM | ● | ● | ● | ● | 0x0042 |
| Fiesta | 1.6L | TiVCT | 2011 – 2014 | APIM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | TiVCT | 2011 – 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Fiesta | 1.6L | TiVCT | 2014 | DDM | ● | ● | ● | ● | ○ |
| Fiesta | 1.6L | TiVCT | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fiesta / Ikon | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Fiesta / Ikon | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Ikon | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta / Ikon | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Fiesta / Ikon | 1.4 DV4 | Duratorq Turbo Diesel Common Rail Injection | 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta / Ikon | 1.4L | DURATEC 16V | 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Fiesta / Ikon | 1.4L | DURATEC 16V | 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Ikon | 1.4L | DURATEC 16V | 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta / Ikon | 1.4L | DURATEC 16V | 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta / Ikon | 1.4L | DURATEC 16V | 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta / Ikon | 1.6L | DURATEC 16V | 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Fiesta / Ikon | 1.6L | DURATEC 16V | 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Ikon | 1.6L | DURATEC 16V | 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta / Ikon | 1.6L | DURATEC 16V | 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Fiesta / Ikon | 1.6L | DURATEC 16V | 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | HCS | 1996 – 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | HCS | 1996 – 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | HCS | 1996 – 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | HCS | 1996 – 1999 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0023 |
| Fiesta / Mazda 121 / Bantam | 1.0L | HCS | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | Zetec Rocam | 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | Zetec Rocam | 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | Zetec Rocam | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | Zetec Rocam | 1999 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | Zetec Rocam | 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.0L | Zetec Rocam | 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta / Mazda 121 / Bantam | 1.25L | Zetec-SE | 1996 – 2000 | ABS-TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.25L | Zetec-SE | 1996 – 2000 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.25L | Zetec-SE | 1996 – 2000 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.25L | Zetec-SE | 1996 – 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| Fiesta / Mazda 121 / Bantam | 1.25L | Zetec-SE | 1999 – 2000 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.25L | Zetec-SE | 1999 – 2000 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.25L | Zetec-SE | 2000 | PATS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.3L | Endura-E | 1996 – 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.3L | Endura-E | 1996 – 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.3L | Endura-E | 1996 – 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.3L | Endura-E | 1996 – 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| Fiesta / Mazda 121 / Bantam | 1.3L | Endura-E | 1999 | ECS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------|----------|---------------|--------------|---------|------------|-------------|-----------|-------------|---|
| Fiesta / Mazda 121 / Bantam | 1. 3L | Endura-E | 1999 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | 1. 4 PT-E SFI | 1994 - 1996 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | 1. 4 PT-E SFI | 1994 - 1996 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | 1. 4 PT-E SFI | 1994 - 1996 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | PCM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | Zetec-SE | 1996 - 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | Zetec-SE | 1996 - 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | Zetec-SE | 1996 - 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | Zetec-SE | 1996 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| Fiesta / Mazda 121 / Bantam | 1. 4L | Zetec-SE | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | Zetec-SE | 1999 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Other | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Other | 2001 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Other | 2001 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Other | 2001 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Other | 2001 | PATS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Other | 2001 | PCM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec Rocam | 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec Rocam | 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec Rocam | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec Rocam | 1999 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec Rocam | 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec Rocam | 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec-SE | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec-SE | 2000 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec-SE | 2000 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec-SE | 2000 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec-SE | 2000 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 6L | Zetec-SE | 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura DI | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura DI | 2000 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura DI | 2000 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura DI | 2000 | FIP | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura DI | 2000 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura DI | 2000 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura DI | 2000 | PATS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura DI | 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura-DE | 1996 - Other | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura-DE | 1996 - Other | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura-DE | 1996 - Other | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura-DE | 1996 - Other | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura-DE | 1996 - Other | PATS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Endura-DE | 1996 - Other | PCM | ○ | ○ | ● | ○ | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Zetec | 1992 - 1994 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Zetec | 1992 - 1994 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 8L | Zetec | 1992 - 1994 | HEC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1. 25L | DURATEC 16V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta 3-Door | 1. 25L | DURATEC 16V | 2002 - 2006 | GEM | ● | ● | ● | ● | 0x0005 0xF02D 0xF030 0xF0A2 0xF0B3 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| Fiesta 3-Door | 1.25L | DURATEC 16V | 2002 - 2006 | IC | ● | ● | ● | ● | 0x0005 0xF020 |
| Fiesta 3-Door | 1.25L | DURATEC 16V | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta 3-Door | 1.25L | DURATEC 16V | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.25L | DURATEC 16V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.25L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.25L | DURATEC 16V | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.3L | DURATEC 8V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta 3-Door | 1.3L | DURATEC 8V | 2002 - 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.3L | DURATEC 8V | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.3L | DURATEC 8V | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta 3-Door | 1.3L | DURATEC 8V | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.3L | DURATEC 8V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.3L | DURATEC 8V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.3L | DURATEC 8V | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2002 - 2006 | GEM | ● | ● | ● | ● | 0x0005 0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2002 - 2006 | IC | ● | ● | ● | ● | 0x0005 0xF020 0xF063 0xF0B5 0xF0B7 |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2002 - 2006 | TCM | ● | ● | ● | ● | 0x003F |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2006 | ACM | ● | ● | ● | ● | 0x0005 |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.4L | DURATEC 16V | 2006 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | GEM | ● | ● | ● | ● | 0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 0xF0B7 |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | IC | ● | ● | ● | ● | 0xF020 0xF063 0xF0B5 0xF0B7 |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | TCM | ● | ● | ● | ● | 0x003F |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | 0x0005 |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2002 | TCM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2002 - 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | DURATEC 16V | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | EPS | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | GEM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 2.0L | DURATEC-HE / I4 | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fiesta 3-Door | 2.0L | DURATEC-HE / I4 | 2002 - 2006 | GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------------------------|----------|-----------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Fiesta 3-Door | 2.0L | DURATEC-HE / I4 | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 2.0L | DURATEC-HE / I4 | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta 3-Door | 2.0L | DURATEC-HE / I4 | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 2.0L | DURATEC-HE / I4 | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 2.0L | DURATEC-HE / I4 | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fiesta 3-Door | 2.0L | DURATEC-HE / I4 | 2006 | SRM | ● | ● | ● | ● | ○ |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0005 0xF046 |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | ACM | ● | ● | ● | ● | 0x0005 0xF05A 0xF062 0xF063 0xF07F |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | DSM | ● | ● | ● | ● | 0x0005 |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x0005 0xF042 0xF044 0xF048 0xF085 |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | IC | ● | ● | ● | ● | 0x0005 0xF04D 0xF054 0xF099 |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | RCM | ● | ● | ● | ● | 0x0005 0x006D 0xF05D |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | RETM | ● | ● | ● | ● | ○ |
| Five Hundred | 3.0L | 4V | 2006 - 2007 | TCM | ● | ● | ● | ● | ○ |
| Five Hundred | 3.0L | 4V | 2007 | SDARS | ● | ● | ● | ● | ○ |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | 4X4 | ● | ● | ● | ● | ○ |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | ABS | ● | ● | ● | ● | 0x0005 0xF046 |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | ACM | ● | ● | ● | ● | 0x0005 0xF05A 0xF062 0xF063 0xF07F |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | DSM | ● | ● | ● | ● | 0x0005 |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | EATC | ● | ● | ● | ● | ○ |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | GEM | ● | ● | ● | ● | ○ |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | IC | ● | ● | ● | ● | 0x0005 0xF04D 0xF054 0xF099 |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | PAM | ● | ● | ● | ● | ○ |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | RCM | ● | ● | ● | ● | 0x0005 0x006D 0xF05D |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | RETM | ● | ● | ● | ● | ○ |
| Five Hundred (MY05) / Montego (MY05) | 3.0L | 4V | 2005 | TCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 | SECM | ● | ● | ○ | ○ | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | 4X4 | ● | ● | ● | ● | 0x0108 |
| Flex | 3.5L | 4V | 2009 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Flex | 3.5L | 4V | 2009 - 2012 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Flex | 3.5L | 4V | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Flex | 3.5L | 4V | 2009 - 2012 | DCSM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | DSM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | DSP | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| Flex | 3.5L | 4V | 2009 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | IC | ● | ● | ● | ● | 0x0009 |
| Flex | 3.5L | 4V | 2009 - 2012 | LTM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| Flex | 3.5L | 4V | 2009 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | PCM | ● | ● | ● | ● | 0x0024 0x0025 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0023 0x0028 0x0031 0x0033 |
| Flex | 3.5L | 4V | 2009 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2009 - 2012 | RETM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2010 - 2011 | C-CM | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| Flex | 3.5L | 4V | 2010 - 2011 | HUD | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | 4V | 2010 - 2012 | DDM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | 4V | 2010 - 2012 | HCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2010 - 2012 | HCM-2 | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2010 - 2012 | ILCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | 4V | 2010 - 2012 | PSCM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | 4V | 2010 - 2012 | SASM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | 4X4 | ● | ● | ● | ● | 0x0108 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | HCM-2 | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | IC | ● | ● | ● | ● | 0x0005 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | ILCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | RETM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | SASM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | DCSM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | LTM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | ACM | ● | ● | ● | ● | 0x0018 0x0017 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DSM | ● | ● | ● | ● | 0x0005 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | RCM | ● | ● | ● | ● | 0x0005 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPC | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| Flex | 3.5L | TiVCT | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Flex | 3.5L | TiVCT | 2013 | DCSM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| Flex | 3.5L | TiVCT | 2013 | LTM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| Flex | 3.5L | TiVCT | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| Flex | 3.5L | TiVCT | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| Flex | 3.5L | TiVCT | 2013 - 2014 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Flex | 3.5L | TiVCT | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Flex | 3.5L | TiVCT | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | RCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Flex | 3.5L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Flex | 3.5L | TiVCT | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | DCSM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| Flex | Other | Other | 2012 | HCM-2 | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | IC | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | IHCM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | LTM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | OCSM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | RTM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 | SASM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | ABS | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | ACM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | APIM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | HCM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2012 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Flex | Other | Other | 2012 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Flex | Other | Other | 2012 - 2014 | RCM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2014 | HUD | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2014 | RACM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2014 | RFA | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2014 | RTM | ● | ● | ● | ○ | ○ |
| Flex | Other | Other | 2014 | SCCM | ● | ● | ● | ● | ○ |
| Flex | Other | Other | 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Flex | Other | Other | 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|---------|------------|-------------|-----------|-------------|--|
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | ACM | ● | ● | ● | ● | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | APIM | ● | ● | ● | ● | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x00D5 0x0101 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | DDM | ● | ● | ● | ○ | 0x0140 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | FCIM | ● | ● | ● | ● | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | IPC | ● | ● | ● | ● | 0xF020 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | PDM | ● | ● | ● | ○ | 0x0141 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | RCM | ● | ● | ● | ● | 0x0102 |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | SRM | ● | ● | ● | ● | ○ |
| Focus | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2003 | RL DCU | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2003 | RR DCU | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2003 – 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus | 1.4L | DURATEC 16V | 2003 – 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x002B 0x00EB 0x00EC |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | ACM | ● | ● | ● | ● | 0x011A |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | CDP | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | GEM | ● | ● | ● | ● | 0x00ED |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | HCM | ● | ● | ● | ● | 0x0156 0x0155 |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | IC | ● | ● | ● | ● | 0x0009 |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0025 |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | P DCU | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | RCM | ● | ● | ● | ● | 0x00EA |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | RETM | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | RKE | ● | ● | ● | ● | 0x000A |
| Focus | 1.4L | DURATEC 16V | 2003 – 2008 | SRM | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus | 1.4L | DURATEC 16V | 2008 | EPS | ● | ● | ● | ○ | ○ |
| Focus | 1.4L | Zetec-SE | 1999 | CSM | ● | ● | ● | ● | ○ |
| Focus | 1.4L | Zetec-SE | 1999 | CTM | ● | ● | ● | ● | ○ |
| Focus | 1.4L | Zetec-SE | 1999 – 2002 | ABS/TCS | ● | ● | ● | ● | 0x00F1 0x0008 0x0012 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|-------------|-------------|--------|------------|-------------|-----------|-------------|--|
| Focus | 1.4L | Zetec-SE | 1999 - 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 1.4L | Zetec-SE | 1999 - 2002 | HEC | ● | ● | ● | ● | ○ |
| Focus | 1.4L | Zetec-SE | 1999 - 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.4L | Zetec-SE | 1999 - 2002 | PATS | ● | ● | ● | ○ | ○ |
| Focus | 1.4L | Zetec-SE | 1999 - 2002 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x000A 0x0084 |
| Focus | 1.4L | Zetec-SE | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.4L | Zetec-SE | 2002 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.4L | Zetec-SE | 2002 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 1.4L | Zetec-SE | 2002 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | BZ | 2005 | ABS | ● | ● | ● | ● | 0x0012 0x0029 0x002A 0x002C 0x0054 |
| Focus | 1.6L | BZ | 2005 | D DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | BZ | 2005 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | BZ | 2005 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | BZ | 2005 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Focus | 1.6L | BZ | 2005 | IC | ● | ● | ● | ● | 0x0009 |
| Focus | 1.6L | BZ | 2005 | PAM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | BZ | 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6 |
| Focus | 1.6L | BZ | 2005 | P DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | BZ | 2005 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | BZ | 2005 | RL DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | BZ | 2005 | RR DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC 16V | 2003 | RL DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 1.6L | DURATEC 16V | 2003 | RR DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2007 | GDM | ● | ● | ● | ● | 0x0100 0x0005 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC 16V | 2003 - 2007 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x0005 0x002B 0x00EB 0x00EC |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | ACM | ● | ● | ● | ● | 0x011A 0x0005 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | D DCU | ● | ● | ● | ● | 0xF026 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D 0xF033 0xF034 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | HCM | ● | ● | ● | ● | 0x0156 0x0005 0x0155 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | IC | ● | ● | ● | ● | 0x0009 0xF01E 0xF020 0xF028 0xF032 0xF03E |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0025 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | P DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | RCM | ● | ● | ● | ● | 0xF027 0xF031 |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | RKE | ● | ● | ● | ● | 0x0005 0x000A |
| Focus | 1.6L | DURATEC 16V | 2003 - 2008 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Focus | 1.6L | DURATEC 16V | 2006 - 2008 | FTCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC 16V | 2007 | TCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC 16V | 2008 | EPS | ● | ● | ● | ○ | 0x0005 |
| Focus | 1.6L | DURATEC VCT | 2003 | RL DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2003 | RR DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2003 - 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus | 1.6L | DURATEC VCT | 2003 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2003 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|--------------|------------|-------------|-----------|-------------|---|
| Focus | 1.6L | DURATEC VCT | 2003 – 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2003 – 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | DURATEC VCT | 2003 – 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 1.6L | DURATEC VCT | 2003 – 2008 | GEM | ● | ● | ● | ● | 0x00ED 0x0005 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF033 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |
| Focus | 1.6L | DURATEC VCT | 2003 – 2008 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E |
| Focus | 1.6L | DURATEC VCT | 2003 – 2008 | P DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2003 – 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | DURATEC VCT | 2003 – 2008 | RKE | ● | ● | ● | ● | 0x000A 0x0005 |
| Focus | 1.6L | DURATEC VCT | 2003 – 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 0x0008 0x0029 0x002A 0x0030 0x00DD 0x00DE 0x00EB 0x0005 0x00EC |
| Focus | 1.6L | DURATEC VCT | 2003 – 2011 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | DURATEC VCT | 2003 – 2011 | HCM | ● | ● | ● | ○ | 0x0032 0x0155 0x0156 |
| Focus | 1.6L | DURATEC VCT | 2003 – 2011 | PAM | ● | ● | ● | ○ | 0x0005 |
| Focus | 1.6L | DURATEC VCT | 2003 – 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00BC 0x0116 0x0117 0x0025 |
| Focus | 1.6L | DURATEC VCT | 2003 – 2011 | RCM | ● | ● | ● | ● | 0x0102 0x00EA 0xF027 0xF031 |
| Focus | 1.6L | DURATEC VCT | 2003 – 2011 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Focus | 1.6L | DURATEC VCT | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2008 | EPS | ● | ● | ● | ○ | 0x0005 |
| Focus | 1.6L | DURATEC VCT | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 1.6L | DURATEC VCT | 2011 | APIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | BCM <i>i</i> | ● | ● | ● | ● | 0x0009 0x00D5 0x0101 |
| Focus | 1.6L | DURATEC VCT | 2011 | CCM <i>i</i> | ● | ● | ● | ● | 0x00F9 |
| Focus | 1.6L | DURATEC VCT | 2011 | DDM | ● | ● | ● | ○ | 0x00FB 0x0140 |
| Focus | 1.6L | DURATEC VCT | 2011 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | FCIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | IPC | ● | ● | ● | ● | 0xF020 |
| Focus | 1.6L | DURATEC VCT | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 1.6L | DURATEC VCT | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | PDM | ● | ● | ● | ○ | 0x00FC 0x0141 |
| Focus | 1.6L | DURATEC VCT | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 1.6L | DURATEC VCT | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | TCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | DURATEC VCT | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 | RL DCU | ● | ● | ● | ● | 0xF026 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 | RR DCU | ● | ● | ● | ● | 0xF026 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 – 2007 | GDM | ● | ● | ● | ● | 0x0005 0x0100 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 – 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 – 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 – 2008 | D DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 – 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 – 2008 | EPS | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 – 2008 | FACM | ● | ● | ● | ● | 0x0005 0x006B 0x0094 0x00A1 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 – 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | GEM | ● | ● | ● | ● | 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | IC | ● | ● | ● | ● | 0x0009 0xF01E 0xF020 0xF028 0xF032 0xF03E |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | P_DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | RKE | ● | ● | ● | ● | 0x0005 0x000A |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC 0x0053 0x00D9 0x00DB 0x0119 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | HCM | ● | ● | ● | ● | 0x0005 0x0155 0x0156 0x0032 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0096 0x0097 0x0098 0x0099 0x009A 0x020A 0x00B1 0x00B3 0x00B7 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | RCM | ● | ● | ● | ● | 0xF027 0xF031 0x00EA 0x0102 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | APIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x00D5 0x0101 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ○ | 0x0140 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCTM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ○ | 0x0141 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | ACM | ● | ● | ● | ● | 0x0005 0x011A |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | EPS | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | HCM | ● | ● | ● | ○ | 0x0155 0x0156 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | IC | ● | ● | ● | ● | 0x0009 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | PAM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | P DCU | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|---------|------------|-------------|-----------|-------------|---|
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RCM | ● | ● | ● | ● | 0x00EA |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RETM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RKE | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | SRM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | TCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | ACM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | APIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x00D5 0x0101 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | DDM | ● | ● | ● | ○ | 0x00FB 0x0140 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | FCIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PDM | ● | ● | ● | ○ | 0x00FC 0x0141 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RCM | ● | ● | ● | ● | 0x0102 |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SRM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2007 - 2009 | ABS/TCS | ● | ● | ● | ● | 0x0012 0x0008 |
| Focus | 1.6L | FFV | 2007 - 2010 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2007 - 2010 | IC | ● | ● | ● | ● | 0x0009 |
| Focus | 1.6L | FFV | 2007 - 2010 | PCM | ● | ● | ● | ● | 0x0009 0x000A 0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x00AB 0x020A |
| Focus | 1.6L | FFV | 2007 - 2010 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2009 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2009 - 2010 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2009 - 2010 | HCM | ● | ● | ● | ● | 0x0032 0x0155 |
| Focus | 1.6L | FFV | 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002C 0x0030 0x0053 0x00DD 0x00DE 0x00EB 0x00EC |
| Focus | 1.6L | FFV | 2010 | ACM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2010 | D_DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2010 | EPS | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | FFV | 2010 | PAM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2010 | P_DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2010 | RKE | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2010 | SRM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | FFV | 2010 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Focus | 1.6L | FFV | 2010 | TCM | ● | ● | ● | ● | 0x0070 0x00C5 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--------------|------|---------|------------|-------------|-----------|-------------|--|
| Focus | 1.6L | OHC | 2009 | ABS/TCS | ● | ● | ● | ● | 0x0012 |
| Focus | 1.6L | OHC | 2009 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | OHC | 2009 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | OHC | 2009 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 1.6L | OHC | 2009 | IC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | OHC | 2009 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | OHC | 2009 | PCM | ● | ● | ● | ● | 0x0009 0x000A 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Focus | 1.6L | OHC | 2009 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002C 0x0030 0x0053 0x00DD 0x00DE 0x00EB 0x00EC |
| Focus | 1.6L | Sigma | 2010 | ACM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | D DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | EPS | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Sigma | 2010 | GEM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Sigma | 2010 | HCM | ● | ● | ● | ○ | 0x0155 |
| Focus | 1.6L | Sigma | 2010 | IC | ● | ● | ● | ● | 0x0009 |
| Focus | 1.6L | Sigma | 2010 | PAM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x00AB 0x020A |
| Focus | 1.6L | Sigma | 2010 | P DCU | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | RKE | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | SRM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Sigma | 2010 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Focus | 1.6L | Sigma | 2010 | TCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 |
| Focus | 1.6L | TDCi ECO III | 2011 | ACM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 1.6L | TDCi ECO III | 2011 | APIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x00D5 0x0101 |
| Focus | 1.6L | TDCi ECO III | 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| Focus | 1.6L | TDCi ECO III | 2011 | DDM | ● | ● | ● | ○ | 0x0140 |
| Focus | 1.6L | TDCi ECO III | 2011 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | FCIM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| Focus | 1.6L | TDCi ECO III | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | IPC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 1.6L | TDCi ECO III | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0098 0x00AF 0x00B0 0x00B2 0x00B8 0x00BD 0x00C3 |
| Focus | 1.6L | TDCi ECO III | 2011 | PDM | ● | ● | ● | ○ | 0x0141 |
| Focus | 1.6L | TDCi ECO III | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 1.6L | TDCi ECO III | 2011 | RCM | ● | ● | ● | ● | 0x0102 |
| Focus | 1.6L | TDCi ECO III | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 1.6L | TDCi ECO III | 2011 | SRM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|-----------------|-------------|---------|------------|-------------|-----------|-------------|---|
| Focus | 1.6L | TDCi ECO III | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec | 1999 | CSM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec | 1999 | CTM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec | 1999 | PATS | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Zetec | 1999 – 2002 | ABS/TCS | ● | ● | ● | ● | 0x00F1 0x0008 0x0012 |
| Focus | 1.6L | Zetec | 1999 – 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec | 1999 – 2002 | HEC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec | 1999 – 2002 | PCM | ● | ● | ● | ● | 0x0009 0x000A 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Focus | 1.6L | Zetec | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec | 2002 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec | 2002 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 1.6L | Zetec | 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec | 2002 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec Rocam | 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Focus | 1.6L | Zetec Rocam | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec Rocam | 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec Rocam | 2002 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec Rocam | 2002 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 1.6L | Zetec Rocam | 2002 | HEC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec Rocam | 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec Rocam | 2002 | PCM | ● | ● | ● | ● | 0x0009 0x000A 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Focus | 1.6L | Zetec Rocam | 2002 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec-SE | 1999 | CSM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec-SE | 1999 | CTM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec-SE | 1999 – 2002 | ABS/TCS | ● | ● | ● | ● | 0x00F1 0x0008 0x0012 |
| Focus | 1.6L | Zetec-SE | 1999 – 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec-SE | 1999 – 2002 | HEC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec-SE | 1999 – 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec-SE | 1999 – 2002 | PATS | ● | ● | ● | ○ | ○ |
| Focus | 1.6L | Zetec-SE | 1999 – 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x000A 0x0084 |
| Focus | 1.6L | Zetec-SE | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec-SE | 2002 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.6L | Zetec-SE | 2002 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 1.6L | Zetec-SE | 2002 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2005 | RL DCU | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2005 | RR DCU | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2007 | TCM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x0005 0x0012 0x0054 0x00DD 0x00DE 0x00EB 0x00EC |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2008 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2008 | D DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2008 | EPS | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 – 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF025 0xF026 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF033 0xF034 0xF03B 0xF03C 0xF03D |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | HCM | ● | ● | ● | ● | 0x0155 0x0156 0x0005 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF01E 0xF020 0xF028 0xF029 0xF032 0xF03E 0xF03F 0xF040 0xF036 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | PAM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | P_DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | RCM | ● | ● | ● | ● | 0x0005 0xF027 0xF031 0x00EA |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | RKE | ● | ● | ● | ● | 0x000A |
| Focus | 1.8L | DURATEC-HE / I4 | 2003 - 2008 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Focus | 1.8L | DURATEC-HE / I4 | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 | CSM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 | CTM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2002 | HEC | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2002 | ICU | ○ | ○ | ● | ○ | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2008 | PCM | ● | ● | ● | ● | 0x006F 0x0080 0x0081 0x0082 0x0083 0x00B4 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | GEM | ● | ● | ● | ● | 0x00ED 0x0005 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF033 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RCM | ● | ● | ● | ● | 0x00EA 0xF027 0xF031 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 | RL_DCU | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 | RR_DCU | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC 0x0005 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | D_DCU | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | EPS | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | P_DCU | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | RKE | ● | ● | ● | ● | 0x000A 0x0005 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2008 | FACM | ● | ● | ● | ● | 0x0005 0x006B |
| Focus | 1.8L | Endura DI | 1999 | CSM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Endura DI | 1999 | CTM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Endura DI | 1999 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x00F1 0x0008 0x0012 |
| Focus | 1.8L | Endura DI | 1999 - 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Endura DI | 1999 - 2002 | FFH | ● | ● | ● | ● | 0x00CF |
| Focus | 1.8L | Endura DI | 1999 - 2002 | FIP | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Endura DI | 1999 - 2002 | HEC | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Endura DI | 1999 - 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Endura DI | 1999 - 2002 | PATS | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|-----------------|-------------|---------|------------|-------------|-----------|-------------|---|
| Focus | 1.8L | Endura DI | 1999 - 2002 | PCM | ● | ● | ● | ● | 0x0009 0x000A 0x0080 0x0081 0x0082 0x0083 |
| Focus | 1.8L | Endura DI | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Endura DI | 2002 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Endura DI | 2002 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 1.8L | Endura DI | 2002 | RCM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 1999 | CSM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 1999 | CTM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 1999 | PATS | ● | ● | ● | ○ | ○ |
| Focus | 1.8L | Zetec | 1999 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x00F1 |
| Focus | 1.8L | Zetec | 1999 - 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 1999 - 2002 | HEC | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 1999 - 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 1999 - 2002 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0023 0x0025 |
| Focus | 1.8L | Zetec | 2002 | AFCM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 2002 | GEM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 2002 | HCM | ● | ● | ● | ● | ○ |
| Focus | 1.8L | Zetec | 2002 | RCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC 16V | 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Focus | 2.0L | DURATEC 16V | 2005 | EATC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC 16V | 2005 | GEM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC 16V | 2005 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 2.0L | DURATEC 16V | 2005 | IC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC 16V | 2005 | MC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC 16V | 2005 | PCM | ● | ● | ● | ● | 0x0009 0x000A 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Focus | 2.0L | DURATEC 16V | 2005 | RCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 | RL DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 | RR DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2007 | RETM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | D DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | EPS | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | GEM | ● | ● | ● | ● | 0x000A 0x0005 0x00ED 0xF025 0xF026 0xF02A 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF031 0xF034 0xF03B 0xF03C 0xF03D |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | HCM | ● | ● | ● | ● | 0x0005 0x0155 0x0156 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | P DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | RKE | ● | ● | ● | ● | 0x000A 0x0005 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2008 | SRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2011 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x00EB 0x00EC 0x0005 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2011 | ACM | ● | ● | ● | ● | 0x0005 0x0017 0x0018 0xF021 0xF05A 0xF078 0xF079 0xF07A 0xF07B 0xF07C 0xF07D |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2011 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF027 0xF020 |
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|-----------|------------|-------------|-----------|-------------|---|
| Focus | 2.0L | DURATEC-HE / I4 | 2003 - 2011 | RCM | ● | ● | ● | ● | 0x000C 0x0005 0xF027 0xF031 0xF022 0xF05D |
| Focus | 2.0L | DURATEC-HE / I4 | 2006 - 2008 | FTCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC-HE / I4 | 2008 | SDARS | ● | ● | ● | ● | 0xF062 |
| Focus | 2.0L | DURATEC-HE / I4 | 2008 - 2011 | APIM | ● | ● | ● | ○ | 0x0019 0x001C |
| Focus | 2.0L | DURATEC-HE / I4 | 2008 - 2011 | FCIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC-HE / I4 | 2008 - 2011 | FDIM | ● | ● | ● | ● | 0x0005 0xF05A 0xF078 |
| Focus | 2.0L | DURATEC-HE / I4 | 2008 - 2011 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF04B 0xF04C |
| Focus | 2.0L | DURATEC-HE / I4 | 2008 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | DURATEC-HE / I4 | 2008 - 2011 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Focus | 2.0L | DURATEC-HE / I4 | 2010 - 2011 | GPSM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2005 | RL DCU | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2005 | RR DCU | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2007 | GDM | ● | ● | ● | ● | 0x0005 0x0100 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2007 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | EPS | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | FACM | ● | ● | ● | ● | 0x0005 0x006B 0x0094 0x00A1 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | IC | ● | ● | ● | ● | 0x0009 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | P DCU | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2008 | RKE | ● | ● | ● | ● | 0x0005 0x000A |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 0x0005 0x0008 0x0029 0x002A 0x0030 0x00DD 0x00DE 0x00EB 0x00EC 0x0012 0x0054 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | HCM | ● | ● | ● | ○ | 0x0032 0x0155 0x0156 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | PAM | ● | ● | ● | ○ | 0x0005 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00A4 0x00B0 0x00B1 0x00B3 0x00B7 0x00B8 0x00B9 0x00BC 0x00BF 0x00C1 0x00E7 0x0115 0x0116 0x013B 0x00AB |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | RCM | ● | ● | ● | ● | 0x0102 0xF027 0xF031 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2003 - 2011 | SRM | ● | ● | ● | ● | 0xF037 0xF039 0xF03F |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2008 | FTCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | APIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x00D5 0x0101 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ○ | 0x0140 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ○ | 0x0141 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x00D5 0x0101 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | CCMi | ● | ● | ● | ● | 0x00F9 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | ACM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | IPC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | PCM | ● | ● | ● | ● | 0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | ABS | ● | ● | ● | ○ | 0x0012 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | APTM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | DDM | ● | ● | ● | ● | 0x0140 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | ICM#1 | ● | ● | ● | ● | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | PDM | ● | ● | ● | ● | 0x0141 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | RCM | ● | ● | ● | ○ | 0x0102 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ● | 0x00D5 0x0101 |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Focus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | FFV | 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002C 0x0030 0x0053 0x00DD 0x00DE 0x00EB 0x00EC |
| Focus | 2.0L | FFV | 2010 | ACM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | FFV | 2010 | D DCU | ● | ● | ● | ● | ○ |
| Focus | 2.0L | FFV | 2010 | EATC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | FFV | 2010 | EPS | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | FFV | 2010 | GEM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | FFV | 2010 | HCM | ● | ● | ● | ○ | 0x0155 |
| Focus | 2.0L | FFV | 2010 | IC | ● | ● | ● | ● | 0x0009 |
| Focus | 2.0L | FFV | 2010 | PAM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | FFV | 2010 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x00AB 0x020A |
| Focus | 2.0L | FFV | 2010 | P DCU | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---------------------------|-------------|---------|------------|-------------|-----------|-------------|---|
| Focus | 2.0L | FFV | 2010 | RCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | FFV | 2010 | RKE | ● | ● | ● | ● | ○ |
| Focus | 2.0L | FFV | 2010 | SRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | FFV | 2010 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Focus | 2.0L | FFV | 2010 | TCM | ● | ● | ● | ● | 0x0070 0x00C5 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 2.0L | Gasoline Direct injection | 2011 | APIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | CCMi i | ● | ● | ● | ● | 0x00F9 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | DDM | ● | ● | ● | ○ | 0x0140 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | FCIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | PDM | ● | ● | ● | ○ | 0x0141 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | RCM | ● | ● | ● | ● | 0x0102 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | SRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | TCM | ● | ● | ● | ● | 0x0117 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | ACM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus | 2.0L | Gasoline Direct injection | 2011 | BCM i i | ● | ● | ● | ● | 0x0009 0x00D5 0x0101 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | CCMi i | ● | ● | ● | ● | 0x00F9 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | HCM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | PCM | ● | ● | ● | ● | 0x0067 0x0080 0x0081 0x0082 0x0083 0x0115 0x0116 |
| Focus | 2.0L | Gasoline Direct injection | 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | SRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2012 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2012 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2012 | TCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 0x0012 |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | APIM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | DDM | ● | ● | ● | ○ | 0x0140 |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | FCIM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---------------------------|-------------|---------|------------|-------------|-----------|-------------|--|
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | HVAC | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | PDM | ● | ● | ● | ○ | 0x0141 |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | RCM | ● | ● | ● | ● | 0x0102 |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2011 - 2014 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Gasoline Direct injection | 2012 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | SPI | 2000 | CSM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | SPI | 2000 | CTM | ● | ● | ● | ● | 0x000A |
| Focus | 2.0L | SPI | 2000 - 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 2.0L | SPI | 2000 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Focus | 2.0L | SPI | 2000 - 2004 | HEC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | SPI | 2000 - 2004 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x000A 0x0024 |
| Focus | 2.0L | SPI | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | SPI | 2002 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 2.0L | SPI | 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | SPI | 2002 - 2004 | GEM | ● | ● | ● | ● | 0x000A |
| Focus | 2.0L | SPI | 2002 - 2004 | RCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | ZETEC ST | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | ZETEC ST | 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 2.0L | ZETEC ST | 2002 | HCM | ● | ● | ● | ● | 0x0032 |
| Focus | 2.0L | ZETEC ST | 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | ZETEC ST | 2002 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Focus | 2.0L | ZETEC ST | 2002 - 2004 | GEM | ● | ● | ● | ● | 0x000A |
| Focus | 2.0L | ZETEC ST | 2002 - 2004 | HEC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | ZETEC ST | 2002 - 2004 | PCM | ● | ● | ● | ● | 0x0009 0x000A 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Focus | 2.0L | ZETEC ST | 2002 - 2004 | RCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Zetec | 1999 | PATS | ● | ● | ● | ○ | ○ |
| Focus | 2.0L | Zetec | 1999 - 2000 | CSM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Zetec | 1999 - 2000 | CTM | ● | ● | ● | ● | 0x000A |
| Focus | 2.0L | Zetec | 1999 - 2002 | ECS | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Zetec | 1999 - 2002 | MC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Zetec | 1999 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x00F1 0x0008 0x0012 |
| Focus | 2.0L | Zetec | 1999 - 2004 | HEC | ● | ● | ● | ● | 0x0005 |
| Focus | 2.0L | Zetec | 1999 - 2004 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Focus | 2.0L | Zetec | 2002 | EATC | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Zetec | 2002 | HCM | ● | ● | ● | ● | ○ |
| Focus | 2.0L | Zetec | 2002 - 2004 | GEM | ● | ● | ● | ● | 0x0005 0xF02D 0xF02F 0xF030 0xF03A 0xF09E 0xF0A1 0xF0A4 0x000A |
| Focus | 2.0L | Zetec | 2002 - 2004 | RCM | ● | ● | ● | ● | 0x0005 |
| Focus | 2.3L | DURATEC-HE / I4 | 2003 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Focus | 2.3L | DURATEC-HE / I4 | 2003 - 2007 | GEM | ● | ● | ● | ● | 0x000A |
| Focus | 2.3L | DURATEC-HE / I4 | 2003 - 2007 | IC | ● | ● | ● | ● | ○ |
| Focus | 2.3L | DURATEC-HE / I4 | 2003 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Focus | 2.3L | DURATEC-HE / I4 | 2003 - 2007 | RCM | ● | ● | ● | ● | 0x000C |
| Focus | 2.3L | DURATEC-HE / I4 | 2004 | HEC | ● | ● | ● | ● | ○ |
| Focus | 2.3L | DURATEC-HE / I4 | 2005 - 2007 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Focus | 2.5L | Duratec RS | 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0029 0x002A 0x00EB 0x00EC |
| Focus | 2.5L | Duratec RS | 2008 | ACM | ● | ● | ● | ● | 0x0005 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--------------------------|-------------|--------|------------|-------------|-----------|-------------|---|
| Focus | 2.5L | Duratec RS | 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | Duratec RS | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus | 2.5L | Duratec RS | 2008 | D_DCU | ● | ● | ● | ● | ○ |
| Focus | 2.5L | Duratec RS | 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | Duratec RS | 2008 | EPS | ● | ● | ● | ○ | 0x0005 |
| Focus | 2.5L | Duratec RS | 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 2.5L | Duratec RS | 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF033 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |
| Focus | 2.5L | Duratec RS | 2008 | HCM | ● | ● | ● | ○ | 0x0155 0x0156 |
| Focus | 2.5L | Duratec RS | 2008 | IC | ● | ● | ● | ● | 0x0005 0x0009 0x0113 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E |
| Focus | 2.5L | Duratec RS | 2008 | MC | ● | ● | ● | ● | ○ |
| Focus | 2.5L | Duratec RS | 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | Duratec RS | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Focus | 2.5L | Duratec RS | 2008 | P_DCU | ● | ● | ● | ● | ○ |
| Focus | 2.5L | Duratec RS | 2008 | RCM | ● | ● | ● | ● | 0x00EA 0xF027 0xF031 |
| Focus | 2.5L | Duratec RS | 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | Duratec RS | 2008 | RKE | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | Duratec RS | 2008 | SRM | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2003 | RL_DCU | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2003 | RR_DCU | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2003 – 2007 | GDM | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2003 – 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2003 – 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x00EB 0x00EC |
| Focus | 2.5L | I5 | 2003 – 2008 | ACM | ● | ● | ● | ● | 0x011A 0x0005 |
| Focus | 2.5L | I5 | 2003 – 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | I5 | 2003 – 2008 | D_DCU | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2003 – 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | I5 | 2003 – 2008 | EPS | ● | ● | ● | ○ | 0x0005 |
| Focus | 2.5L | I5 | 2003 – 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus | 2.5L | I5 | 2003 – 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED |
| Focus | 2.5L | I5 | 2003 – 2008 | HCM | ● | ● | ● | ○ | 0x0156 0x0155 |
| Focus | 2.5L | I5 | 2003 – 2008 | IC | ● | ● | ● | ● | 0x0009 |
| Focus | 2.5L | I5 | 2003 – 2008 | MC | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2003 – 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | I5 | 2003 – 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Focus | 2.5L | I5 | 2003 – 2008 | P_DCU | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2003 – 2008 | RCM | ● | ● | ● | ● | 0x0005 0x00EA |
| Focus | 2.5L | I5 | 2003 – 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus | 2.5L | I5 | 2003 – 2008 | RKE | ● | ● | ● | ● | 0x0005 0x000A |
| Focus | 2.5L | I5 | 2003 – 2008 | SRM | ● | ● | ● | ● | ○ |
| Focus | 2.5L | I5 | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 | ACCM#2 | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 | BCCM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 | BCM#1 | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 | OCSM | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| Focus | 23kWh | Battery Electric Vehicle | 2012 | PSCM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 – 2013 | ACM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 – 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 – 2013 | IPC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2013 | TCM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | ABS | ● | ● | ● | ○ | 0x0012 0x0074 0x010A |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | BECM | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | DCDC | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | GFM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | GWM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | HCM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | PDM | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | RCM | ● | ● | ● | ○ | 0x00EF |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | RFA | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | SASM | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | SOBDM | ● | ● | ● | ● | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2012 - 2014 | TCU#1 | ● | ● | ● | ○ | ○ |
| Focus | 23kWh | Battery Electric Vehicle | 2013 | BCM i | ● | ● | ● | ● | 0x0101 |
| Focus | Other | Other | 2013 | ABS | ● | ● | ● | ○ | ○ |
| Focus | Other | Other | 2013 | ACM | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | APIM | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | BCM#1 | ● | ● | ● | ● | 0x00D5 0x0101 |
| Focus | Other | Other | 2013 | DDM | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | DSP | ● | ● | ● | ○ | ○ |
| Focus | Other | Other | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | FCIM | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| Focus | Other | Other | 2013 | HVAC | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | IPC | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus | Other | Other | 2013 | OCSM | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | PAM | ● | ● | ○ | ○ | ○ |
| Focus | Other | Other | 2013 | PDM | ● | ● | ● | ● | ○ |
| Focus | Other | Other | 2013 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| Focus | Other | Other | 2013 | RCM | ● | ● | ● | ○ | ○ |
| Focus | Other | Other | 2013 | RFA | ● | ● | ● | ○ | ○ |
| Focus | Other | Other | 2013 | SASM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | DDM | ● | ● | ● | ○ | 0x00FB 0x0140 |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Focus C-MAX | 1.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PDM | ● | ● | ● | ○ | 0x00FC 0x0141 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| Focus C-MAX | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus C-MAX | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | RCM | ● | ● | ● | ● | 0x0102 |
| Focus C-MAX | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| Focus C-MAX | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| Focus C-MAX | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | SRM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2011 | TRM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 | RL DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 | RR DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x002B |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | ACM | ● | ● | ● | ● | 0x011A |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | CDP | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | D DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | EPB | ● | ● | ● | ● | 0x001F |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | GEM | ● | ● | ● | ● | 0x00ED |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | IC | ● | ● | ● | ● | 0x0009 |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0025 |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | P DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | RCM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | RETM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | RKE | ● | ● | ● | ● | 0x000A |
| Focus C-MAX | 1.4L | DURATEC 16V | 2002 – 2007 | SRM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 | RL DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 | RR DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2007 | EPB | ● | ● | ● | ● | 0x001F |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2007 | GDM | ● | ● | ● | ● | 0x0100 0x0005 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x0005 0x002B 0x00EB 0x00EC |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | ACM | ● | ● | ● | ● | 0x011A 0x0005 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D 0xF033 0xF034 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF03E |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0025 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | P DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | RCM | ● | ● | ● | ● | 0xF027 0xF031 0x00EA |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 – 2008 | RKE | ● | ● | ● | ● | 0x0005 0x000A |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|---|-------------|--------|------------|-------------|-----------|-------------|---|
| Focus C-MAX | 1.6L | DURATEC 16V | 2002 - 2008 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Focus C-MAX | 1.6L | DURATEC 16V | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC 16V | 2008 | EPS | ● | ● | ● | ○ | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 | RL DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 | RR DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2007 | EPB | ● | ● | ● | ● | 0x001F |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | GEM | ● | ● | ● | ● | 0x00ED 0x0005 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF033 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | P DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2008 | RKE | ● | ● | ● | ● | 0x000A 0x0005 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0008 0x0029 0x002A 0x0030 0x00DD 0x00DE 0x00EB |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2011 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2011 | HCM | ● | ● | ● | ○ | 0x0032 0x0155 0x0156 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2011 | PAM | ● | ● | ● | ○ | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00BC 0x0116 0x0117 0x0025 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2011 | RCM | ● | ● | ● | ● | 0x0102 0x00EA 0xF027 0xF031 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2002 - 2011 | SRM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2008 | EPS | ● | ● | ● | ○ | 0x0005 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | BCMii | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | DDM | ● | ● | ● | ○ | 0x00FB 0x0140 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | IPC | ● | ● | ● | ● | 0xF020 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | PDM | ● | ● | ● | ○ | 0x00FC 0x0141 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | RGTM | ● | ● | ● | ● | 0x00FD 0x013D |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | SOD-L | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | SOD-R | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | DURATEC VCT | 2011 | TRM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 | RL DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 | RR DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | EPB | ● | ● | ● | ● | 0x001F |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | GDM | ● | ● | ● | ● | 0x0005 0x0100 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | TCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | D_DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | EATC | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | EPS | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | FACM | ● | ● | ● | ● | 0x0005 0x006B 0x0094 0x00A1 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | GEM | ● | ● | ● | ● | 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | IC | ● | ● | ● | ● | 0x0009 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | P_DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RKE | ● | ● | ● | ● | 0x0005 0x000A |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC 0x0053 0x00D9 0x00DB |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | HCM | ● | ● | ● | ● | 0x0155 0x0156 0x0032 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0096 0x0097 0x0098 0x0099 0x009A 0x020A 0x00B1 0x00B3 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3 0x00E7 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | RCM | ● | ● | ● | ● | 0xF027 0xF031 0x00EA 0x0102 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ○ | 0x00FB 0x0140 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | 0xF020 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ○ | 0x00FC 0x0141 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RGTM | ● | ● | ● | ● | 0x00FD 0x013D |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-L | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-R | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | ACM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | BCMii | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | DDM | ● | ● | ● | ○ | 0x00FB 0x0140 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PDM | ● | ● | ● | ○ | 0x00FC 0x0141 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RCM | ● | ● | ● | ● | 0x0102 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RGTM | ● | ● | ● | ● | 0x00FD 0x013D |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SRM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | TRM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 | RL DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 | RR DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2007 | EPB | ● | ● | ● | ● | 0x001F |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2007 | TCM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | EPS | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF025 0xF026 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF033 0xF034 0xF03B 0xF03C 0xF03D |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | PAM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | P DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | RCM | ● | ● | ● | ● | 0x0005 0xF027 0xF031 0x00EA |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | RKE | ● | ● | ● | ● | 0x000A |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2002 - 2008 | SRM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | DURATEC-HE / I4 | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 | RL DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 | RR DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | EPB | ● | ● | ● | ● | 0x001F |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC 0x0005 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | EPS | ● | ● | ● | ● | 0x0005 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|---|-------------|--------|------------|-------------|-----------|-------------|--|
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | GEM | ● | ● | ● | ● | 0x00ED 0x0005 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF03E |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | PCM | ● | ● | ● | ● | 0x006F 0x0080 0x0081 0x0082 0x0083 0x00B4 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | P DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RCM | ● | ● | ● | ● | 0x00EA 0xF027 0xF031 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RKE | ● | ● | ● | ● | 0x000A 0x0005 |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | SRM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus C-MAX | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2008 | FACM | ● | ● | ● | ● | 0x0005 0x006B |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 | RL DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 | RR DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2007 | EPB | ● | ● | ● | ● | 0x001F |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2007 | GDM | ● | ● | ● | ● | 0x0100 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x00EB 0x00EC 0x0005 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | D DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | EPS | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF025 0xF026 0xF02A 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF031 0xF034 0xF03B 0xF03C 0xF03D |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF01E 0xF028 0xF032 0xF03E |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | P DCU | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | RCM | ● | ● | ● | ● | 0x0005 0xF027 0xF031 0x00EA |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | RKE | ● | ● | ● | ● | 0x000A 0x0005 |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2002 - 2008 | SRM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | DURATEC-HE / I4 | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 | RL DCU | ● | ● | ● | ● | 0xF026 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 | RR DCU | ● | ● | ● | ● | 0xF026 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | EPB | ● | ● | ● | ● | 0x0005 0x001F 0xF0B8 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | GDM | ● | ● | ● | ● | 0x0005 0x0100 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | NAV | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | CDP | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | D DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | EPS | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | FACM | ● | ● | ● | ● | 0x0005 0x006B 0x0094 0x00A1 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | IC | ● | ● | ● | ● | 0x0009 0xF01E 0xF020 0xF028 0xF032 0xF03E |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | P_DCU | ● | ● | ● | ● | 0x0005 0xF026 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2008 | RKE | ● | ● | ● | ● | 0x0005 0x000A |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | ABS | ● | ● | ● | ○ | 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0005 0x0008 0x0029 0x002A 0x0030 0x00DD 0x00DE 0x00EB 0x00EC |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | ACM | ● | ● | ● | ● | 0x0005 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | HCM | ● | ● | ● | ○ | 0x0032 0x0155 0x0156 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | PAM | ● | ● | ● | ○ | 0x0005 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00A4 0x00B0 0x00B1 0x00B3 0x00B7 0x00B8 0x00B9 0x00BC 0x00BF 0x00C1 0x00E7 0x0116 0x013B 0x00AB |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | RCM | ● | ● | ● | ● | 0x0102 0xF027 0xF031 0x00EA |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | SRM | ● | ● | ● | ● | 0xF037 0xF039 0xF03F |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | CMR | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 - 2011 | TCM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ○ | 0x00FB 0x0140 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FDSM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | 0xF020 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-B | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ○ | 0x00FC 0x0141 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PSCM | ● | ● | ● | ○ | 0x00DC 0x00DF 0x00E0 0x00E1 |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RFA | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RGTM | ● | ● | ● | ● | 0x00FD 0x013D |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-L | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-R | ● | ● | ● | ○ | ○ |
| Focus C-MAX | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ○ | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | DCSM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | DSM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | IC | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | LPSDM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | LTM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | NGSC | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | PAM | ● | ● | ● | ● | 0x006C |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | PCSM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | RCM | ● | ● | ● | ● | 0x000C |
| Freestar / Monterey | 3.9L | V6 OHV | 2004 - 2007 | RPSDM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2005 | TPM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 3.9L | V6 OHV | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Freestar / Monterey | 4.2L | V6 OHV | 2004 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | DCSM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | DSM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | IC | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | LPSDM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | LTM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | NGSC | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | PAM | ● | ● | ● | ● | 0x006C |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | PCSM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | RCM | ● | ● | ● | ● | 0x000C |
| Freestar / Monterey | 4. 2L | V6 OHV | 2004 - 2007 | RPSDM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2005 | TPM | ● | ● | ● | ● | ○ |
| Freestar / Monterey | 4. 2L | V6 OHV | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | ABS | ● | ● | ● | ● | 0x0005 0xF046 0x0008 |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | ACM | ● | ● | ● | ● | 0x0005 0xF05A 0xF062 0xF063 0xF07F 0x0016 0x0017 0x0018 |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | DSM | ● | ● | ● | ● | 0x0005 |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | GEM | ● | ● | ● | ● | 0x0005 0xF042 0xF044 0xF048 0xF085 0x000A 0x000F |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | IC | ● | ● | ● | ● | 0x0005 0xF04D 0xF054 0xF099 |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | PAM | ● | ● | ● | ● | 0x006C |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 0x0025 0x00C5 |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | RCM | ● | ● | ● | ● | 0x0005 0x006D 0xF05D 0x000C |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | RETM | ● | ● | ● | ● | ○ |
| Freestyle | 3. 0L | 4V | 2005 - 2007 | TCM | ● | ● | ● | ● | ○ |
| Freestyle | 3. 0L | 4V | 2007 | SDARS | ● | ● | ● | ● | 0x0019 |
| Fusion | 1. 25L | DURATEC 16V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fusion | 1. 25L | DURATEC 16V | 2002 - 2006 | GEM | ● | ● | ● | ● | 0x0005 0xF02D 0xF030 0xF0A2 0xF0B3 |
| Fusion | 1. 25L | DURATEC 16V | 2002 - 2006 | IC | ● | ● | ● | ● | 0x0005 0xF020 |
| Fusion | 1. 25L | DURATEC 16V | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fusion | 1. 25L | DURATEC 16V | 2002 - 2006 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1. 25L | DURATEC 16V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fusion | 1. 25L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fusion | 1. 25L | DURATEC 16V | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fusion | 1. 4L | DURATEC 16V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fusion | 1. 4L | DURATEC 16V | 2002 - 2006 | GEM | ● | ● | ● | ● | 0x0005 0xF02D 0xF030 0xF0A2 0xF0B3 |
| Fusion | 1. 4L | DURATEC 16V | 2002 - 2006 | IC | ● | ● | ● | ● | 0x0005 0xF020 |
| Fusion | 1. 4L | DURATEC 16V | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fusion | 1. 4L | DURATEC 16V | 2002 - 2006 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1. 4L | DURATEC 16V | 2002 - 2006 | TCM | ● | ● | ● | ● | 0x003F |
| Fusion | 1. 4L | DURATEC 16V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fusion | 1. 4L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fusion | 1. 4L | DURATEC 16V | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fusion | 1. 4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fusion | 1. 4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | GEM | ● | ● | ● | ● | 0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 0xF0B7 |
| Fusion | 1. 4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | IC | ● | ● | ● | ● | 0xF020 0xF063 0xF0B5 0xF0B7 |
| Fusion | 1. 4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Fusion | 1. 4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | RCM | ● | ● | ○ | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|---------|------------|-------------|-----------|-------------|---|
| Fusion | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | TCM | ● | ● | ● | ● | 0x003F |
| Fusion | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | 0x0005 |
| Fusion | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fusion | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | APIM | ● | ● | ● | ● | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | DSM | ● | ● | ● | ● | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | DSP | ● | ● | ● | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | FCDIM | ● | ● | ● | ● | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | HUD | ● | ● | ● | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | RACM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | RTM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| Fusion | 1.5L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | DURATEC 16V | 2002 | TCM | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | DURATEC 16V | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fusion | 1.6L | DURATEC 16V | 2002 - 2006 | GEM | ● | ● | ● | ● | 0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 0xF0B7 |
| Fusion | 1.6L | DURATEC 16V | 2002 - 2006 | IC | ● | ● | ● | ● | 0xF020 0xF063 0xF0B5 |
| Fusion | 1.6L | DURATEC 16V | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fusion | 1.6L | DURATEC 16V | 2002 - 2006 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | DURATEC 16V | 2006 | ACM | ● | ● | ● | ● | 0x0005 |
| Fusion | 1.6L | DURATEC 16V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | DURATEC 16V | 2006 | SRM | ● | ● | ● | ● | 0xF037 0xF038 0xF039 |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | EPS | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | GEM | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2006 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 | EATC | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ABS | ● | ● | ● | ○ | 0x0008 0x0012 0x00F5 0x010A 0x020C |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ACM | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ● | 0x000F 0x00D4 0x00D5 0x00FE 0x0112 |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | DDM | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GFM | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GWM | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HCM | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HSWM | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | OCSM | ● | ● | ● | ○ | 0x000C |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PAM | ● | ● | ○ | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0023 0x0024 0x0025 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PDM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PSCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | RGTM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | VDM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| Fusion | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ABS | ● | ● | ● | ○ | 0x0008 0x0012 0x00F5 0x010A 0x020C |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ACM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ● | 0x000F 0x00D4 0x00D5 0x00FE 0x0112 |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | DDM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GFM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GWM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HCM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HSWM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | OCSM | ● | ● | ● | ○ | 0x000C |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PAM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PDM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PSCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | RGTM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | VDM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 0x0023 0x0025 0x0038 |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ○ | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 | GWM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | ACCM#2 | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | RACM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | Full Hybrid Electric Vehicle | 2014 | RTM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | ABS | ● | ● | ● | ○ | 0x0074 |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | ACCM#2 | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | ACM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | APIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | BCM#1 | ● | ● | ● | ● | 0x000F 0x00D4 0x00D5 0x00FE |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | BECM | ● | ● | ● | ○ | 0x006E |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | C-CM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | DACM-C | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | DCDC | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | DDM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | DSM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | DSP | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | FCIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | GFM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | GWM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | HCM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | HSWM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | HUD | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | IPM-A | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | OCSM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | PAM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0108 |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | PDM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | PSCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | RACM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | RGTM | ● | ● | ○ | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|-------------------|-------------|---------|------------|-------------|-----------|-------------|--|
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | RTM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | SCCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | SCM-E | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | SOBDM-C | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | SOD-L | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | SOD-R | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | HEV / ATKINSON 4V | 2013 | VDM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | ABS | ● | ● | ● | ○ | 0x0074 0x00F5 0x010A 0x020C |
| Fusion | 2.0L | PHEV | 2013 | ACM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | BCM#1 | ● | ● | ● | ● | 0x000F 0x00D4 0x00D5 0x00FE 0x0112 |
| Fusion | 2.0L | PHEV | 2013 | C-CM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | DDM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | GWM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | HCM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | HSWM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | PHEV | 2013 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | PHEV | 2013 | IPM-A | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | OCSM | ● | ● | ● | ○ | 0x000C |
| Fusion | 2.0L | PHEV | 2013 | PAM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0108 |
| Fusion | 2.0L | PHEV | 2013 | PDM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | PSCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | RGTM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | SOBDM-C | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 | VDM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | ACCM#2 | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | BECM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | GFM | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | RACM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | RTM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | SOBDM | ● | ● | ● | ● | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| Fusion | 2.0L | PHEV | 2013 - 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | GEM | ● | ● | ● | ● | 0xF044 0xF048 0xF04C 0xF057 0xF085 |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | ABS | ● | ● | ● | ● | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | ACM | ● | ● | ● | ● | 0xF05A 0xF062 0xF07A |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|-------------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | IC | ● | ● | ● | ● | 0x0009 0xF027 |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | OCSM | ● | ● | ● | ○ | 0x006D |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | TBM | ● | ● | ● | ● | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | TCM | ● | ● | ● | ● | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2007 - 2009 | 4X4 | ● | ● | ● | ● | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2007 - 2009 | SDARS | ● | ● | ● | ● | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2008 - 2009 | APIM | ● | ● | ● | ● | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2008 - 2009 | GEM / SJB | ● | ● | ● | ● | 0x0042 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086 |
| Fusion | 2.3L | DURATEC-HE / I4 | 2008 - 2009 | HVAC | ● | ● | ● | ● | ○ |
| Fusion | 2.3L | DURATEC-HE / I4 | 2008 - 2009 | PAM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | DSP | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 0x006D |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0023 0x0028 0x0031 0x0033 |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | PSCM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | DURATEC-HE / I4 | 2010 - 2012 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | ABS | ● | ● | ● | ● | 0x0074 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | ACCM#2 | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | ACM | ● | ● | ● | ● | 0x0005 0x0017 0x0018 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | BECM | ● | ● | ● | ● | 0x006E |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | DCDC | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | DSP | ● | ● | ● | ● | 0x0005 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | FDIM | ● | ● | ● | ● | 0x0005 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | PAM | ● | ● | ● | ● | 0x0005 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | PSCM | ● | ● | ● | ● | 0x0005 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | RCM | ● | ● | ● | ● | 0x0005 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | SOD-L | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|-------------------|-------------|--------|------------|-------------|-----------|-------------|---|
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Fusion | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | TCM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | IVCT | 2013 | ABS | ● | ● | ● | ○ | 0x0008 0x0012 0x00F5 0x010A 0x020C |
| Fusion | 2.5L | IVCT | 2013 | ACM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | BCM#1 | ● | ● | ● | ● | 0x00D4 0x00D5 0x0112 |
| Fusion | 2.5L | IVCT | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Fusion | 2.5L | IVCT | 2013 | DDM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | GFM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | GWM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | HCM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | HSWM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | IVCT | 2013 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | IVCT | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Fusion | 2.5L | IVCT | 2013 | OCSM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | PAM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | PDM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | PSCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | RGTM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 | VDM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | APIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 |
| Fusion | 2.5L | IVCT | 2013 - 2014 | RACM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | RCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | RTM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| Fusion | 2.5L | IVCT | 2013 - 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| Fusion | 3.0L | 4V | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2006 - 2007 | GEM | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2006 - 2009 | IC | ● | ● | ● | ● | 0x0005 0xF027 |
| Fusion | 3.0L | 4V | 2006 - 2009 | TCM | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2006 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Fusion | 3.0L | 4V | 2006 - 2012 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Fusion | 3.0L | 4V | 2006 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 |
| Fusion | 3.0L | 4V | 2006 - 2012 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0024 0x0038 0x0067 |
| Fusion | 3.0L | 4V | 2006 - 2012 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Fusion | 3.0L | 4V | 2006 - 2012 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Fusion | 3.0L | 4V | 2007 - 2009 | SDARS | ● | ● | ● | ● | 0x0005 |
| Fusion | 3.0L | 4V | 2007 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2008 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Fusion | 3.0L | 4V | 2008 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x0005 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086 0xF08A 0x000F 0x0042 |
| Fusion | 3.0L | 4V | 2008 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2008 - 2012 | PAM | ● | ● | ● | ● | 0x0005 |
| Fusion | 3.0L | 4V | 2010 - 2012 | DSP | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2010 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2010 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 3.0L | 4V | 2010 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2010 - 2012 | PSCM | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2010 - 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Fusion | 3.0L | 4V | 2010 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Fusion | 3.5L | 4V | 2010 - 2012 | ACM | ● | ● | ● | ● | 0x0018 0x0017 |
| Fusion | 3.5L | 4V | 2010 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Fusion | 3.5L | 4V | 2010 - 2012 | DSP | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | FDIM | ● | ● | ● | ● | 0x0005 0xF062 |
| Fusion | 3.5L | 4V | 2010 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF08A |
| Fusion | 3.5L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 0x006D |
| Fusion | 3.5L | 4V | 2010 - 2012 | PAM | ● | ● | ● | ● | 0x0005 |
| Fusion | 3.5L | 4V | 2010 - 2012 | PCM | ● | ● | ● | ● | 0x0023 0x0024 0x0025 0x0037 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fusion | 3.5L | 4V | 2010 - 2012 | PSCM | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | RCM | ● | ● | ● | ● | 0x0005 |
| Fusion | 3.5L | 4V | 2010 - 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Fusion | 3.5L | 4V | 2010 - 2012 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Fusion | 3.5L | 4V | 2010 - 2012 | TCM | ● | ● | ● | ○ | 0x0038 |
| Fusion | Other | Other | 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | ABS | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | ACM | ● | ● | ● | ○ | ○ |
| Fusion | Other | Other | 2012 | APIM | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | DSP | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | FCIM | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | FDIM | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| Fusion | Other | Other | 2012 | GPSM | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | HVAC | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | IPC | ● | ● | ● | ● | 0x0009 |
| Fusion | Other | Other | 2012 | OCSM | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | PAM | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | PSCM | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | RCM | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Fusion | Other | Other | 2012 | TBM | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------|----------|--|------|--------|------------|-------------|-----------|-------------|--|
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | AHCM | ● | ● | ● | ● | 0x00CF |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | CDP | ● | ● | ● | ● | 0x0005 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | DDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | HVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | IPC | ● | ● | ● | ● | 0xF020 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | NAV | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | PAM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | PBM | ● | ● | ● | ○ | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00B1 0x00B3 0x00B7 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | PDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | PSCM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | RCM | ● | ● | ● | ○ | 0x00EF 0x0102 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | RHVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | SASM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | SRM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2010 | VDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | AHCM | ● | ● | ● | ● | 0x00CF |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | CDP | ● | ● | ● | ● | 0x0005 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | DDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | HVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | IPC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | NAV | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PAM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PBM | ● | ● | ● | ○ | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PSCM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | RCM | ● | ● | ● | ○ | 0x00EF 0x0102 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | RHVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | SASM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | SRM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | VDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS | ● | ● | ● | ● | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | AHCM | ● | ● | ● | ○ | 0x00CF |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | CDP | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | DDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | GDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | HVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | IPC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | NAV | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PAM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PCM | ● | ● | ● | ● | 0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1 0x020A |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PSCM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RCM | ● | ● | ● | ○ | 0x0102 |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RHVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SASM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2006 | VDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 | GDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | AHCM | ● | ● | ● | ○ | 0x00CF |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | CDP | ● | ● | ● | ● | 0x0005 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | DDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | IPC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | NAV | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------|----------|---|-------------|--------|------------|-------------|-----------|-------------|--|
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | PAM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00AC |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | PDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | PSCM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | RCM | ● | ● | ● | ○ | 0x0102 0x00EF |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | RHVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | SASM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | SRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2006 - 2010 | VDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.0L | DURATEC-HE / I4 | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 | GDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PAM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | AHCM | ● | ● | ● | ○ | 0x00CF |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | CDP | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | DDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | IPC | ● | ● | ● | ● | 0xF020 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | NAV | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1 0x020A |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | PDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | PSCM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | RCM | ● | ● | ● | ○ | 0x0102 0x00EF |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | RHVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | SASM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | SRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | TCM | ● | ● | ● | ○ | 0x0121 0x0122 0x0123 0x0124 0x0125 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | VDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------|----------|--|------|--------|------------|-------------|-----------|-------------|---|
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | AHCM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | CDP | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | DDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | HVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | IPC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | NAV | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PAM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PBM | ● | ● | ● | ○ | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PSCM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | RCM | ● | ● | ● | ○ | 0x00EF |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | RHVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | SASM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | SRM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | TCM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | VDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | AHCM | ● | ● | ● | ● | 0x00CF |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | BCMii | ● | ● | ● | ● | 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | CDP | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | DDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | HVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | IPC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | NAV | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PBM | ● | ● | ● | ○ | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | PSCM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | RCM | ● | ● | ● | ○ | 0x00EF 0x0102 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | RHVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | SASM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | SRM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | TCM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | VDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | GDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PAM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | AHCM | ● | ● | ● | ○ | 0x00CF |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | BCMii | ● | ● | ● | ● | 0x0009 0x011C 0x0132 0x0153 0x011B |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | CDP | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | DDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | IPC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | NAV | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00A5 0x00AA 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00B9 0x00BB 0x00C1 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | PDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | PSCM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | RCM | ● | ● | ● | ○ | 0x00EF 0x0102 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | RHVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | SASM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | SRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 - 2010 | VDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | AHCM | ● | ● | ● | ● | 0x00CF |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | BCMii | ● | ● | ● | ● | 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | CDP | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | DDM | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | HVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | IPC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | NAV | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PBM | ● | ● | ● | ○ | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | PSCM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | RCM | ● | ● | ● | ○ | 0x00EF 0x0102 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | RHVAC | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | SASM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | SRM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | TCM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2010 | VDM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 | GDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 | PAM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | AHCM | ● | ● | ● | ○ | 0x00CF |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | CDP | ● | ● | ● | ● | 0x0005 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | DDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | IPC | ● | ● | ● | ● | 0xF020 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | NAV | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | PDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | PSCM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | RCM | ● | ● | ● | ○ | 0x00EF 0x0102 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | RHVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | SASM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | SRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | TCM | ● | ● | ● | ● | 0x0121 0x0123 0x0122 0x0124 0x0125 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2006 - 2010 | VDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2010 | CMR | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2010 | DABM | ● | ● | ● | ○ | ○ |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2010 | DSM | ● | ● | ● | ○ | 0x00F2 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2010 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2010 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| GALAXY\S-Max | 2.3L | DURATEC-HE / I4 | 2010 | SOD-R | ● | ● | ● | ○ | 0xF026 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------|----------|-------------------|--------------|--------|------------|-------------|-----------|-------------|---|
| GALAXY\S-Max | 2.5L | I5 | 2006 | ABS | ● | ● | ● | ● | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129 |
| GALAXY\S-Max | 2.5L | I5 | 2006 | ACM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | AHCM | ● | ● | ● | ○ | 0x00CF |
| GALAXY\S-Max | 2.5L | I5 | 2006 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| GALAXY\S-Max | 2.5L | I5 | 2006 | CCMii | ● | ● | ● | ● | 0x00F9 |
| GALAXY\S-Max | 2.5L | I5 | 2006 | CDP | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | DDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | GDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | HCM | ● | ● | ● | ● | 0x0032 |
| GALAXY\S-Max | 2.5L | I5 | 2006 | HVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | IPC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | NAV | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | PAM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| GALAXY\S-Max | 2.5L | I5 | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| GALAXY\S-Max | 2.5L | I5 | 2006 | PDM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | PSCM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | RCM | ● | ● | ● | ○ | 0x0102 |
| GALAXY\S-Max | 2.5L | I5 | 2006 | RFA | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | RGTM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | RHVAC | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | SASM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | SRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | TRM | ● | ● | ● | ● | ○ |
| GALAXY\S-Max | 2.5L | I5 | 2006 | VDM | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 | FFH | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 | LHID | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 | MFSW | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 | PAM | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 | RADIO | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 | RCC | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 | RHID | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 | RNS | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 - Other | ABS | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 - Other | CCM | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 - Other | CJB | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 - Other | IC | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 - Other | PATS | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 - Other | PCM | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 - Other | RCM | ● | ● | ● | ● | ○ |
| Galaxy | 1.9L | EDC 1.9 | 2001 - Other | TCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 2000 | ABS | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 2000 | CCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 2000 | CJB | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 2000 | IC | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 2000 | PATS | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 2000 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 2000 | TCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 2000 | LHID | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 2000 | MFSW | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 2000 | PAM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------|----------|-------------------|--------------|---------|------------|-------------|-----------|-------------|---|
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 2000 | RADIO | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 2000 | RCC | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 2000 | RHID | ● | ● | ● | ● | ○ |
| Galaxy | 2.0L | 2.0 DOHC SFI (8V) | 2000 | RNS | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 1997 - 2000 | ABS | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 1997 - 2000 | CCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 1997 - 2000 | CJB | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 1997 - 2000 | IC | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 1997 - 2000 | PATS | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| Galaxy | 2.3L | DOHC SFI (16V) | 1997 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 1997 - 2000 | TCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 2000 | LHID | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 2000 | MFSW | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 2000 | PAM | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 2000 | RADIO | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 2000 | RCC | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 2000 | RHID | ● | ● | ● | ● | ○ |
| Galaxy | 2.3L | DOHC SFI (16V) | 2000 | RNS | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 | LHID | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 | MFSW | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 | PAM | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 | RADIO | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 | RCC | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 | RHID | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 | RNS | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 - Other | ABS | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 - Other | CCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 - Other | CJB | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 - Other | IC | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 - Other | PATS | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 - Other | PCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 - Other | RCM | ● | ● | ● | ● | ○ |
| Galaxy | 2.8L | 2.8 CD-V6 | 2001 - Other | TCM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 1997 | ABS/TCS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 1997 | GEM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 1997 | PATS | ○ | ○ | ● | ○ | ○ |
| Granada / Scorpio | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 1997 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Granada / Scorpio | 2.0L | 2.0 DOHC SFI (8V) | 1995 - 1997 | RCM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | DOHC SFI (16V) | 1995 | ABS/TCS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | DOHC SFI (16V) | 1995 | GEM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | DOHC SFI (16V) | 1995 | PATS | ○ | ○ | ● | ○ | ○ |
| Granada / Scorpio | 2.0L | DOHC SFI (16V) | 1995 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Granada / Scorpio | 2.0L | DOHC SFI (16V) | 1995 | RCM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | Other | 1995 | ABS/TCS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | Other | 1995 | GEM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | Other | 1995 | PATS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.0L | Other | 1995 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Granada / Scorpio | 2.0L | Other | 1995 | RCM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.3L | DOHC SFI (16V) | 1996 - 1998 | ABS/TCS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.3L | DOHC SFI (16V) | 1996 - 1998 | GEM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2.3L | DOHC SFI (16V) | 1996 - 1998 | PATS | ○ | ○ | ● | ○ | ○ |
| Granada / Scorpio | 2.3L | DOHC SFI (16V) | 1996 - 1998 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| Granada / Scorpio | 2. 3L | DOHC SFI (16V) | 1996 - 1998 | RCM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 5L | Other | Other | ABS/TCS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 5L | Other | Other | GEM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 5L | Other | Other | PATS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 5L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 5L | Other | Other | RCM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 9L | 2. 9 V6 24V | 1991 - 1998 | ABS/TCS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 9L | 2. 9 V6 24V | 1991 - 1998 | GEM | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 9L | 2. 9 V6 24V | 1991 - 1998 | PATS | ● | ● | ● | ● | ○ |
| Granada / Scorpio | 2. 9L | 2. 9 V6 24V | 1991 - 1998 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0023 |
| Granada / Scorpio | 2. 9L | 2. 9 V6 24V | 1991 - 1998 | RCM | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V | 1995 - 1997 | DSM | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V | 1995 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Grand Marquis | 4. 6L | 2V | 1995 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V | 1995 - 2011 | DDM | ● | ● | ● | ● | 0x000F 0x000A 0x0005 0x0042 0xF044 0xF04C 0xF06A |
| Grand Marquis | 4. 6L | 2V | 1995 - 2011 | LCM | ● | ● | ● | ● | 0xF042 0xF043 |
| Grand Marquis | 4. 6L | 2V | 1995 - 2011 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024 0x00C5 |
| Grand Marquis | 4. 6L | 2V | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V | 1998 - 2000 | ECS | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V | 1998 - 2002 | PATS | ● | ● | ● | ● | 0x0009 |
| Grand Marquis | 4. 6L | 2V | 2000 - 2011 | RCM | ● | ● | ● | ● | 0x000C |
| Grand Marquis | 4. 6L | 2V | 2003 - 2006 | RASM | ● | ● | ● | ● | 0x0013 |
| Grand Marquis | 4. 6L | 2V | 2003 - 2006 | VAPS | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V | 2004 - 2010 | MC | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V | 2005 - 2011 | ABS | ● | ● | ● | ● | 0x0008 |
| Grand Marquis | 4. 6L | 2V | 2006 - 2011 | IC | ● | ● | ● | ● | 0x0005 |
| Grand Marquis | 4. 6L | 2V | 2007 - 2011 | VDM | ● | ● | ● | ● | 0x0005 0x0013 0x0014 |
| Grand Marquis | 4. 6L | 2V | 2008 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V NGV | 1996 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Grand Marquis | 4. 6L | 2V NGV | 1996 | DDM | ● | ● | ● | ● | 0x000F |
| Grand Marquis | 4. 6L | 2V NGV | 1996 | DSM | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V NGV | 1996 | FIM | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V NGV | 1996 | IAB | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V NGV | 1996 | LCM | ● | ● | ● | ● | ○ |
| Grand Marquis | 4. 6L | 2V NGV | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 |
| Ikon | 1. 3L | HCS | 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Ikon | 1. 3L | Zetec Rocam | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ikon | 1. 3L | Zetec Rocam | 2003 | CSM | ● | ● | ● | ● | ○ |
| Ikon | 1. 3L | Zetec Rocam | 2003 | ECS | ● | ● | ● | ● | ○ |
| Ikon | 1. 3L | Zetec Rocam | 2003 | GEM | ● | ● | ● | ● | ○ |
| Ikon | 1. 3L | Zetec Rocam | 2003 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Ikon | 1. 4L | Duratorq Turbo Diesel Common Rail Injection | 2009 | IC | ● | ● | ● | ○ | ○ |
| Ikon | 1. 4L | Duratorq Turbo Diesel Common Rail Injection | 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Ikon | 1. 6L | Other | 2001 | ECS | ● | ● | ● | ● | ○ |
| Ikon | 1. 6L | Other | 2001 | HEC | ● | ● | ● | ● | ○ |
| Ikon | 1. 6L | Other | 2001 | PCM | ● | ● | ● | ● | ○ |
| Ikon | 1. 6L | Zetec Rocam | 1999 - 2003 | ECS | ● | ● | ● | ● | ○ |
| Ikon | 1. 6L | Zetec Rocam | 1999 - 2003 | HEC | ● | ● | ● | ● | ○ |
| Ikon | 1. 6L | Zetec Rocam | 1999 - 2003 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Ikon | 1. 6L | Zetec Rocam | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ikon | 1. 6L | Zetec Rocam | 2003 | CSM | ● | ● | ● | ● | ○ |
| Ikon | 1. 6L | Zetec Rocam | 2003 | GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| Ikon | 1.6L | Zetec Rocam | 2003 | TCM | ● | ● | ● | ● | ○ |
| KA | 1.0L | HCS | 1997 | PATS | ● | ● | ● | ● | ○ |
| KA | 1.0L | HCS | 1997 - 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| KA | 1.0L | HCS | 1997 - 1999 | CSM | ● | ● | ● | ● | ○ |
| KA | 1.0L | HCS | 1997 - 1999 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| KA | 1.0L | HCS | 1999 | ECS | ● | ● | ● | ● | ○ |
| KA | 1.0L | Zetec Rocam | 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| KA | 1.0L | Zetec Rocam | 1999 | CSM | ● | ● | ● | ● | ○ |
| KA | 1.0L | Zetec Rocam | 1999 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| KA | 1.2L | DURATEC 8V | 2009 | ABS | ● | ● | ● | ● | ○ |
| KA | 1.2L | DURATEC 8V | 2009 | BCMii | ● | ● | ● | ● | ○ |
| KA | 1.2L | DURATEC 8V | 2009 | EATC | ● | ● | ● | ● | ○ |
| KA | 1.2L | DURATEC 8V | 2009 | EPS | ● | ● | ● | ● | ○ |
| KA | 1.2L | DURATEC 8V | 2009 | IPC | ● | ● | ● | ● | ○ |
| KA | 1.2L | DURATEC 8V | 2009 | PAM | ● | ● | ● | ○ | ○ |
| KA | 1.2L | DURATEC 8V | 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| KA | 1.2L | DURATEC 8V | 2009 | RCM | ● | ● | ● | ● | ○ |
| KA | 1.3L | DURATEC 8V | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| KA | 1.3L | DURATEC 8V | 2000 | CSM | ● | ● | ● | ● | ○ |
| KA | 1.3L | DURATEC 8V | 2000 | ECS | ● | ● | ● | ● | ○ |
| KA | 1.3L | DURATEC 8V | 2000 | GEM | ● | ● | ● | ● | ○ |
| KA | 1.3L | DURATEC 8V | 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| KA | 1.3L | Duratorq-Turbo Diesel Common Rail Injection | 2009 | ABS | ● | ● | ● | ● | ○ |
| KA | 1.3L | Duratorq-Turbo Diesel Common Rail Injection | 2009 | BCMii | ● | ● | ● | ● | ○ |
| KA | 1.3L | Duratorq-Turbo Diesel Common Rail Injection | 2009 | EATC | ● | ● | ● | ● | ○ |
| KA | 1.3L | Duratorq-Turbo Diesel Common Rail Injection | 2009 | EPS | ● | ● | ● | ● | ○ |
| KA | 1.3L | Duratorq-Turbo Diesel Common Rail Injection | 2009 | IPC | ● | ● | ● | ● | ○ |
| KA | 1.3L | Duratorq-Turbo Diesel Common Rail Injection | 2009 | PAM | ● | ● | ● | ○ | ○ |
| KA | 1.3L | Duratorq-Turbo Diesel Common Rail Injection | 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| KA | 1.3L | Duratorq-Turbo Diesel Common Rail Injection | 2009 | RCM | ● | ● | ● | ● | ○ |
| KA | 1.3L | Endura-E | 1997 - 1998 | PATS | ● | ● | ● | ● | ○ |
| KA | 1.3L | Endura-E | 1997 - 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| KA | 1.3L | Endura-E | 1997 - 2000 | CSM | ● | ● | ● | ● | ○ |
| KA | 1.3L | Endura-E | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| KA | 1.3L | Endura-E | 1999 - 2000 | ECS | ● | ● | ● | ● | ○ |
| KA | 1.3L | Endura-E | 2000 | GEM | ● | ● | ● | ● | ○ |
| KA | 1.6L | DURATEC 8V | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| KA | 1.6L | DURATEC 8V | 2000 | CSM | ● | ● | ● | ● | ○ |
| KA | 1.6L | DURATEC 8V | 2000 | ECS | ● | ● | ● | ● | ○ |
| KA | 1.6L | DURATEC 8V | 2000 | GEM | ● | ● | ● | ● | ○ |
| KA | 1.6L | DURATEC 8V | 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| KA | 1.6L | Zetec Rocam | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| KA | 1.6L | Zetec Rocam | 2001 | CSM | ● | ● | ● | ● | ○ |
| KA | 1.6L | Zetec Rocam | 2001 | ECS | ● | ● | ● | ● | ○ |
| KA | 1.6L | Zetec Rocam | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| KA | Other | Other | 2009 | ABS | ● | ● | ● | ● | ○ |
| KA | Other | Other | 2009 | BCMii | ● | ● | ● | ● | ○ |
| KA | Other | Other | 2009 | EATC | ● | ● | ● | ● | ○ |
| KA | Other | Other | 2009 | EPS | ● | ● | ● | ● | ○ |
| KA | Other | Other | 2009 | IPC | ● | ● | ● | ● | ○ |
| KA | Other | Other | 2009 | PAM | ● | ● | ● | ○ | ○ |
| KA | Other | Other | 2009 | PCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|------|--------|------------|-------------|-----------|-------------|---|
| KA | Other | Other | 2009 | RCM | ● | ● | ● | ● | ○ |
| Kuga | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | ABS | ● | ● | ● | ● | 0x0012 0x00E8 |
| Kuga | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Kuga | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | APIM | ● | ● | ● | ● | 0x0019 |
| Kuga | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | HCM | ● | ● | ● | ○ | ○ |
| Kuga | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114 |
| Kuga | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | PDM | ● | ● | ● | ○ | 0x0141 |
| Kuga | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | SOD-L | ● | ● | ● | ○ | ○ |
| Kuga | 1.6L | GTDI FGEC | 2013 | ABS | ● | ● | ● | ● | 0x0012 0x00E8 |
| Kuga | 1.6L | GTDI FGEC | 2013 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Kuga | 1.6L | GTDI FGEC | 2013 | APIM | ● | ● | ● | ● | 0x0019 |
| Kuga | 1.6L | GTDI FGEC | 2013 | HCM | ● | ● | ● | ○ | ○ |
| Kuga | 1.6L | GTDI FGEC | 2013 | PDM | ● | ● | ● | ○ | 0x0141 |
| Kuga | 1.6L | GTDI FGEC | 2013 | SOD-L | ● | ● | ● | ○ | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | ACM | ● | ● | ● | ● | 0x011A |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | AWD | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | CMR | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | D DCU | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | EPS | ● | ● | ● | ○ | 0x0005 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | FFH | ● | ● | ● | ● | 0x002F |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF025 0xF026 0xF02B 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF034 0xF035 0xF03A 0xF03D |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | IC | ● | ● | ● | ● | 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | PCM | ● | ● | ● | ● | 0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x00AB 0x00AC 0x00B4 0x00C1 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | P DCU | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RCM | ● | ● | ● | ● | 0x00EA 0xF027 0xF031 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | RKE | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2008 | SRM | ● | ● | ● | ● | 0x011D |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | ACM | ● | ● | ● | ● | 0x0005 0x011A |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | AWD | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | CMR | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | D DCU | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | EPS | ● | ● | ● | ○ | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | GEM | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | IC | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | PAM | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | P DCU | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RCM | ● | ● | ● | ● | 0x00EA |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RETM | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | RKE | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | SRM | ● | ● | ● | ● | ○ |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 | TCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------|----------|--|--------------|---------|------------|-------------|-----------|-------------|--|
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 - 2013 | ABS | ● | ● | ● | ● | 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x0012 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2008 - 2013 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2013 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2013 | APIM | ● | ● | ● | ● | 0x0019 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2013 | PDM | ● | ● | ● | ○ | 0x0141 |
| Kuga | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2013 | SOD-L | ● | ● | ● | ○ | ○ |
| Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ABS | ● | ● | ● | ● | 0x0005 0x0012 0x00E8 |
| Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | AHCM | ● | ● | ● | ○ | 0x0005 0x00CF |
| Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | APIM | ● | ● | ● | ● | 0x0019 |
| Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HCM | ● | ● | ● | ○ | 0x0005 |
| Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0067 0x0080 0x0081 0x0082 0x0083 0x0108 |
| Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PDM | ● | ● | ● | ○ | 0x0005 0x0141 |
| Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SOD-L | ● | ● | ● | ○ | 0x0005 |
| Kuga | 2.5L | I5 | 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 |
| Kuga | 2.5L | I5 | 2008 | ACM | ● | ● | ● | ● | 0x0005 0x011A |
| Kuga | 2.5L | I5 | 2008 | AWD | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.5L | I5 | 2008 | CMR | ● | ● | ● | ● | ○ |
| Kuga | 2.5L | I5 | 2008 | D DCU | ● | ● | ● | ● | ○ |
| Kuga | 2.5L | I5 | 2008 | EATC | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.5L | I5 | 2008 | EPS | ● | ● | ● | ○ | 0x0005 |
| Kuga | 2.5L | I5 | 2008 | FFH | ● | ● | ● | ● | 0x002F |
| Kuga | 2.5L | I5 | 2008 | GEM | ● | ● | ● | ● | 0x0005 0x00ED 0xF025 0xF026 0xF02B 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF034 0xF035 0xF03A 0xF03D |
| Kuga | 2.5L | I5 | 2008 | HCM | ● | ● | ● | ● | 0x0155 0x0156 |
| Kuga | 2.5L | I5 | 2008 | IC | ● | ● | ● | ● | 0x0005 0xF01E 0xF020 0xF028 0xF031 0xF032 0xF036 0xF03E |
| Kuga | 2.5L | I5 | 2008 | PAM | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.5L | I5 | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0126 0x0127 |
| Kuga | 2.5L | I5 | 2008 | P DCU | ● | ● | ● | ● | ○ |
| Kuga | 2.5L | I5 | 2008 | RCM | ● | ● | ● | ● | 0x0005 0x00EA 0xF027 |
| Kuga | 2.5L | I5 | 2008 | RETM | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.5L | I5 | 2008 | RKE | ● | ● | ● | ● | 0x0005 |
| Kuga | 2.5L | I5 | 2008 | SRM | ● | ● | ● | ● | 0x011D |
| Kuga | 2.5L | I5 | 2008 | TCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.3L | B3 | 1996 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.3L | B3 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1.3L | B3 | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.3L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.5L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.5L | Z5 | 1996 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.5L | Z5 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1.5L | ZL | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.5L | ZL | 1998 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1.6L | B6 | 1996 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.6L | B6 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1.6L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.6L | ZM | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.6L | ZM | 1998 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1.6L | ZM | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.8L | BP | 1996 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1.8L | BP | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------|----------|------------|--------------|---------|------------|-------------|-----------|-------------|--|
| LASER / 323 / TIERRA | 1. 8L | FP | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 8L | FP | 1998 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1. 8L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | FS | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | FS | 2000 - 2001 | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | FS | 2000 - 2001 | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | RF | 1998 | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | RF | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | RF-T | 1998 - 2000 | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | RF-T | 2000 | ABS | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2000 - 2002 | CPM | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2000 - 2002 | RESCU | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2000 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| LS | 3. 0L | Other | 2000 - 2005 | ACM | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2000 - 2005 | DDM | ● | ● | ● | ● | 0x000A 0x000F |
| LS | 3. 0L | Other | 2000 - 2005 | DSM | ● | ● | ● | ● | 0x0011 |
| LS | 3. 0L | Other | 2000 - 2005 | EATC | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2000 - 2005 | GEM | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2000 - 2005 | HEC | ● | ● | ● | ● | 0x0009 0x00C7 |
| LS | 3. 0L | Other | 2000 - 2005 | MC | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2000 - 2005 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x00C7 0x0024 |
| LS | 3. 0L | Other | 2000 - 2005 | RCM | ● | ● | ● | ● | 0x000C |
| LS | 3. 0L | Other | 2000 - 2005 | REM | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2003 | VEMS | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2003 - 2005 | DCSM | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2003 - 2005 | EPB | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2003 - 2005 | NAV | ● | ● | ● | ● | 0x0016 0x001D |
| LS | 3. 0L | Other | 2003 - 2005 | PAM | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2003 - 2005 | PCSM | ● | ● | ● | ● | ○ |
| LS | 3. 0L | Other | 2003 - 2005 | SCLM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 | VEMS | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| LS | 3. 9L | 4V | 2003 - 2006 | ACM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | DCSM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | DDM | ● | ● | ● | ● | 0x000A 0x000F |
| LS | 3. 9L | 4V | 2003 - 2006 | DSM | ● | ● | ● | ● | 0x0011 |
| LS | 3. 9L | 4V | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | EPB | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | HEC | ● | ● | ● | ● | 0x0009 0x00C7 |
| LS | 3. 9L | 4V | 2003 - 2006 | MC | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | NAV | ● | ● | ● | ● | 0x0016 0x001D |
| LS | 3. 9L | 4V | 2003 - 2006 | PAM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x0024 |
| LS | 3. 9L | 4V | 2003 - 2006 | PCSM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | RCM | ● | ● | ● | ● | 0x000C |
| LS | 3. 9L | 4V | 2003 - 2006 | REM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | 4V | 2003 - 2006 | SCLM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | Other | 2000 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| LS | 3. 9L | Other | 2000 - 2002 | ACM | ● | ● | ● | ● | ○ |
| LS | 3. 9L | Other | 2000 - 2002 | CPM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|--|-------------|---------|------------|-------------|-----------|-------------|---|
| LS | 3.9L | Other | 2000 - 2002 | DDM | ● | ● | ● | ● | 0x000A 0x000F |
| LS | 3.9L | Other | 2000 - 2002 | DSM | ● | ● | ● | ● | 0x0011 |
| LS | 3.9L | Other | 2000 - 2002 | EATC | ● | ● | ● | ● | ○ |
| LS | 3.9L | Other | 2000 - 2002 | GEM | ● | ● | ● | ● | ○ |
| LS | 3.9L | Other | 2000 - 2002 | HEC | ● | ● | ● | ● | 0x0009 |
| LS | 3.9L | Other | 2000 - 2002 | MC | ● | ● | ● | ● | ○ |
| LS | 3.9L | Other | 2000 - 2002 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x00C7 |
| LS | 3.9L | Other | 2000 - 2002 | RCM | ● | ● | ● | ● | ○ |
| LS | 3.9L | Other | 2000 - 2002 | REM | ● | ● | ● | ● | ○ |
| LS | 3.9L | Other | 2000 - 2002 | RESCU | ● | ● | ● | ● | ○ |
| Liata | 1.6L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| Liata | 1.8L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 | GEM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | RPSDM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | GEM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2007 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2007 | RPSDM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | GEM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2007 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2007 | RPSDM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2007 | TCM | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2.0L | KF | 1998 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2.3L | KJ | 1998 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2.5L | KL | 1998 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2.5L | KL | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2.5L | KL | 2002 | PCM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 | RETM | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | 4X4 | ● | ● | ● | ● | 0x0108 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | HD_LVL | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | I_LCM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | SASM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | HCM-2 | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DDM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DSM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HCM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HUD | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HVAC | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | RCM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000A 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | IPM-A | ● | ● | ● | ○ | 0x013E |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| MKS | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | VDM | ● | ● | ● | ● | 0x000E |
| MKS | 3.7L | 4V | 2009 | SECM | ● | ● | ○ | ○ | ○ |
| MKS | 3.7L | 4V | 2009 - 2012 | 4X4 | ● | ● | ● | ● | 0x0108 |
| MKS | 3.7L | 4V | 2009 - 2012 | ABS | ● | ● | ● | ● | 0x0005 0x0008 |
| MKS | 3.7L | 4V | 2009 - 2012 | ACM | ● | ● | ● | ● | 0x0005 0x0017 0x0018 |
| MKS | 3.7L | 4V | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| MKS | 3.7L | 4V | 2009 - 2012 | C-CM | ● | ● | ● | ● | 0x0046 |
| MKS | 3.7L | 4V | 2009 - 2012 | DCSM | ● | ● | ● | ● | 0x0005 |
| MKS | 3.7L | 4V | 2009 - 2012 | DDM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2009 - 2012 | DSM | ● | ● | ● | ● | 0xF041 0xF087 |
| MKS | 3.7L | 4V | 2009 - 2012 | DSP | ● | ● | ● | ○ | 0x0005 |
| MKS | 3.7L | 4V | 2009 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2009 - 2012 | FDIM | ● | ● | ● | ● | 0x0005 0xF05A 0xF07F |
| MKS | 3.7L | 4V | 2009 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF04B 0xF04C 0xF05F 0xF088 0xF089 0xF08A |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|--------|------------|-------------|-----------|-------------|--|
| MKS | 3.7L | 4V | 2009 - 2012 | HCM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2009 - 2012 | HCM-2 | ● | ● | ● | ● | 0x0005 |
| MKS | 3.7L | 4V | 2009 - 2012 | HD_LVL | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2009 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2009 - 2012 | IPC | ● | ● | ● | ● | 0x0005 |
| MKS | 3.7L | 4V | 2009 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| MKS | 3.7L | 4V | 2009 - 2012 | PAM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2009 - 2012 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 |
| MKS | 3.7L | 4V | 2009 - 2012 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| MKS | 3.7L | 4V | 2009 - 2012 | RFA | ● | ● | ● | ● | 0x0064 |
| MKS | 3.7L | 4V | 2010 | RETM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | 4V | 2010 - 2012 | HUD | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2010 - 2012 | ILCM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2010 - 2012 | PSCM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | 4V | 2010 - 2012 | SASM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2010 - 2012 | SOD-L | ● | ● | ● | ● | ○ |
| MKS | 3.7L | 4V | 2010 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 | ACM | ● | ● | ● | ● | 0x0018 |
| MKS | 3.7L | TiVCT | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| MKS | 3.7L | TiVCT | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKS | 3.7L | TiVCT | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 | HCM-2 | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 | IPC | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| MKS | 3.7L | TiVCT | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| MKS | 3.7L | TiVCT | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| MKS | 3.7L | TiVCT | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | IPM-A | ● | ● | ● | ○ | 0x013E |
| MKS | 3.7L | TiVCT | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| MKS | 3.7L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| MKS | 3.7L | TiVCT | 2013 - 2014 | VDM | ● | ● | ● | ● | 0x000E |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|---|
| MKS | Other | Other | 2012 | 4X4 | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | ABS | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | ACM | ● | ● | ● | ○ | ○ |
| MKS | Other | Other | 2012 | APIM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | C-CM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | DCSM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | DDM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | DSM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | DSP | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | FCIM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | FDIM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| MKS | Other | Other | 2012 | GPSM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | HCM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | HCM-2 | ● | ● | ● | ○ | ○ |
| MKS | Other | Other | 2012 | HD_LVL | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | HUD | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | HVAC | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | IILCM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | IPC | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | OCSM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | PAM | ● | ● | ● | ○ | ○ |
| MKS | Other | Other | 2012 | PSCM | ● | ● | ● | ○ | ○ |
| MKS | Other | Other | 2012 | RCM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | RFA | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | SASM | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | SOD-L | ● | ● | ● | ● | ○ |
| MKS | Other | Other | 2012 | SOD-R | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | DCSM | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPC | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSM | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | LTM | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PCSM-2 | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RCM | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RHVAC | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| MKT | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | VDM | ● | ● | ● | ● | 0x000E |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | 4X4 | ● | ● | ● | ● | 0x0108 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | HCM-2 | ● | ● | ● | ○ | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | IHCM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | RETM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | SASM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | DCSM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | IPC | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DDM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DSM | ● | ● | ● | ● | 0x0005 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HCM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HUD | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | LTM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PCSM-2 | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | RCM | ● | ● | ● | ● | 0x0005 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | RHVAC | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| MKT | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | VDM | ● | ● | ● | ● | 0x000E |
| MKT | 3.7L | 4V | 2010 - 2012 | 4X4 | ● | ● | ● | ● | 0x0108 |
| MKT | 3.7L | 4V | 2010 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| MKT | 3.7L | 4V | 2010 - 2012 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| MKT | 3.7L | 4V | 2010 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| MKT | 3.7L | 4V | 2010 - 2012 | C-CM | ● | ● | ● | ○ | 0x0046 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| MKT | 3.7L | 4V | 2010 - 2012 | DCSM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | DDM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | DSM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | DSP | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| MKT | 3.7L | 4V | 2010 - 2012 | HCM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | HCM-2 | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | HUD | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | IHCM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | IPC | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | LTM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 0x006D |
| MKT | 3.7L | 4V | 2010 - 2012 | PAM | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | PCM | ● | ● | ● | ● | 0x0024 0x0025 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0023 0x0028 0x0031 0x0033 |
| MKT | 3.7L | 4V | 2010 - 2012 | PCSM-2 | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | PSCM | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | RCM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | RETM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | RFA | ● | ● | ● | ● | 0x0064 |
| MKT | 3.7L | 4V | 2010 - 2012 | RHVAC | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | SASM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | SOD-L | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2010 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| MKT | 3.7L | 4V | 2011 - 2012 | GPSM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| MKT | 3.7L | TiVCT | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKT | 3.7L | TiVCT | 2013 | DCSM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 | IPC | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 | IPM-A | ● | ● | ● | ○ | 0x013E |
| MKT | 3.7L | TiVCT | 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| MKT | 3.7L | TiVCT | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| MKT | 3.7L | TiVCT | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| MKT | 3.7L | TiVCT | 2013 - 2014 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| MKT | 3.7L | TiVCT | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| MKT | 3.7L | TiVCT | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | LTM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | PCSM-2 | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| MKT | 3.7L | TiVCT | 2013 - 2014 | RCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|------------------------------------|
| MKT | 3. 7L | TiVCT | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| MKT | 3. 7L | TiVCT | 2013 - 2014 | RHVAC | ● | ● | ● | ● | ○ |
| MKT | 3. 7L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| MKT | 3. 7L | TiVCT | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| MKT | 3. 7L | TiVCT | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| MKT | 3. 7L | TiVCT | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| MKT | 3. 7L | TiVCT | 2013 - 2014 | VDM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 | 4X4 | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 | C-CM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 | DCSM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| MKT | Other | Other | 2012 | HCM-2 | ● | ● | ● | ○ | ○ |
| MKT | Other | Other | 2012 | ILCM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 | IPC | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 | OCSM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 | RETM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 | SASM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | ABS | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | ACM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | APIM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | DDM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | DSM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | DSP | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | HCM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | HUD | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | LTM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| MKT | Other | Other | 2012 - 2014 | PCSM-2 | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| MKT | Other | Other | 2012 - 2014 | RCM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | RFA | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | RHVAC | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2012 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2014 | RACM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2014 | RTM | ● | ● | ● | ○ | ○ |
| MKT | Other | Other | 2014 | SCCM | ● | ● | ● | ● | ○ |
| MKT | Other | Other | 2014 | VDM | ● | ● | ● | ● | ○ |
| MKX | 3. 5L | 4V | 2007 | EATC | ● | ● | ● | ● | ○ |
| MKX | 3. 5L | 4V | 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0x001A |
| MKX | 3. 5L | 4V | 2007 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| MKX | 3. 5L | 4V | 2007 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x0005 |
| MKX | 3. 5L | 4V | 2007 - 2010 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 0x0019 0x0005 |
| MKX | 3. 5L | 4V | 2007 - 2010 | DCSM | ● | ● | ● | ● | ○ |
| MKX | 3. 5L | 4V | 2007 - 2010 | DSM | ● | ● | ● | ● | 0x0005 |
| MKX | 3. 5L | 4V | 2007 - 2010 | DSP | ● | ● | ● | ○ | 0x0005 |
| MKX | 3. 5L | 4V | 2007 - 2010 | HCM | ● | ● | ● | ● | ○ |
| MKX | 3. 5L | 4V | 2007 - 2010 | IC | ● | ● | ● | ● | 0x0009 0x0005 0xF027 0xF047 0xF04A |
| MKX | 3. 5L | 4V | 2007 - 2010 | LTM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| MKX | 3.5L | 4V | 2007 - 2010 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| MKX | 3.5L | 4V | 2007 - 2010 | PAM | ● | ● | ● | ● | 0x0005 |
| MKX | 3.5L | 4V | 2007 - 2010 | PCM | ● | ● | ● | ● | 0x0024 0x0025 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0202 0x0010 0x0023 0x0028 0x0031 0x0033 0x00C5 |
| MKX | 3.5L | 4V | 2007 - 2010 | RCM | ● | ● | ● | ● | 0x0005 |
| MKX | 3.5L | 4V | 2007 - 2010 | RETM | ● | ● | ● | ● | 0x0005 0xF04D |
| MKX | 3.5L | 4V | 2007 - 2010 | SASM | ● | ● | ● | ● | ○ |
| MKX | 3.5L | 4V | 2007 - 2010 | SDARS | ● | ● | ● | ● | 0x0019 0x0005 |
| MKX | 3.5L | 4V | 2008 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| MKX | 3.5L | 4V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C |
| MKX | 3.5L | 4V | 2008 - 2010 | HVAC | ● | ● | ● | ● | ○ |
| MKX | 3.5L | 4V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2012 | TPM | ● | ● | ● | ○ | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKX | 3.7L | TiVCT | 2011 - 2013 | HVAC | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| MKX | 3.7L | TiVCT | 2011 - 2013 | PCM | ● | ● | ● | ● | 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0108 |
| MKX | 3.7L | TiVCT | 2011 - 2013 | RCM | ● | ● | ● | ○ | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2013 | SCCM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| MKX | 3.7L | TiVCT | 2011 - 2014 | ACM | ● | ● | ● | ○ | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | APIM | ● | ● | ● | ○ | 0x00D6 |
| MKX | 3.7L | TiVCT | 2011 - 2014 | BCM#1 | ● | ● | ● | ● | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A 0x0112 |
| MKX | 3.7L | TiVCT | 2011 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | DSM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | DSP | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | FLM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | HCM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | HUD | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x00D0 |
| MKX | 3.7L | TiVCT | 2011 - 2014 | LTM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | PAM | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| MKX | 3.7L | TiVCT | 2011 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2011 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| MKX | 3.7L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| MKX | Other | Other | 2014 | ABS | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | ACM | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | APIM | ● | ● | ● | ○ | ○ |
| MKX | Other | Other | 2014 | BCM#1 | ● | ● | ● | ○ | ○ |
| MKX | Other | Other | 2014 | DCSM | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | DSM | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKX | Other | Other | 2014 | FCDIM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| MKX | Other | Other | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| MKX | Other | Other | 2014 | FLM | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| MKX | Other | Other | 2014 | HCM | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | HUD | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | IPC | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | LTM | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | PAM | ● | ● | ● | ○ | ○ |
| MKX | Other | Other | 2014 | RFA | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | RTM | ● | ● | ● | ○ | ○ |
| MKX | Other | Other | 2014 | SOD-L | ● | ● | ● | ● | ○ |
| MKX | Other | Other | 2014 | SOD-R | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GWM | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GFM | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0038 0x0108 |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RCM | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RGTM | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | VDM | ● | ● | ○ | ○ | 0x000E |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | ACM | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2014 | RTM | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 | GWM | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | ACCM#2 | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | GFM | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | RACM | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | RCM | ● | ● | ○ | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------------------------|-------------|--------|------------|-------------|-----------|-------------|---|
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | RGTM | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2013 - 2014 | VDM | ● | ● | ○ | ○ | 0x000E |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2014 | ACM | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| MKZ | 2.0L | Full Hybrid Electric Vehicle | 2014 | RTM | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MKZ | 3.7L | TiVCT | 2013 | GWM | ● | ● | ● | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | DACM-C | ● | ● | ● | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | FCDIM | ● | ● | ● | ● | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | GFM | ● | ● | ● | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | HUD | ● | ● | ● | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 0x0038 |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | RACM | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | RCM | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | RGTM | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | SCCM | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | SCM-E | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | SOD-L | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | SOD-R | ● | ● | ○ | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2013 - 2014 | VDM | ● | ● | ○ | ○ | 0x000E |
| MKZ | 3.7L | TiVCT | 2014 | ACM | ● | ● | ● | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2014 | FCIM | ● | ● | ● | ○ | ○ |
| MKZ | 3.7L | TiVCT | 2014 | RTM | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | APIM | ● | ● | ● | ● | ○ |
| MKZ | Other | Other | 2013 | C-CM | ● | ● | ● | ○ | ○ |
| MKZ | Other | Other | 2013 | DACM-C | ● | ● | ● | ○ | ○ |
| MKZ | Other | Other | 2013 | DSM | ● | ● | ● | ● | ○ |
| MKZ | Other | Other | 2013 | DSP | ● | ● | ● | ○ | ○ |
| MKZ | Other | Other | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| MKZ | Other | Other | 2013 | GFM | ● | ● | ● | ○ | ○ |
| MKZ | Other | Other | 2013 | GWM | ● | ● | ● | ○ | ○ |
| MKZ | Other | Other | 2013 | HSWM | ● | ● | ● | ● | ○ |
| MKZ | Other | Other | 2013 | HUD | ● | ● | ● | ○ | ○ |
| MKZ | Other | Other | 2013 | RACM | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | RCM | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | RGTM | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | SCCM | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | SCM-E | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | SCM-G | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | SCM-H | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | SOD-L | ● | ● | ○ | ○ | ○ |
| MKZ | Other | Other | 2013 | SOD-R | ● | ● | ○ | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| MKZ | Other | Other | 2013 | VDM | ● | ● | ○ | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | APIM | ● | ● | ● | ● | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | DSP | ● | ● | ● | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | FCIM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | GWM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | HCM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | HUD | ● | ● | ● | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | RACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | RCM | ● | ● | ○ | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | RTM | ● | ● | ○ | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | SCCM | ● | ● | ○ | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | SCM-E | ● | ● | ○ | ○ | ○ |
| MONDEO | 1.5L | EcoBoost – Gas Turbocharged Direct Injection | 2013 | SOD-L | ● | ● | ○ | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | ACM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | BCMii | ● | ● | ● | ● | 0x011B 0x011C 0x0132 0x0153 0x0009 |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | CDP | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | CMR | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | DDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | DSM | ● | ● | ● | ○ | 0x00F2 |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | HVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | IPC | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | PBM | ● | ● | ● | ● | 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00EE 0x00F8 |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 0x0025 0x00BC |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | PDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | PSCM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | RFA | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | SASM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | SRM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2007 – 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 1.6L | DURATEC VCT | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | DURATEC VCT | 2011 | SOD-L | ● | ● | ● | ○ | 0x00BC 0xF026 |
| MONDEO | 1.6L | DURATEC VCT | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ACM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | 0x011C 0x0132 0x0153 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | CCMii | ● | ● | ● | ○ | 0x00F9 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | CDP | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | CMR | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DSM | ● | ● | ● | ○ | 0x00F2 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PBM | ● | ● | ● | ● | 0x00F3 0x00F4 0x00F5 0x00F6 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00B1 0x00B7 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PSCM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RFA | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SRM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | Duratorq Turbo Diesel Common Rail Injection | 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | ACM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | BCMii | ● | ● | ● | ● | 0x011B 0x011C 0x0132 0x0153 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | CDP | ● | ● | ● | ○ | 0x0005 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | CMR | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | DDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | DSM | ● | ● | ● | ○ | 0x00F2 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPC | ● | ● | ● | ● | 0xF020 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PBM | ● | ● | ● | ● | 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | PSCM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RFA | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SASM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SRM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.6L | Zetec | 1993 - 1999 | ABS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| MONDEO | 1.6L | Zetec | 1993 - 1999 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | Zetec | 1993 - 1999 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | Zetec | 1997 - 1999 | FFH | ● | ● | ● | ● | ○ |
| MONDEO | 1.6L | Zetec | 1997 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 1.6L | Zetec | 1998 - 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | ABS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | GDM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | GEM | ● | ● | ● | ● | 0x0005 0xF027 0xF02D 0xF02F 0xF030 0xF03A 0xF09D 0xF09E 0xF09F 0xF0A0 0xF0A1 0xF0A2 0xF0A3 0xF0A4 0xF0A5 |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | HEC | ● | ● | ● | ● | 0x0005 |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | LHID | ● | ● | ● | ● | 0x0005 0x0032 |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | RCM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | RHID | ● | ● | ● | ● | 0x0005 |
| MONDEO | 1.8L | DURATEC-HE / I4 | 2001 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | ABS | ● | ● | ● | ● | 0x00F1 |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | GDM | ● | ● | ● | ● | 0x0100 |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | GEM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | HEC | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | LHID | ● | ● | ● | ● | 0x0032 |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | RCM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | RHID | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | DURATEC-Sci | 2001 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | ACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | CMR | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | HVAC | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | IPC | ● | ● | ● | ● | 0xF020 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|--------------|---------|------------|-------------|-----------|-------------|--|
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | PCM | ● | ● | ● | ● | 0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1 |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | PDM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | RFA | ● | ● | ● | ○ | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 1.8L | Endura-DE | 1997 | FFH | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Endura-DE | 1997 | PCM | ○ | ○ | ● | ○ | ○ |
| MONDEO | 1.8L | Endura-DE | 1997 - Other | ABS | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Endura-DE | 1997 - Other | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Endura-DE | 1997 - Other | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Zetec | 1993 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Zetec | 1993 - 2000 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Zetec | 1993 - 2000 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Zetec | 1997 - 1999 | FFH | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Zetec | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| MONDEO | 1.8L | Zetec | 1998 - 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| MONDEO | 1.8L | Zetec | 2000 | AFCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | GDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | GEM | ● | ● | ● | ● | 0x0005 0xF027 0xF02D 0xF02F 0xF030 0xF03A 0xF09D 0xF09E 0xF09F 0xF0A0 0xF0A1 0xF0A2 0xF0A3 0xF0A4 0xF0A5 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | HEC | ● | ● | ● | ● | 0x0005 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | LHID | ● | ● | ● | ● | 0x0005 0x0032 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 | RHID | ● | ● | ● | ● | 0x0005 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 - 2007 | ABS | ● | ● | ● | ● | 0x0008 0x00F1 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 - 2007 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 - 2007 | CDP | ● | ● | ● | ● | 0x0005 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00AC |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 - 2007 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2001 - 2007 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | CMR | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | HVAC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | IPC | ● | ● | ● | ● | 0xF020 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | PDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | RFA | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATEC-HE / I4 | 2007 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | ABS | ● | ● | ● | ○ | 0x0008 0x00F1 |
| MONDEO | 2.0L | DURATORQ DI | 2001 | ABS/TCS | ● | ● | ● | ● | 0x00F1 |
| MONDEO | 2.0L | DURATORQ DI | 2001 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | FFH | ● | ● | ● | ● | 0x00CF |
| MONDEO | 2.0L | DURATORQ DI | 2001 | FIP | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | GDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | GEM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | HEC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | LHID | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.0L | DURATORQ DI | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 2.0L | DURATORQ DI | 2001 | RCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | RHID | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | DURATORQ DI | 2001 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | FFH | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | GDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | GEM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | HEC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | ICU | ○ | ○ | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | LHID | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | RHID | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | PCM | ● | ● | ● | ● | 0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | TCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | CMR | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | IPC | ● | ● | ● | ● | 0xF020 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | PDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | RFA | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 | RFA | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | ACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x011C 0x0132 0x0153 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | CCMi | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | CDP | ● | ● | ● | ● | 0x0005 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | CMR | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | IPC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | PDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | TCM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2007 - 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.0L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 | RFA | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 | TCM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | ACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x011C 0x0132 0x0153 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | CDP | ● | ● | ● | ● | 0x0005 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | CMR | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | IPC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | PDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2013 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2013 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 0x0095 0x0108 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2007 - 2013 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2011 - 2013 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | APIM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | DSP | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | FCIM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | GWM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HUD | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | RACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | RTM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCCM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | SCM-E | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 | RFA | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 | TCM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | ACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x0132 0x0153 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | CMR | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | IPC | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | PDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2007 - 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.0L | Ecoboost GTDI Chinese market only | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.0L | Zetec | 1993 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Zetec | 1993 - 2000 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Zetec | 1993 - 2000 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Zetec | 1997 - 1999 | FFH | ● | ● | ● | ● | ○ |
| MONDEO | 2.0L | Zetec | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| MONDEO | 2.0L | Zetec | 1998 - 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | ABS/TCS | ● | ● | ● | ● | 0x00F1 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | FFH | ● | ● | ● | ● | 0x00CF |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | GDM | ● | ● | ● | ● | 0x0100 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | GEM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | HEC | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | ICU | ○ | ○ | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | LHID | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 | RHID | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0090 0x0098 0x0099 0x009A 0x00A5 0x00AA 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00B9 0x00C1 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x00F1 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2001 - 2011 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 | RFA | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x011C 0x0132 0x0153 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | CMR | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | HVAC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|--------|------------|-------------|-----------|-------------|--|
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | IPC | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | PDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | ACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | CDP | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | CMR | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | DDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | DSM | ● | ● | ● | ○ | 0x00F2 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | HCM | ● | ● | ● | ○ | 0x0032 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | HVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | IPC | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | PBM | ● | ● | ● | ● | 0x00F3 0x00F4 0x00F5 0x00F7 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | PDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | PSCM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | SASM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | SRM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | TCM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | ACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | CCMii | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | CDP | ● | ● | ● | ● | 0x0005 |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | CMR | ● | ● | ● | ○ | ○ |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | HVAC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|-----------------|-------------|---------|------------|-------------|-----------|-------------|---|
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | IPC | ● | ● | ● | ● | 0xF020 |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | PBM | ● | ● | ● | ● | 0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00AC |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | PDM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | RFA | ● | ● | ● | ○ | 0x000A |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | TCM | ● | ● | ● | ● | 0x0121 0x0122 0x0123 0x0124 0x0125 |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2011 | DABM | ● | ● | ● | ○ | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2011 | IPM-A | ● | ● | ● | ○ | 0x00E5 |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2011 | RGTM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2011 | RHVAC | ● | ● | ● | ○ | ○ |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2011 | SOD-L | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2. 3L | DURATEC-HE / I4 | 2011 | SOD-R | ● | ● | ● | ○ | 0xF026 |
| MONDEO | 2. 5L | Duratec-VE | 1994 - 2001 | ABS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 2. 5L | Duratec-VE | 1994 - 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 1994 - 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 1997 - 1999 | FFH | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 1997 - 2001 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 0x0009 0x0084 |
| MONDEO | 2. 5L | Duratec-VE | 1998 - 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 2. 5L | Duratec-VE | 2001 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | GDM | ● | ● | ● | ● | 0x0100 |
| MONDEO | 2. 5L | Duratec-VE | 2001 | GEM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | HEC | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | LHID | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2. 5L | Duratec-VE | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | RCM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | RHID | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | Duratec-VE | 2001 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | I5 | 2007 | ABS | ● | ● | ● | ○ | 0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 |
| MONDEO | 2. 5L | I5 | 2007 | ACM | ● | ● | ○ | ○ | ○ |
| MONDEO | 2. 5L | I5 | 2007 | AHCM | ● | ● | ● | ○ | 0x00CF |
| MONDEO | 2. 5L | I5 | 2007 | BCMii | ● | ● | ● | ● | 0x0009 0x011B 0x011C 0x0132 0x0153 |
| MONDEO | 2. 5L | I5 | 2007 | CCMi | ● | ● | ● | ● | 0x00F9 |
| MONDEO | 2. 5L | I5 | 2007 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | I5 | 2007 | CMR | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | I5 | 2007 | DDM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | I5 | 2007 | DSM | ● | ● | ● | ● | 0x00F2 |
| MONDEO | 2. 5L | I5 | 2007 | HCM | ● | ● | ● | ● | 0x0032 |
| MONDEO | 2. 5L | I5 | 2007 | HVAC | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | I5 | 2007 | IPC | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | I5 | 2007 | PAM | ● | ● | ● | ● | ○ |
| MONDEO | 2. 5L | I5 | 2007 | PBM | ● | ● | ● | ● | 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 |
| MONDEO | 2. 5L | I5 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 2. 5L | I5 | 2007 | PDM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|-----------------|-------------|---------|------------|-------------|-----------|-------------|---|
| MONDEO | 2.5L | I5 | 2007 | PSCM | ● | ● | ● | ● | ○ |
| MONDEO | 2.5L | I5 | 2007 | RCM | ● | ● | ● | ● | 0x00EF 0x0102 |
| MONDEO | 2.5L | I5 | 2007 | RFA | ● | ● | ● | ○ | ○ |
| MONDEO | 2.5L | I5 | 2007 | SASM | ● | ● | ● | ● | ○ |
| MONDEO | 2.5L | I5 | 2007 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.5L | I5 | 2007 | TRM | ● | ● | ● | ● | ○ |
| MONDEO | 2.5L | I5 | 2007 | VDM | ● | ● | ● | ○ | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | ABS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 3.0L | Duratec SE | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 3.0L | Duratec SE | 2001 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | GDM | ● | ● | ● | ● | 0x0100 |
| MONDEO | 3.0L | Duratec SE | 2001 | GEM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | HEC | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | LHID | ● | ● | ● | ● | 0x0032 |
| MONDEO | 3.0L | Duratec SE | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 3.0L | Duratec SE | 2001 | RCM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | RHID | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec SE | 2001 | SRM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | ABS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 3.0L | Duratec-ST | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x00F1 |
| MONDEO | 3.0L | Duratec-ST | 2001 | ACM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | CDP | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | CSM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | EATC | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | GDM | ● | ● | ● | ● | 0x0100 |
| MONDEO | 3.0L | Duratec-ST | 2001 | GEM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | HEC | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | LHID | ● | ● | ● | ● | 0x0032 |
| MONDEO | 3.0L | Duratec-ST | 2001 | NAV | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | PATS | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| MONDEO | 3.0L | Duratec-ST | 2001 | RCM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | RETM | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | RHID | ● | ● | ● | ● | ○ |
| MONDEO | 3.0L | Duratec-ST | 2001 | SRM | ● | ● | ● | ● | ○ |
| Marauder | 4.6L | 4V | 2003 - 2004 | ABS/TCS | ● | ● | ● | ● | ○ |
| Marauder | 4.6L | 4V | 2003 - 2004 | DDM | ● | ● | ● | ● | 0x000A 0x000F |
| Marauder | 4.6L | 4V | 2003 - 2004 | EATC | ● | ● | ● | ● | ○ |
| Marauder | 4.6L | 4V | 2003 - 2004 | LCM | ● | ● | ● | ● | ○ |
| Marauder | 4.6L | 4V | 2003 - 2004 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Marauder | 4.6L | 4V | 2003 - 2004 | RASM | ● | ● | ● | ● | 0x0013 |
| Marauder | 4.6L | 4V | 2003 - 2004 | RCM | ● | ● | ● | ● | 0x000C |
| Marauder | 4.6L | 4V | 2003 - 2004 | VAPS | ● | ● | ● | ● | ○ |
| Mariner | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Mariner | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0008 |
| Mariner | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------|----------|-----------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Mariner | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | IC | ● | ● | ● | ● | ○ |
| Mariner | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Mariner | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| Mariner | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | RCM | ● | ● | ● | ● | 0x000C |
| Mariner | 3.0L | 4V | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Mariner | 3.0L | 4V | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0005 0x0008 |
| Mariner | 3.0L | 4V | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057 0xF058 0xF059 0xF090 |
| Mariner | 3.0L | 4V | 2006 - 2007 | IC | ● | ● | ● | ● | 0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053 0xF054 0xF055 |
| Mariner | 3.0L | 4V | 2006 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Mariner | 3.0L | 4V | 2006 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0202 |
| Mariner | 3.0L | 4V | 2006 - 2007 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| Mark LT | 5.4L | 3V | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Mark LT | 5.4L | 3V | 2006 - 2008 | 4X4 | ● | ● | ● | ● | ○ |
| Mark LT | 5.4L | 3V | 2006 - 2008 | ABS | ● | ● | ● | ● | 0x0008 0x000B 0x0005 |
| Mark LT | 5.4L | 3V | 2006 - 2008 | DSM | ● | ● | ● | ● | ○ |
| Mark LT | 5.4L | 3V | 2006 - 2008 | IC | ● | ● | ● | ● | ○ |
| Mark LT | 5.4L | 3V | 2006 - 2008 | PAM | ● | ● | ● | ● | ○ |
| Mark LT | 5.4L | 3V | 2006 - 2008 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Mark LT | 5.4L | 3V | 2006 - 2008 | RCM | ● | ● | ● | ● | 0x000C |
| Mark LT | 5.4L | 3V | 2006 - 2008 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Mark LT | 5.4L | 3V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Mark LT | 5.4L | 3V | 2008 | RETM | ● | ● | ● | ● | 0x0018 |
| Mark VIII | 4.6L | 4V | 1996 - 1998 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Mark VIII | 4.6L | 4V | 1996 - 1998 | CPM | ● | ● | ● | ● | ○ |
| Mark VIII | 4.6L | 4V | 1996 - 1998 | DDM | ● | ● | ● | ● | 0x000F |
| Mark VIII | 4.6L | 4V | 1996 - 1998 | DSM | ● | ● | ● | ● | ○ |
| Mark VIII | 4.6L | 4V | 1996 - 1998 | HEC | ● | ● | ● | ● | ○ |
| Mark VIII | 4.6L | 4V | 1996 - 1998 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Mark VIII | 4.6L | 4V | 1996 - 1998 | PSM | ● | ● | ● | ● | ○ |
| Mark VIII | 4.6L | 4V | 1996 - 1998 | SCIL | ● | ● | ● | ● | 0x0009 |
| Mark VIII | 4.6L | 4V | 1997 - 1998 | EATC | ● | ● | ● | ● | ○ |
| Mark VIII | 4.6L | 4V | 1997 - 1998 | MC | ● | ● | ● | ● | ○ |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | GEM | ● | ● | ● | ● | 0xF044 0xF048 0xF04C 0xF057 0xF085 |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | ABS | ● | ● | ● | ● | ○ |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | ACM | ● | ● | ● | ● | 0xF05A 0xF062 0xF07A |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | IC | ● | ● | ● | ● | 0x0009 0xF027 |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | OCSM | ● | ● | ● | ○ | 0x006D |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Milan | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | TCM | ● | ● | ● | ● | ○ |
| Milan | 2.3L | DURATEC-HE / I4 | 2007 - 2009 | 4X4 | ● | ● | ● | ● | ○ |
| Milan | 2.3L | DURATEC-HE / I4 | 2007 - 2009 | SDARS | ● | ● | ● | ● | ○ |
| Milan | 2.3L | DURATEC-HE / I4 | 2008 - 2009 | APIM | ● | ● | ● | ● | ○ |
| Milan | 2.3L | DURATEC-HE / I4 | 2008 - 2009 | GEM / SJB | ● | ● | ● | ● | 0x0042 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086 |
| Milan | 2.3L | DURATEC-HE / I4 | 2008 - 2009 | HVAC | ● | ● | ● | ● | ○ |
| Milan | 2.3L | DURATEC-HE / I4 | 2008 - 2009 | PAM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|-------------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | 4X4 | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | DSP | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | FCIM | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | FDIM | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | GPSM | ● | ● | ● | ○ | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | IPC | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 0x006D |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | PAM | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0023 0x0028 0x0031 0x0033 |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | PSCM | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | RCM | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Milan | 2.5L | DURATEC-HE / I4 | 2010 - 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | 4X4 | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | ABS | ● | ● | ● | ● | 0x0074 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | ACCM#2 | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | BECM | ● | ● | ● | ● | 0x006E |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | DCDC | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | DSP | ● | ● | ● | ● | 0x0005 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | FCIM | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | FDIM | ● | ● | ● | ● | 0x0005 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | GPSM | ● | ● | ● | ○ | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | IPC | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | PAM | ● | ● | ● | ● | 0x0005 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | PSCM | ● | ● | ● | ● | 0x0005 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | RCM | ● | ● | ● | ● | 0x0005 |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Milan | 2.5L | HEV / ATKINSON 4V | 2010 - 2011 | TCM | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2006 - 2007 | GEM | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2006 - 2009 | IC | ● | ● | ● | ● | 0x0005 0xF027 |
| Milan | 3.0L | 4V | 2006 - 2009 | TCM | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2006 - 2011 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Milan | 3.0L | 4V | 2006 - 2011 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Milan | 3.0L | 4V | 2006 - 2011 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 |
| Milan | 3.0L | 4V | 2006 - 2011 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0024 0x0038 0x0067 |
| Milan | 3.0L | 4V | 2006 - 2011 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Milan | 3.0L | 4V | 2007 - 2009 | SDARS | ● | ● | ● | ● | 0x0005 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Milan | 3.0L | 4V | 2007 - 2011 | 4X4 | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2008 - 2011 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Milan | 3.0L | 4V | 2008 - 2011 | GEM / SJB | ● | ● | ● | ● | 0x0005 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086 0xF08A 0x000F 0x0042 |
| Milan | 3.0L | 4V | 2008 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2008 - 2011 | PAM | ● | ● | ● | ● | 0x0005 |
| Milan | 3.0L | 4V | 2010 - 2011 | DSP | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2010 - 2011 | FCIM | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2010 - 2011 | FDIM | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2010 - 2011 | GPSM | ● | ● | ● | ○ | ○ |
| Milan | 3.0L | 4V | 2010 - 2011 | IPC | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2010 - 2011 | PSCM | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2010 - 2011 | SOD-L | ● | ● | ● | ● | ○ |
| Milan | 3.0L | 4V | 2010 - 2011 | SOD-R | ● | ● | ● | ● | ○ |
| Montego | 3.0L | 4V | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Montego | 3.0L | 4V | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0005 0xF046 |
| Montego | 3.0L | 4V | 2006 - 2007 | ACM | ● | ● | ● | ● | 0x0005 0xF05A 0xF062 0xF063 0xF07F |
| Montego | 3.0L | 4V | 2006 - 2007 | DSM | ● | ● | ● | ● | 0x0005 |
| Montego | 3.0L | 4V | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Montego | 3.0L | 4V | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x0005 0xF042 0xF044 0xF048 0xF085 |
| Montego | 3.0L | 4V | 2006 - 2007 | IC | ● | ● | ● | ● | 0x0005 0xF04D 0xF054 0xF099 |
| Montego | 3.0L | 4V | 2006 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Montego | 3.0L | 4V | 2006 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Montego | 3.0L | 4V | 2006 - 2007 | RCM | ● | ● | ● | ● | 0x0005 0x006D 0xF05D |
| Montego | 3.0L | 4V | 2006 - 2007 | RETM | ● | ● | ● | ● | ○ |
| Montego | 3.0L | 4V | 2006 - 2007 | TCM | ● | ● | ● | ● | ○ |
| Montego | 3.0L | 4V | 2007 | SDARS | ● | ● | ● | ● | ○ |
| Motorhome / Stripped Chassis / Step Van | 6.8L | 2V | 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Motorhome / Stripped Chassis / Step Van | 6.8L | 2V | 2004 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Motorhome / Stripped Chassis / Step Van | 6.8L | 3V | 2006 - 2011 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001B |
| Motorhome / Stripped Chassis / Step Van | 6.8L | 3V | 2006 - 2012 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0024 0x0067 |
| Motorhome / Stripped Chassis / Step Van | 6.8L | 3V | 2006 - 2014 | IC | ● | ● | ● | ● | ○ |
| Motorhome / Stripped Chassis / Step Van | 6.8L | 3V | 2012 | ABS | ● | ● | ● | ● | ○ |
| Motorhome / Stripped Chassis / Step Van | Other | Other | 2014 | IC | ● | ● | ● | ● | ○ |
| Mountaineer | 4.0L | 2V | 2006 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Mountaineer | 4.0L | 2V | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | DSM | ● | ● | ● | ● | 0xF041 0xF074 0xF075 0x0005 |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | IC | ● | ● | ● | ● | 0x0009 0xF027 0xF040 0xF044 0xF04D 0xF054 0xF06B 0x0005 |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | PAM | ● | ● | ● | ● | ○ |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6 |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | PRB | ● | ● | ● | ● | ○ |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | RETM | ● | ● | ● | ● | 0xF04D 0xF05A 0xF076 |
| Mountaineer | 4.0L | 2V | 2006 - 2010 | SDARS | ● | ● | ● | ● | 0x0005 0x0019 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Mountaineer | 4. 0L | 2V | 2008 – 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Mountaineer | 4. 0L | 2V | 2008 – 2010 | GEM / SJB | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0x0042 0xF042 0xF044 0xF04C |
| Mountaineer | 4. 0L | 2V | 2008 – 2010 | HVAC | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4. 0L | 2V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2000 | ARC | ● | ● | ● | ● | 0x000E |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2000 | IAB | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2002 | GEM | ● | ● | ● | ● | 0x0203 0x0204 |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2005 | DSM | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2005 | EATC | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4. 0L | V6 SOHC | 1998 – 2005 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x00C6 0x0024 |
| Mountaineer | 4. 0L | V6 SOHC | 1999 – 2005 | PAM | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 0L | V6 SOHC | 2002 | CSM | ● | ● | ● | ● | 0x000F |
| Mountaineer | 4. 0L | V6 SOHC | 2002 – 2003 | HEC | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 0L | V6 SOHC | 2002 – 2005 | 4X4 | ● | ● | ● | ● | 0x0111 |
| Mountaineer | 4. 0L | V6 SOHC | 2002 – 2005 | IC | ● | ● | ● | ● | 0x0005 0xF027 0xF044 0xF04D 0xF054 0xF071 0xF072 |
| Mountaineer | 4. 0L | V6 SOHC | 2002 – 2005 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| Mountaineer | 4. 0L | V6 SOHC | 2002 – 2005 | TPM | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4. 0L | V6 SOHC | 2003 – 2005 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Mountaineer | 4. 0L | V6 SOHC | 2004 – 2005 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Mountaineer | 4. 6L | 2V | 2002 | CSM | ● | ● | ● | ● | 0x000F |
| Mountaineer | 4. 6L | 2V | 2002 | GEM | ● | ● | ● | ● | 0x0203 0x0204 |
| Mountaineer | 4. 6L | 2V | 2002 – 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mountaineer | 4. 6L | 2V | 2002 – 2003 | HEC | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 6L | 2V | 2002 – 2005 | 4X4 | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 6L | 2V | 2002 – 2005 | DSM | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 6L | 2V | 2002 – 2005 | EATC | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4. 6L | 2V | 2002 – 2005 | IC | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4. 6L | 2V | 2002 – 2005 | PAM | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 6L | 2V | 2002 – 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x0024 |
| Mountaineer | 4. 6L | 2V | 2002 – 2005 | RCM | ● | ● | ● | ● | 0x000C |
| Mountaineer | 4. 6L | 2V | 2002 – 2005 | TPM | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4. 6L | 2V | 2003 – 2005 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Mountaineer | 4. 6L | 2V | 2004 – 2005 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Mountaineer | 4. 6L | 3V | 2006 – 2007 | EATC | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4. 6L | 3V | 2006 – 2007 | GEM | ● | ● | ● | ● | 0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 0x0005 |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | DSM | ● | ● | ● | ● | 0x0005 0xF041 0xF074 0xF075 |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | IC | ● | ● | ● | ● | 0x0009 0xF044 0x0005 0xF027 0xF04D 0xF054 |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | PAM | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6 |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | PRB | ● | ● | ● | ● | ○ |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | RETM | ● | ● | ● | ● | 0x0005 0xF04D 0xF05A 0xF076 |
| Mountaineer | 4. 6L | 3V | 2006 – 2010 | SDARS | ● | ● | ● | ● | 0x0005 0x0019 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Mountaineer | 4.6L | 3V | 2006 - 2010 | TCM | ● | ● | ● | ● | 0x00CE |
| Mountaineer | 4.6L | 3V | 2008 - 2010 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Mountaineer | 4.6L | 3V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x0005 0xF042 0xF044 0xF04C |
| Mountaineer | 4.6L | 3V | 2008 - 2010 | HVAC | ● | ● | ● | ● | 0x0005 |
| Mountaineer | 4.6L | 3V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| Mountaineer | 5.0L | Other | 1997 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0005 |
| Mountaineer | 5.0L | Other | 1997 - 2000 | ARC | ● | ● | ● | ● | 0x000E |
| Mountaineer | 5.0L | Other | 1997 - 2000 | GEM | ● | ● | ● | ● | 0x0203 0x0005 0x0204 |
| Mountaineer | 5.0L | Other | 1997 - 2000 | IAB | ● | ● | ● | ● | ○ |
| Mountaineer | 5.0L | Other | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Mountaineer | 5.0L | Other | 1997 - 2000 | RAP | ● | ● | ● | ● | 0x000F 0x000A 0x0005 0xF044 |
| Mountaineer | 5.0L | Other | 1998 - 2000 | DSM | ● | ● | ● | ● | ○ |
| Mountaineer | 5.0L | Other | 1998 - 2000 | EATC | ● | ● | ● | ● | ○ |
| Mountaineer | 5.0L | Other | 1998 - 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Mountaineer | 5.0L | Other | 1999 - 2000 | PAM | ● | ● | ● | ● | ○ |
| Mustang | 3.7L | TiVCT | 2011 - 2013 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 |
| Mustang | 3.7L | TiVCT | 2011 - 2013 | PSCM | ● | ● | ● | ○ | 0x00CB |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | BCM-B | ● | ● | ● | ● | 0x0109 |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | FDIM | ● | ● | ● | ● | ○ |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x0009 |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | PCM | ● | ● | ● | ● | 0x0009 0x0024 0x0025 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 |
| Mustang | 3.7L | TiVCT | 2011 - 2014 | RCM | ● | ● | ● | ● | ○ |
| Mustang | 3.7L | TiVCT | 2012 - 2013 | PAM | ● | ● | ● | ● | ○ |
| Mustang | 3.8L | Other | 1994 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Mustang | 3.8L | Other | 1994 - 2004 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0024 |
| Mustang | 3.8L | Other | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Mustang | 3.8L | Other | 1996 - 1998 | PATS | ● | ● | ● | ● | 0x0009 0x000A |
| Mustang | 3.8L | Other | 1999 - 2004 | GEM | ● | ● | ● | ● | 0x000A |
| Mustang | 3.8L | Other | 1999 - 2004 | HEC | ● | ● | ● | ● | 0x0009 |
| Mustang | 3.8L | Other | 1999 - 2004 | RCM | ● | ● | ● | ● | ○ |
| Mustang | 3.9L | Other | 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Mustang | 3.9L | Other | 2004 | GEM | ● | ● | ● | ● | 0x000A |
| Mustang | 3.9L | Other | 2004 | HEC | ● | ● | ● | ● | 0x0009 |
| Mustang | 3.9L | Other | 2004 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Mustang | 3.9L | Other | 2004 | RCM | ● | ● | ● | ● | ○ |
| Mustang | 4.0L | V6 SOHC | 2005 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x0005 |
| Mustang | 4.0L | V6 SOHC | 2005 - 2009 | IC | ● | ● | ● | ● | 0x0005 |
| Mustang | 4.0L | V6 SOHC | 2005 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mustang | 4.0L | V6 SOHC | 2005 - 2010 | ACM | ● | ● | ● | ● | 0x0005 0x0016 0x0017 0x0018 |
| Mustang | 4.0L | V6 SOHC | 2005 - 2010 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 0x00C5 0x00C6 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Mustang | 4. 0L | V6 SOHC | 2005 - 2010 | RCM | ● | ● | ● | ● | 0x000C |
| Mustang | 4. 0L | V6 SOHC | 2007 - 2009 | SDARS | ● | ● | ● | ● | 0x0019 |
| Mustang | 4. 0L | V6 SOHC | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Mustang | 4. 0L | V6 SOHC | 2009 - 2010 | APIM | ● | ● | ● | ● | 0x0019 |
| Mustang | 4. 0L | V6 SOHC | 2010 | BCM-B | ● | ● | ● | ● | 0x0109 |
| Mustang | 4. 0L | V6 SOHC | 2010 | FCIM | ● | ● | ● | ○ | ○ |
| Mustang | 4. 0L | V6 SOHC | 2010 | FDIM | ● | ● | ● | ● | ○ |
| Mustang | 4. 0L | V6 SOHC | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| Mustang | 4. 0L | V6 SOHC | 2010 | HVAC | ● | ● | ● | ● | ○ |
| Mustang | 4. 0L | V6 SOHC | 2010 | IPC | ● | ● | ● | ● | ○ |
| Mustang | 4. 0L | V6 SOHC | 2010 | OCSM | ● | ● | ● | ○ | 0x000C |
| Mustang | 4. 6L | 2V | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Mustang | 4. 6L | 2V | 1996 - 1998 | PATS | ● | ● | ● | ● | 0x0009 0x000A |
| Mustang | 4. 6L | 2V | 1996 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Mustang | 4. 6L | 2V | 1996 - 2004 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0024 |
| Mustang | 4. 6L | 2V | 1999 - 2004 | GEM | ● | ● | ● | ● | 0x000A |
| Mustang | 4. 6L | 2V | 1999 - 2004 | HEC | ● | ● | ● | ● | 0x0009 |
| Mustang | 4. 6L | 2V | 1999 - 2004 | RCM | ● | ● | ● | ● | ○ |
| Mustang | 4. 6L | 3V | 2005 - 2007 | GEM | ● | ● | ● | ● | 0x000A |
| Mustang | 4. 6L | 3V | 2005 - 2009 | IC | ● | ● | ● | ● | 0x0005 |
| Mustang | 4. 6L | 3V | 2005 - 2010 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mustang | 4. 6L | 3V | 2005 - 2010 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Mustang | 4. 6L | 3V | 2005 - 2010 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x00C5 |
| Mustang | 4. 6L | 3V | 2005 - 2010 | RCM | ● | ● | ● | ● | 0x000C |
| Mustang | 4. 6L | 3V | 2007 - 2009 | SDARS | ● | ● | ● | ● | 0x0019 |
| Mustang | 4. 6L | 3V | 2008 - 2010 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Mustang | 4. 6L | 3V | 2009 - 2010 | APIM | ● | ● | ● | ● | 0x0019 |
| Mustang | 4. 6L | 3V | 2010 | BCM-B | ● | ● | ● | ● | 0x0109 |
| Mustang | 4. 6L | 3V | 2010 | FCIM | ● | ● | ● | ○ | ○ |
| Mustang | 4. 6L | 3V | 2010 | FDIM | ● | ● | ● | ● | ○ |
| Mustang | 4. 6L | 3V | 2010 | GPSM | ● | ● | ● | ○ | ○ |
| Mustang | 4. 6L | 3V | 2010 | HVAC | ● | ● | ● | ● | ○ |
| Mustang | 4. 6L | 3V | 2010 | IPC | ● | ● | ● | ● | ○ |
| Mustang | 4. 6L | 3V | 2010 | OCSM | ● | ● | ● | ○ | 0x000C |
| Mustang | 4. 6L | 4V | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Mustang | 4. 6L | 4V | 1996 - 1998 | PATS | ● | ● | ● | ● | 0x0009 0x000A |
| Mustang | 4. 6L | 4V | 1996 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Mustang | 4. 6L | 4V | 1996 - 2004 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 0x0024 |
| Mustang | 4. 6L | 4V | 1999 - 2004 | GEM | ● | ● | ● | ● | 0x000A |
| Mustang | 4. 6L | 4V | 1999 - 2004 | HEC | ● | ● | ● | ● | 0x0009 |
| Mustang | 4. 6L | 4V | 1999 - 2004 | RCM | ● | ● | ● | ● | ○ |
| Mustang | 4. 6L | Other | 1996 - 1997 | ABS/TCS | ● | ● | ● | ● | ○ |
| Mustang | 4. 6L | Other | 1996 - 1997 | PATS | ● | ● | ● | ● | 0x0009 0x000A |
| Mustang | 4. 6L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Mustang | 5. 0L | BOSS | 2012 - 2013 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mustang | 5. 0L | BOSS | 2012 - 2013 | ACM | ● | ● | ● | ● | ○ |
| Mustang | 5. 0L | BOSS | 2012 - 2013 | APIM | ● | ● | ● | ● | 0x0019 |
| Mustang | 5. 0L | BOSS | 2012 - 2013 | BCM-B | ● | ● | ● | ● | 0x0109 |
| Mustang | 5. 0L | BOSS | 2012 - 2013 | FCIM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Mustang | 5.0L | BOSS | 2012 - 2013 | FDIM | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | BOSS | 2012 - 2013 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Mustang | 5.0L | BOSS | 2012 - 2013 | GPSM | ● | ● | ● | ○ | ○ |
| Mustang | 5.0L | BOSS | 2012 - 2013 | HVAC | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | BOSS | 2012 - 2013 | IPC | ● | ● | ● | ● | 0x00FA 0x0009 |
| Mustang | 5.0L | BOSS | 2012 - 2013 | OCSM | ● | ● | ● | ○ | 0x000C |
| Mustang | 5.0L | BOSS | 2012 - 2013 | PAM | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | BOSS | 2012 - 2013 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0024 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Mustang | 5.0L | BOSS | 2012 - 2013 | PSCM | ● | ● | ● | ○ | 0x00CB |
| Mustang | 5.0L | BOSS | 2012 - 2013 | RCM | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | TiVCT | 2011 - 2013 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 |
| Mustang | 5.0L | TiVCT | 2011 - 2013 | PSCM | ● | ● | ● | ○ | 0x00CB |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | BCM-B | ● | ● | ● | ● | 0x0109 |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | FDIM | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | GEM / SJB | ● | ● | ● | ● | 0x0042 0x000A |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | IPC | ● | ● | ● | ● | 0x0009 |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | OCSM | ● | ● | ● | ○ | 0x000C |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023 0x0025 |
| Mustang | 5.0L | TiVCT | 2011 - 2014 | RCM | ● | ● | ● | ● | ○ |
| Mustang | 5.0L | TiVCT | 2012 - 2013 | PAM | ● | ● | ● | ● | ○ |
| Mustang | 5.4L | 4V | 2007 | GEM | ● | ● | ● | ● | ○ |
| Mustang | 5.4L | 4V | 2007 - 2009 | IC | ● | ● | ● | ● | ○ |
| Mustang | 5.4L | 4V | 2007 - 2009 | SDARS | ● | ● | ● | ● | 0x0019 |
| Mustang | 5.4L | 4V | 2007 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mustang | 5.4L | 4V | 2007 - 2012 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Mustang | 5.4L | 4V | 2007 - 2012 | PCM | ● | ● | ● | ● | 0x0023 0x0024 0x0025 0x0080 0x0081 0x0081 0x0082 0x0083 0x0084 0x0009 0x0010 0x0028 0x0031 0x0033 0x0067 |
| Mustang | 5.4L | 4V | 2007 - 2012 | RCM | ● | ● | ● | ● | 0x000C |
| Mustang | 5.4L | 4V | 2008 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Mustang | 5.4L | 4V | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x0019 |
| Mustang | 5.4L | 4V | 2010 - 2012 | BCM-B | ● | ● | ● | ● | 0x0109 |
| Mustang | 5.4L | 4V | 2010 - 2012 | FCIM | ● | ● | ● | ○ | ○ |
| Mustang | 5.4L | 4V | 2010 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Mustang | 5.4L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Mustang | 5.4L | 4V | 2010 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Mustang | 5.4L | 4V | 2010 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Mustang | 5.4L | 4V | 2010 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C |
| Mustang | 5.4L | 4V | 2011 - 2012 | PSCM | ● | ● | ● | ○ | 0x00CB |
| Mustang | 5.4L | 4V | 2012 | PAM | ● | ● | ● | ● | ○ |
| Mustang | 5.4L | Other | 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Mustang | 5.4L | Other | 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Mustang | 5.8L | 4V | 2013 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Mustang | 5.8L | 4V | 2013 | ACM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|-------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Mustang | 5. 8L | 4V | 2013 | APIM | ● | ● | ● | ● | 0x0019 |
| Mustang | 5. 8L | 4V | 2013 | BCM-B | ● | ● | ● | ● | 0x0109 |
| Mustang | 5. 8L | 4V | 2013 | FCIM | ● | ● | ● | ● | ○ |
| Mustang | 5. 8L | 4V | 2013 | FDIM | ● | ● | ● | ● | ○ |
| Mustang | 5. 8L | 4V | 2013 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Mustang | 5. 8L | 4V | 2013 | GPSM | ● | ● | ● | ○ | ○ |
| Mustang | 5. 8L | 4V | 2013 | HVAC | ● | ● | ● | ● | ○ |
| Mustang | 5. 8L | 4V | 2013 | IPC | ● | ● | ● | ● | 0x0009 |
| Mustang | 5. 8L | 4V | 2013 | OCSM | ● | ● | ● | ○ | 0x000C |
| Mustang | 5. 8L | 4V | 2013 | PAM | ● | ● | ● | ● | ○ |
| Mustang | 5. 8L | 4V | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Mustang | 5. 8L | 4V | 2013 | PSCM | ● | ● | ● | ○ | 0x00CB |
| Mustang | 5. 8L | 4V | 2013 | RCM | ● | ● | ● | ○ | ○ |
| Mustang | 5. 8L | 4V | 2013 | VDM | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | ABS | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | APIM | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | BCM-B | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | FCIM | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | FDIM | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | GEM / SJB | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Mustang | Other | Other | 2014 | HVAC | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | IPC | ● | ● | ● | ○ | ○ |
| Mustang | Other | Other | 2014 | OCSM | ● | ● | ● | ○ | ○ |
| Mustang | Other | Other | 2014 | PCM | ● | ● | ● | ● | ○ |
| Mustang | Other | Other | 2014 | RCM | ● | ● | ● | ○ | ○ |
| Mystique | 2. 0L | Zetec | 1996 – 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Mystique | 2. 0L | Zetec | 1996 – 2000 | CSM | ● | ● | ● | ● | ○ |
| Mystique | 2. 0L | Zetec | 1996 – 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| Mystique | 2. 0L | Zetec | 1997 – 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Mystique | 2. 0L | Zetec | 1999 – 2000 | RCM | ● | ● | ● | ● | ○ |
| Mystique | 2. 5L | Duratec-VE | 1996 – 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Mystique | 2. 5L | Duratec-VE | 1996 – 2000 | CSM | ● | ● | ● | ● | ○ |
| Mystique | 2. 5L | Duratec-VE | 1996 – 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084 |
| Mystique | 2. 5L | Duratec-VE | 1997 – 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Mystique | 2. 5L | Duratec-VE | 1999 – 2000 | RCM | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 0L | FFV | 2008 – 2011 | IC | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 0L | FFV | 2008 – 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E |
| NOVO KA | 1. 0L | FFV | 2008 – 2011 | RCM | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 0L | FFV | 2008 – 2011 | RKE | ● | ● | ● | ● | 0x000A |
| NOVO KA | 1. 0L | FFV | 2009 – 2011 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| NOVO KA | 1. 0L | Zetec Rocam | 2008 – 2009 | IC | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 0L | Zetec Rocam | 2008 – 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| NOVO KA | 1. 0L | Zetec Rocam | 2008 – 2009 | RCM | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 0L | Zetec Rocam | 2008 – 2009 | RKE | ● | ● | ● | ● | 0x000A |
| NOVO KA | 1. 0L | Zetec Rocam | 2009 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| NOVO KA | 1. 6L | FFV | 2008 – 2011 | IC | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 6L | FFV | 2008 – 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------|----------|-------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| NOVO KA | 1. 6L | FFV | 2008 – 2011 | RCM | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 6L | FFV | 2008 – 2011 | RKE | ● | ● | ● | ● | 0x000A |
| NOVO KA | 1. 6L | FFV | 2009 – 2011 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| NOVO KA | 1. 6L | Zetec Rocam | 2008 – 2009 | IC | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 6L | Zetec Rocam | 2008 – 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| NOVO KA | 1. 6L | Zetec Rocam | 2008 – 2009 | RCM | ● | ● | ● | ● | ○ |
| NOVO KA | 1. 6L | Zetec Rocam | 2008 – 2009 | RKE | ● | ● | ● | ● | 0x000A |
| NOVO KA | 1. 6L | Zetec Rocam | 2009 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| NOVO KA | Other | Other | 2008 | IC | ● | ● | ● | ● | 0x0009 |
| NOVO KA | Other | Other | 2008 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| NOVO KA | Other | Other | 2008 | RCM | ● | ● | ● | ● | ○ |
| NOVO KA | Other | Other | 2008 | RKE | ● | ● | ● | ● | 0x000A |
| Navigator | 5. 4L | 3V | 2005 – 2006 | NAV | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 3V | 2005 – 2006 | VSM | ● | ● | ● | ● | 0x0005 0xF044 |
| Navigator | 5. 4L | 3V | 2005 – 2007 | EATC | ● | ● | ● | ● | 0x0005 |
| Navigator | 5. 4L | 3V | 2005 – 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 3V | 2005 – 2011 | TCM | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 3V | 2005 – 2012 | PAM | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 3V | 2005 – 2014 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Navigator | 5. 4L | 3V | 2005 – 2014 | DCSM | ● | ● | ● | ● | 0xF070 |
| Navigator | 5. 4L | 3V | 2005 – 2014 | DSM | ● | ● | ● | ● | 0xF041 0xF06C 0xF06D 0xF06F 0x0005 |
| Navigator | 5. 4L | 3V | 2005 – 2014 | IC | ● | ● | ● | ● | 0x0005 0xF027 0xF041 0xF044 0xF04A 0xF04C 0xF04D 0xF06B 0xF06E 0x0009 |
| Navigator | 5. 4L | 3V | 2005 – 2014 | LTM | ● | ● | ● | ● | 0x0005 |
| Navigator | 5. 4L | 3V | 2005 – 2014 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 0x00C5 0x0024 0x0067 |
| Navigator | 5. 4L | 3V | 2005 – 2014 | RCM | ● | ● | ● | ● | 0xF022 0xF05D 0x0005 |
| Navigator | 5. 4L | 3V | 2005 – 2014 | VDM | ● | ● | ● | ● | 0x000E 0x0013 0x0014 |
| Navigator | 5. 4L | 3V | 2007 | GEM | ● | ● | ● | ● | 0xF042 0xF049 0xF04B 0xF04C 0xF05C 0xF060 |
| Navigator | 5. 4L | 3V | 2007 – 2012 | RETM | ● | ● | ● | ● | 0x0005 0xF04D 0xF05A |
| Navigator | 5. 4L | 3V | 2007 – 2014 | ACM | ● | ● | ● | ○ | 0x0005 0xF063 0x0016 0x0017 0x0018 |
| Navigator | 5. 4L | 3V | 2007 – 2014 | DSP | ● | ● | ● | ● | 0x0005 |
| Navigator | 5. 4L | 3V | 2007 – 2014 | PRB | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 3V | 2007 – 2014 | RCU | ● | ● | ● | ● | 0xF05A |
| Navigator | 5. 4L | 3V | 2007 – 2014 | SDARS | ● | ● | ● | ● | 0x0005 |
| Navigator | 5. 4L | 3V | 2008 – 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Navigator | 5. 4L | 3V | 2008 – 2014 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 0x000A |
| Navigator | 5. 4L | 3V | 2008 – 2014 | HVAC | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 3V | 2010 – 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Navigator | 5. 4L | 3V | 2010 – 2014 | TCCM | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 3V | 2013 – 2014 | TBC | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 4V | 1999 – 2000 | 4WAS | ● | ● | ● | ● | 0x000E |
| Navigator | 5. 4L | 4V | 1999 – 2000 | GEM | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 4V | 1999 – 2000 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Navigator | 5. 4L | 4V | 1999 – 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Navigator | 5. 4L | 4V | 1999 – 2004 | DSM | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 4V | 1999 – 2004 | EATC | ● | ● | ● | ● | ○ |
| Navigator | 5. 4L | 4V | 1999 – 2004 | HEC | ● | ● | ● | ● | 0x0009 |
| Navigator | 5. 4L | 4V | 1999 – 2004 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024 |
| Navigator | 5. 4L | 4V | 1999 – 2004 | RCM | ● | ● | ● | ● | 0x000C |
| Navigator | 5. 4L | 4V | 2000 – 2004 | PAM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Navigator | 5.4L | 4V | 2003 - 2004 | 4X4 | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | 4V | 2003 - 2004 | DCSM | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | 4V | 2003 - 2004 | LTM | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | 4V | 2003 - 2004 | NAV | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | 4V | 2003 - 2004 | PCSM | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | 4V | 2003 - 2004 | TPM | ● | ● | ● | ● | 0x0023 |
| Navigator | 5.4L | 4V | 2003 - 2004 | VDM | ● | ● | ● | ● | 0x000E 0x0013 0x0014 |
| Navigator | 5.4L | 4V | 2003 - 2004 | VSM | ● | ● | ● | ● | 0x000A 0x000F |
| Navigator | 5.4L | Other | 1998 | 4WAS | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | Other | 1998 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Navigator | 5.4L | Other | 1998 | DSM | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | Other | 1998 | GEM | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | Other | 1998 | IAB | ● | ● | ● | ● | ○ |
| Navigator | 5.4L | Other | 1998 | PATS | ● | ● | ● | ● | 0x0009 |
| Navigator | 5.4L | Other | 1998 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Navigator | 5.4L | Other | 1998 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Navigator | 5.4L | Other | 1998 | RCC | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | ABS | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | ACM | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | APIM | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | DCSM | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | DSM | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | DSP | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | GEM / SJB | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | HVAC | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | IC | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | LTM | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | PCM | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | PRB | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | RCM | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | RCU | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | SDARS | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | TBC | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | TCCM | ● | ● | ● | ● | ○ |
| Navigator | Other | Other | 2013 | VDM | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 | EATC | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 | GEM | ● | ● | ● | ● | 0xF042 0xF049 0xF04B 0xF04C 0xF05C 0xF060 |
| Navigator L | 5.4L | 3V | 2007 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 - 2011 | TCM | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 - 2012 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0024 0x0067 0x0025 |
| Navigator L | 5.4L | 3V | 2007 - 2012 | RETM | ● | ● | ● | ● | 0x0005 0xF04D 0xF05A |
| Navigator L | 5.4L | 3V | 2007 - 2014 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 |
| Navigator L | 5.4L | 3V | 2007 - 2014 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Navigator L | 5.4L | 3V | 2007 - 2014 | DCSM | ● | ● | ● | ● | 0xF070 |
| Navigator L | 5.4L | 3V | 2007 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 - 2014 | DSP | ● | ● | ● | ● | 0x0005 |
| Navigator L | 5.4L | 3V | 2007 - 2014 | IC | ● | ● | ● | ● | 0xF027 0xF041 0xF044 0xF04A 0xF04C 0xF04D 0xF06B 0xF06E 0x0009 |
| Navigator L | 5.4L | 3V | 2007 - 2014 | LTM | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 - 2014 | PRB | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 - 2014 | RCM | ● | ● | ● | ● | 0xF022 0xF05D |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Navigator L | 5.4L | 3V | 2007 - 2014 | RCU | ● | ● | ● | ● | 0xF05A |
| Navigator L | 5.4L | 3V | 2007 - 2014 | SDARS | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2007 - 2014 | VDM | ● | ● | ● | ● | 0x000E 0x0013 0x0014 |
| Navigator L | 5.4L | 3V | 2008 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Navigator L | 5.4L | 3V | 2008 - 2014 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 0x000A |
| Navigator L | 5.4L | 3V | 2008 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Navigator L | 5.4L | 3V | 2010 - 2014 | TCCM | ● | ● | ● | ● | ○ |
| Navigator L | 5.4L | 3V | 2013 - 2014 | TBC | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | ABS | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | ACM | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | APIM | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | DCSM | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | DSM | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | DSP | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | GEM / SJB | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | HVAC | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | IC | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | LTM | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | PRB | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | RCM | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | RCU | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | SDARS | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | TBC | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | TCCM | ● | ● | ● | ● | ○ |
| Navigator L | Other | Other | 2013 | VDM | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP | 1999 | ABS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP | 1999 - 2002 | PCM | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP DE | 1999 | ABS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP DE | 1999 | PCM | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 2.0L | FS | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 2.0L | FS | 2001 | PCM | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 2.0L | RF-T | 1999 | ABS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 2.0L | RF-T | 1999 | PCM | ● | ● | ● | ● | ○ |
| PROBE / MX-6 | 2.0L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| PROBE / MX-6 | 2.5L | KL | 1996 - 1997 | PCM | ● | ● | ● | ● | ○ |
| Puma | 1.4L | Zetec-SE | 1998 - 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Puma | 1.4L | Zetec-SE | 1998 - 1999 | HEC | ● | ● | ● | ● | ○ |
| Puma | 1.4L | Zetec-SE | 1998 - 1999 | PATS | ○ | ○ | ● | ○ | ○ |
| Puma | 1.4L | Zetec-SE | 1998 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Puma | 1.4L | Zetec-SE | 1999 | GEM | ● | ● | ● | ● | ○ |
| Puma | 1.6L | Zetec-SE | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| Puma | 1.6L | Zetec-SE | 2001 | GEM | ● | ● | ● | ● | ○ |
| Puma | 1.6L | Zetec-SE | 2001 | HEC | ● | ● | ● | ● | ○ |
| Puma | 1.6L | Zetec-SE | 2001 | PATS | ● | ● | ● | ● | ○ |
| Puma | 1.6L | Zetec-SE | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Puma | 1.7L | Zetec-SE | 1997 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| Puma | 1.7L | Zetec-SE | 1997 - 2001 | HEC | ● | ● | ● | ● | ○ |
| Puma | 1.7L | Zetec-SE | 1997 - 2001 | PATS | ● | ● | ● | ● | ○ |
| Puma | 1.7L | Zetec-SE | 1997 - 2001 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Puma | 1.7L | Zetec-SE | 1999 - 2001 | GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| ROADSTER / MX-5 | 1.6L | B6 | 2000 | ABS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1.6L | B6 | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1.6L | B6 | 2002 | PCM | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1.8L | BP | 2000 | ABS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1.8L | BP | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1.8L | BP | 2002 | PCM | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1.8L | BP Turbo | 2003 | ABS/TCS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1.8L | BP Turbo | 2003 | PCM | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2.0L | LF | 2005 - 2008 | ABS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2.0L | LF | 2005 - 2008 | IC | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2.0L | LF | 2005 - 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ROADSTER / MX-5 | 2.0L | LF | 2005 - 2008 | RCM | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2.0L | LF | 2005 - 2008 | RHT | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2.0L | LF | 2005 - 2008 | RKE | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2.0L | LF | 2005 - 2008 | TCM | ● | ● | ● | ● | ○ |
| Ranger | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | GEM | ● | ● | ● | ● | 0x000A 0x0063 |
| Ranger | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | IC | ● | ● | ● | ● | 0x0009 |
| Ranger | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Ranger | 2.3L | DURATEC-HE / I4 | 2006 - 2009 | RCM | ● | ● | ● | ● | 0x000C |
| Ranger | 2.3L | DURATEC-HE / I4 | 2009 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Ranger | 3.0L | I4 DSL Electronic | 2005 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger | 3.0L | I4 DSL Electronic | 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger | 3.0L | I4 DSL Electronic | 2005 | GEM | ● | ● | ● | ● | 0x0063 |
| Ranger | 3.0L | I4 DSL Electronic | 2005 | IC | ● | ● | ● | ● | ○ |
| Ranger | 3.0L | I4 DSL Electronic | 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Ranger | 3.0L | I4 DSL Electronic | 2005 | RCM | ● | ● | ● | ● | ○ |
| Ranger | 3.0L | I4 DSL Electronic | 2005 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| Ranger / Courier / Mazda B Series /Bravo | 4.0L | V6 SOHC | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Courier / Mazda B Series /Bravo | 4.0L | V6 SOHC | 2003 | ESOF | ● | ● | ● | ● | ○ |
| Ranger / Courier / Mazda B Series /Bravo | 4.0L | V6 SOHC | 2003 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ABS | ● | ● | ● | ● | 0x0008 0x001E 0x00CA |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ACM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | 0x00D5 |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00B0 0x00B1 0x00B3 0x00B9 0x00BC 0x00BD 0x00C1 0x00E7 |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RCM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TCM | ● | ● | ● | ● | 0x0038 |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2004 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x0203 |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2004 - 2009 | ABS/TCS | ● | ● | ● | ● | 0x0008 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|-----------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2004 - 2011 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2004 - 2011 | IC | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2004 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0024 0x0028 0x0031 0x0033 |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2004 - 2011 | RCM | ● | ● | ● | ● | 0x000C |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2005 | TPM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | QCSM | ● | ● | ● | ○ | 0x000C |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2007 - 2011 | SDARS | ● | ● | ● | ● | 0x0019 |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2008 - 2011 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Ranger / Mazda B-Series / Courier | 2.3L | DURATEC-HE / I4 | 2010 - 2011 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Ranger / Mazda B-Series / Courier | 2.3L | OHC | 1995 - 1997 | ABS/TCS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | OHC | 1995 - 1997 | GEM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | OHC | 1995 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Ranger / Mazda B-Series / Courier | 2.3L | OHC | 1995 - 1997 | RAP | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | OHC | 1996 - 1997 | IAB | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | Other | 1996 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 2.3L | Other | 1996 - 2003 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 2.3L | Other | 1996 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Ranger / Mazda B-Series / Courier | 2.3L | Other | 2001 | PATS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | Other | 2001 - 2003 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.3L | Other | 2001 - 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Ranger / Mazda B-Series / Courier | 2.3L | Other | 2001 - 2003 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | ABS | ● | ● | ● | ● | 0x0008 0x001E 0x00CA |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | ACM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | BCMi | ● | ● | ● | ● | 0x00D5 |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | DDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | HVAC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | IPC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | PDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | RCM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | TCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | DURATEC-HE / I4 | 2011 | TRM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | Other | 1998 | IAB | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | Other | 1998 - 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 2.5L | Other | 1998 - 2001 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 2.5L | Other | 1998 - 2001 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 |
| Ranger / Mazda B-Series / Courier | 2.5L | Other | 1998 - 2001 | RAP | ● | ● | ● | ● | 0x000A |
| Ranger / Mazda B-Series / Courier | 2.5L | Other | 1999 - 2001 | PATS | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 2.5L | Other | 1999 - 2001 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.5L | Other | 2001 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.8L | Other | 2001 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.8L | Other | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 2.8L | Other | 2001 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 2.8L | Other | 2001 | PATS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2.8L | Other | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Ranger / Mazda B-Series / Courier | 2.8L | Other | 2001 | RAP | ● | ● | ● | ● | 0x000A |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|---|-------------|-----------|------------|-------------|-----------|-------------|---|
| Ranger / Mazda B-Series / Courier | 2.8L | Other | 2001 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | FFV | 1999 – 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 3.0L | FFV | 1999 – 2000 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 3.0L | FFV | 1999 – 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 3.0L | FFV | 1999 – 2000 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Ranger / Mazda B-Series / Courier | 3.0L | FFV | 1999 – 2000 | RAP | ● | ● | ● | ● | 0x000A |
| Ranger / Mazda B-Series / Courier | 3.0L | FFV | 1999 – 2000 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1995 – 2003 | RAP | ● | ● | ● | ● | 0x000A |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1995 – 2007 | GEM | ● | ● | ● | ● | 0x0203 0x000A |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1995 – 2008 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1995 – 2008 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024 |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1996 – 1998 | IAB | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1999 – 2008 | RCM | ● | ● | ● | ● | 0x000C |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2000 – 2001 | PATS | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2001 – 2008 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2004 – 2008 | IC | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2005 | TPM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2007 – 2008 | OCSM | ● | ● | ● | ○ | 0x000C |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2007 – 2008 | SDARS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2008 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ABS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ACM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RCM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TBM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1995 – 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1995 – 2002 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1995 – 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1995 – 2002 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1996 – 1998 | IAB | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1999 – 2001 | PATS | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1999 – 2002 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 2001 – 2002 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 – 2007 | GEM | ● | ● | ● | ● | 0x0203 0x000A |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 – 2009 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 – 2011 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 – 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 – 2011 | RCM | ● | ● | ● | ● | 0x000C |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|---|-------------|-----------|------------|-------------|-----------|-------------|--|
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2004 - 2011 | IC | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2005 | TPM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2007 - 2011 | OCSM | ● | ● | ● | ○ | 0x000C |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2007 - 2011 | SDARS | ● | ● | ● | ● | 0x0019 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2008 - 2011 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2010 - 2011 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | ABS/TCS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | GEM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | IC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | PCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 - 2011 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | ABS | ● | ● | ● | ● | 0x00CA |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | ACM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | BCMii | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | DDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | HVAC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | IPC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | PDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | TCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | TRM | ● | ● | ● | ● | ○ |
| S. A. Courier | 1.6L | FFV | 2007 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E |
| S. A. Courier | 1.6L | FFV | 2009 - 2011 | IC | ● | ● | ● | ● | ○ |
| S. A. Courier | 1.6L | FFV | 2009 - 2011 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| S. A. Courier | 1.6L | Zetec Rocam | 2009 | IC | ● | ● | ● | ● | ○ |
| S. A. Courier | 1.6L | Zetec Rocam | 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| S. A. Courier | 1.6L | Zetec Rocam | 2009 | TBM | ● | ● | ● | ● | 0x00D1 0x00D2 0x00D3 |
| S. A. Fiesta | 1.0L | FFV | 2006 - 2010 | ABS/TCS | ● | ● | ● | ● | 0x000B 0x0008 |
| S. A. Fiesta | 1.0L | FFV | 2006 - 2010 | IC | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.0L | FFV | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E |
| S. A. Fiesta | 1.0L | FFV | 2006 - 2010 | RCM | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.0L | FFV | 2006 - 2010 | RKE | ● | ● | ● | ● | 0x000A |
| S. A. Fiesta | 1.0L | FFV | 2010 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| S. A. Fiesta | 1.0L | Zetec Rocam | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.0L | Zetec Rocam | 2002 | IC | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.0L | Zetec Rocam | 2002 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| S. A. Fiesta | 1.0L | Zetec Rocam | 2002 | RCM | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.0L | Zetec Rocam | 2002 | RKE | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| S. A. Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | IC | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0025 |
| S. A. Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | RCM | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.4L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2011 | RKE | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.6L | FFV | 2002 - 2011 | ABS/TCS | ● | ● | ● | ● | 0x000B 0x0008 |
| S. A. Fiesta | 1.6L | FFV | 2002 - 2011 | IC | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.6L | FFV | 2002 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E |
| S. A. Fiesta | 1.6L | FFV | 2002 - 2011 | RCM | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.6L | FFV | 2002 - 2011 | RKE | ● | ● | ● | ● | 0x000A |
| S. A. Fiesta | 1.6L | FFV | 2011 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------------------|----------|-------------|-------------|---------|------------|-------------|-----------|-------------|--|
| S. A. Fiesta | 1.6L | Zetec Rocam | 2002 - 2009 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| S. A. Fiesta | 1.6L | Zetec Rocam | 2002 - 2009 | IC | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.6L | Zetec Rocam | 2002 - 2009 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| S. A. Fiesta | 1.6L | Zetec Rocam | 2002 - 2009 | RCM | ● | ● | ● | ● | ○ |
| S. A. Fiesta | 1.6L | Zetec Rocam | 2002 - 2009 | RKE | ● | ● | ● | ● | 0x000A |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A | 2005 | ABS | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A | 2005 | PCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A | 2005 | RCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A T | 2005 | ABS | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A T | 2005 | PCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A T | 2005 | RCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A T | 2005 | TCM | ● | ● | ● | ● | ○ |
| Sable | 3.0L | 2V | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Sable | 3.0L | 2V | 2003 - 2005 | EATC | ● | ● | ● | ● | ○ |
| Sable | 3.0L | 2V | 2003 - 2005 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0x0203 |
| Sable | 3.0L | 2V | 2003 - 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Sable | 3.0L | 2V | 2003 - 2005 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| Sable | 3.0L | 2V | 2004 - 2005 | ABS | ● | ● | ● | ● | 0x0008 |
| Sable | 3.0L | 2V | 2004 - 2005 | IC | ● | ● | ● | ● | 0x0005 |
| Sable | 3.0L | 4V | 1996 - 1999 | IAB | ● | ● | ● | ● | ○ |
| Sable | 3.0L | 4V | 1996 - 1999 | PATS | ● | ● | ● | ● | 0x0009 |
| Sable | 3.0L | 4V | 1996 - 1999 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Sable | 3.0L | 4V | 1996 - 1999 | RCC | ● | ● | ● | ● | ○ |
| Sable | 3.0L | 4V | 1996 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Sable | 3.0L | 4V | 1996 - 2005 | GEM | ● | ● | ● | ● | 0x0203 0x000A 0x000F |
| Sable | 3.0L | 4V | 1996 - 2005 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 0x0024 |
| Sable | 3.0L | 4V | 2000 - 2005 | EATC | ● | ● | ● | ● | ○ |
| Sable | 3.0L | 4V | 2000 - 2005 | RCM | ● | ● | ● | ● | 0x000C |
| Sable | 3.0L | 4V | 2004 - 2005 | ABS | ● | ● | ● | ● | 0x0008 |
| Sable | 3.0L | 4V | 2004 - 2005 | IC | ● | ● | ● | ● | 0x0005 |
| Sable | 3.0L | FFV | 2000 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Sable | 3.0L | FFV | 2000 - 2003 | EATC | ● | ● | ● | ● | ○ |
| Sable | 3.0L | FFV | 2000 - 2003 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0x0203 |
| Sable | 3.0L | FFV | 2000 - 2003 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Sable | 3.0L | FFV | 2000 - 2003 | RCM | ● | ● | ● | ● | ○ |
| Sable | 3.0L | Other | 1996 - 1999 | IAB | ● | ● | ● | ● | ○ |
| Sable | 3.0L | Other | 1996 - 1999 | PATS | ● | ● | ● | ● | 0x0009 |
| Sable | 3.0L | Other | 1996 - 1999 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Sable | 3.0L | Other | 1996 - 1999 | RCC | ● | ● | ● | ● | ○ |
| Sable | 3.0L | Other | 1996 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Sable | 3.0L | Other | 1996 - 2002 | GEM | ● | ● | ● | ● | 0x0203 0x000A 0x000F |
| Sable | 3.0L | Other | 1996 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Sable | 3.0L | Other | 2000 - 2002 | EATC | ● | ● | ● | ● | ○ |
| Sable | 3.0L | Other | 2000 - 2002 | RCM | ● | ● | ● | ● | ○ |
| Sable | 3.5L | 4V | 2008 - 2009 | 4X4 | ● | ● | ● | ● | ○ |
| Sable | 3.5L | 4V | 2008 - 2009 | ABS | ● | ● | ● | ● | 0x0008 |
| Sable | 3.5L | 4V | 2008 - 2009 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Sable | 3.5L | 4V | 2008 - 2009 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Sable | 3.5L | 4V | 2008 - 2009 | DSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|---|
| Sable | 3.5L | 4V | 2008 - 2009 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x0203 |
| Sable | 3.5L | 4V | 2008 - 2009 | HVAC | ● | ● | ● | ● | ○ |
| Sable | 3.5L | 4V | 2008 - 2009 | IC | ● | ● | ● | ● | 0x0009 |
| Sable | 3.5L | 4V | 2008 - 2009 | OCSM | ● | ● | ● | ○ | 0x000C |
| Sable | 3.5L | 4V | 2008 - 2009 | PAM | ● | ● | ● | ● | 0x006C |
| Sable | 3.5L | 4V | 2008 - 2009 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| Sable | 3.5L | 4V | 2008 - 2009 | RCM | ● | ● | ● | ● | ○ |
| Sable | 3.5L | 4V | 2008 - 2009 | RETM | ● | ● | ● | ● | ○ |
| Sable | 3.5L | 4V | 2008 - 2009 | SDARS | ● | ● | ● | ● | ○ |
| Sable | 3.5L | 4V | 2008 - 2009 | SECM | ● | ● | ● | ● | ○ |
| Street Ka | 1.6L | DURATEC 8V | 2003 | ABS/TCS | ● | ● | ● | ● | ○ |
| Street Ka | 1.6L | DURATEC 8V | 2003 | CSM | ● | ● | ● | ● | ○ |
| Street Ka | 1.6L | DURATEC 8V | 2003 | ECS | ● | ● | ○ | ○ | ○ |
| Street Ka | 1.6L | DURATEC 8V | 2003 | GEM | ● | ● | ● | ● | ○ |
| Street Ka | 1.6L | DURATEC 8V | 2003 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| TITAN (Isuzu OEM) | 3.0L | 4JJ1 T | 2007 - 2011 | ABS | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 3.0L | 4JJ1 T | 2007 - 2011 | GEM | ● | ● | ● | ● | 0x0148 |
| TITAN (Isuzu OEM) | 3.0L | 4JJ1 T | 2007 - 2011 | PATS | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 3.0L | 4JJ1 T | 2007 - 2011 | PCM | ● | ● | ● | ● | 0x0144 0x0149 0x015C |
| TITAN (Isuzu OEM) | 3.0L | 4JJ1 T | 2007 - 2011 | RCM | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 3.0L | 4JJ1 T | 2007 - 2011 | TCM | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 3.1L | 4JG2 | 2004 | PCM | ● | ● | ● | ● | 0x0144 |
| TITAN (Isuzu OEM) | 3.1L | 4JG2 LPG | 2004 | PCM | ● | ● | ● | ● | 0x0144 |
| TITAN (Isuzu OEM) | 4.3L | 4HF1 CNG | 2004 | PCM | ● | ● | ● | ● | 0x0144 0x0149 0x015C |
| TITAN (Isuzu OEM) | 4.6L | 4HG1 LPG | 2004 | PCM | ● | ● | ● | ● | 0x0144 0x0149 0x015C |
| TITAN (Isuzu OEM) | 4.6L | 4HV1 CNG | 2004 - 2011 | PCM | ● | ● | ● | ● | 0x0144 |
| TITAN (Isuzu OEM) | 4.6L | 4HV1 CNG | 2004 - 2011 | TCM | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 4.6L | 4HV1 CNG | 2007 - 2011 | ABS | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 4.6L | 4HV1 CNG | 2007 - 2011 | GEM | ● | ● | ● | ● | 0x0148 |
| TITAN (Isuzu OEM) | 4.6L | 4HV1 CNG | 2007 - 2011 | RCM | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 4.8L | 4HL1 | 2004 | PCM | ● | ● | ● | ● | 0x0144 0x0149 0x015C |
| TITAN (Isuzu OEM) | 4.8L | 4HL1 | 2004 | TCM | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 4.8L | 4HL1 T | 2004 | PCM | ● | ● | ● | ● | 0x0144 0x0149 0x015C |
| TITAN (Isuzu OEM) | 4.8L | 4HL1 T | 2004 | TCM | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 5.2L | 4HK1 T | 2007 | ABS | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 5.2L | 4HK1 T | 2007 | GEM | ● | ● | ● | ● | 0x0148 |
| TITAN (Isuzu OEM) | 5.2L | 4HK1 T | 2007 | PATS | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 5.2L | 4HK1 T | 2007 | PCM | ● | ● | ● | ● | 0x0144 0x0149 0x015C |
| TITAN (Isuzu OEM) | 5.2L | 4HK1 T | 2007 | RCM | ● | ● | ● | ● | ○ |
| TITAN (Isuzu OEM) | 5.2L | 4HK1 T | 2007 | TCM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | ACM | ● | ● | ● | ● | 0x0018 |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | HCM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|---------|------------|-------------|-----------|-------------|---|
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GFM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Taurus | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | 2V | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.0L | 2V | 2003 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | 2V | 2003 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0x0203 |
| Taurus | 3.0L | 2V | 2003 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 |
| Taurus | 3.0L | 2V | 2003 - 2007 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| Taurus | 3.0L | 2V | 2004 - 2007 | ABS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.0L | 2V | 2004 - 2007 | IC | ● | ● | ● | ● | 0x0005 |
| Taurus | 3.0L | 4V | 1996 - 1999 | IAB | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | 4V | 1996 - 1999 | PATS | ● | ● | ● | ● | 0x0009 |
| Taurus | 3.0L | 4V | 1996 - 1999 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Taurus | 3.0L | 4V | 1996 - 1999 | RCC | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | 4V | 1996 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.0L | 4V | 1996 - 2005 | GEM | ● | ● | ● | ● | 0x0203 0x000A 0x000F |
| Taurus | 3.0L | 4V | 1996 - 2005 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 0x0024 |
| Taurus | 3.0L | 4V | 2000 - 2005 | EATC | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | 4V | 2000 - 2005 | RCM | ● | ● | ● | ● | 0x000C |
| Taurus | 3.0L | 4V | 2004 - 2005 | ABS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.0L | 4V | 2004 - 2005 | IC | ● | ● | ● | ● | 0x0005 |
| Taurus | 3.0L | FFV | 1996 - 1999 | IAB | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | FFV | 1996 - 1999 | PATS | ● | ● | ● | ● | 0x0009 |
| Taurus | 3.0L | FFV | 1996 - 1999 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Taurus | 3.0L | FFV | 1996 - 1999 | RCC | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | FFV | 1996 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.0L | FFV | 1996 - 2003 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0x0203 |
| Taurus | 3.0L | FFV | 1996 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Taurus | 3.0L | FFV | 2000 - 2003 | EATC | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | FFV | 2000 - 2003 | RCM | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | Other | 1996 - 1999 | IAB | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | Other | 1996 - 1999 | PATS | ● | ● | ● | ● | 0x0009 |
| Taurus | 3.0L | Other | 1996 - 1999 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Taurus | 3.0L | Other | 1996 - 1999 | RCC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| Taurus | 3.0L | Other | 1996 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.0L | Other | 1996 - 2002 | GEM | ● | ● | ● | ● | 0x0203 0x000A 0x000F |
| Taurus | 3.0L | Other | 1996 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Taurus | 3.0L | Other | 2000 - 2002 | EATC | ● | ● | ● | ● | ○ |
| Taurus | 3.0L | Other | 2000 - 2002 | RCM | ● | ● | ● | ● | ○ |
| Taurus | 3.4L | Other | 1997 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.4L | Other | 1997 | GEM | ● | ● | ● | ● | 0x0203 |
| Taurus | 3.4L | Other | 1997 | PATS | ● | ● | ● | ● | 0x0009 |
| Taurus | 3.4L | Other | 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Taurus | 3.4L | SHO | 1996 - 1998 | GEM | ● | ● | ● | ● | ○ |
| Taurus | 3.4L | SHO | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Taurus | 3.4L | SHO | 1996 - 1998 | SARC | ● | ● | ● | ● | ○ |
| Taurus | 3.4L | SHO | 1996 - 1999 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.4L | SHO | 1996 - 1999 | PATS | ● | ● | ● | ● | 0x0009 |
| Taurus | 3.4L | SHO | 1996 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Taurus | 3.4L | SHO | 1996 - 1999 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Taurus | 3.4L | SHO | 1996 - 1999 | RCC | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2008 - 2009 | IC | ● | ● | ● | ● | 0x0009 |
| Taurus | 3.5L | 4V | 2008 - 2009 | SDARS | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2008 - 2009 | SECM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2008 - 2012 | 4X4 | ● | ● | ● | ● | 0x0108 |
| Taurus | 3.5L | 4V | 2008 - 2012 | ABS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.5L | 4V | 2008 - 2012 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Taurus | 3.5L | 4V | 2008 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Taurus | 3.5L | 4V | 2008 - 2012 | DSM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2008 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0x0203 |
| Taurus | 3.5L | 4V | 2008 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2008 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Taurus | 3.5L | 4V | 2008 - 2012 | PAM | ● | ● | ● | ● | 0x006C |
| Taurus | 3.5L | 4V | 2008 - 2012 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| Taurus | 3.5L | 4V | 2008 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2008 - 2012 | RETM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Taurus | 3.5L | 4V | 2010 - 2012 | DCSM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | DDM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | DSP | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | HCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | HCM-2 | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | HUD | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | IHCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | PSCM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | RFA | ● | ● | ● | ● | 0x0064 |
| Taurus | 3.5L | 4V | 2010 - 2012 | SASM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | 4V | 2010 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | 4X4 | ● | ● | ● | ● | 0x0108 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | FDIM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|---|
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | HCM-2 | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | I LCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | RETM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2012 | SASM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | HCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2013 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | DSP | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PAM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0009 0x0024 0x0025 0x0038 0x0067 0x0084 0x0010 0x0028 0x0031 0x0033 0x0095 0x0108 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | RCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2010 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | GFM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | EcoBoost - Gas Turbocharged Direct Injection | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 | ACM | ● | ● | ● | ● | 0x0018 |
| Taurus | 3.5L | TiVCT | 2013 | BCM#1 | ● | ● | ● | ○ | 0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE |
| Taurus | 3.5L | TiVCT | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Taurus | 3.5L | TiVCT | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 | HCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 | IPC | ● | ● | ● | ● | 0x00D0 |
| Taurus | 3.5L | TiVCT | 2013 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | GFM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | GPSM | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Taurus | 3.5L | TiVCT | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108 |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | SCCM | ● | ● | ● | ● | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Taurus | 3.5L | TiVCT | 2013 - 2014 | SOD-R | ● | ● | ● | ○ | ○ |
| Taurus | 3.7L | TiVCT | 2013 | C-CM | ● | ● | ● | ○ | 0x0046 |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | ABS | ● | ● | ● | ● | 0x0008 |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | APIM | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | DCSM | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | DSM | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | FCIM | ● | ● | ● | ○ | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | GFM | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | HSWM | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | HUD | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | PAM | ● | ● | ● | ○ | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | PSCM | ● | ● | ● | ○ | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | RACM | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | RFA | ● | ● | ● | ● | 0x0064 |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | RTM | ● | ● | ● | ○ | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | SOD-L | ● | ● | ● | ○ | ○ |
| Taurus | 3.7L | TiVCT | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2014 | GPSM | ● | ● | ● | ● | ○ |
| Taurus | 3.7L | TiVCT | 2014 | IPM-A | ● | ● | ● | ○ | 0x013E |
| Taurus | 3.7L | TiVCT | 2014 | RCM | ● | ● | ● | ○ | ○ |
| Taurus | 3.7L | TiVCT | 2014 | SCCM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | ABS | ● | ● | ● | ○ | ○ |
| Taurus | Other | Other | 2012 | ACM | ● | ● | ● | ○ | ○ |
| Taurus | Other | Other | 2012 | APIM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | C-CM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | DCSM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | DDM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | DSM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | DSP | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | FCIM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | FDIM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| Taurus | Other | Other | 2012 | GPSM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | HCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Taurus | Other | Other | 2012 | HCM-2 | ● | ● | ● | ○ | ○ |
| Taurus | Other | Other | 2012 | HUD | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | HVAC | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | IHCM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | IPC | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | OCSM | ● | ● | ● | ○ | ○ |
| Taurus | Other | Other | 2012 | PAM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Taurus | Other | Other | 2012 | PSCM | ● | ● | ● | ○ | ○ |
| Taurus | Other | Other | 2012 | RCM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | RETM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | RFA | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | SASM | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Taurus | Other | Other | 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Taurus X | 3.5L | 4V | 2008 - 2009 | 4X4 | ● | ● | ● | ● | ○ |
| Taurus X | 3.5L | 4V | 2008 - 2009 | ABS | ● | ● | ● | ● | 0x0008 |
| Taurus X | 3.5L | 4V | 2008 - 2009 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 |
| Taurus X | 3.5L | 4V | 2008 - 2009 | APIM | ● | ● | ● | ○ | 0x0019 0x001C |
| Taurus X | 3.5L | 4V | 2008 - 2009 | DSM | ● | ● | ● | ● | ○ |
| Taurus X | 3.5L | 4V | 2008 - 2009 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| Taurus X | 3.5L | 4V | 2008 - 2009 | HVAC | ● | ● | ● | ● | ○ |
| Taurus X | 3.5L | 4V | 2008 - 2009 | IC | ● | ● | ● | ● | 0x0009 |
| Taurus X | 3.5L | 4V | 2008 - 2009 | LTM | ● | ● | ● | ● | ○ |
| Taurus X | 3.5L | 4V | 2008 - 2009 | OCSM | ● | ● | ● | ○ | 0x000C |
| Taurus X | 3.5L | 4V | 2008 - 2009 | PAM | ● | ● | ● | ● | 0x006C |
| Taurus X | 3.5L | 4V | 2008 - 2009 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 |
| Taurus X | 3.5L | 4V | 2008 - 2009 | RCM | ● | ● | ● | ● | ○ |
| Taurus X | 3.5L | 4V | 2008 - 2009 | RETM | ● | ● | ● | ● | ○ |
| Taurus X | 3.5L | 4V | 2008 - 2009 | SDARS | ● | ● | ● | ● | ○ |
| Taurus X | 3.5L | 4V | 2008 - 2009 | SECM | ● | ● | ● | ● | ○ |
| Telstar | 1.8L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| Telstar | 2.0L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| Telstar | 2.5L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| Thunderbird | 3.8L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0012 |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | ACM | ● | ● | ● | ● | ○ |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | DDM | ● | ● | ● | ● | 0x000A 0x000F |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | EATC | ● | ● | ● | ● | ○ |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | GEM | ● | ● | ● | ● | ○ |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | HEC | ● | ● | ● | ● | 0x0009 0x00C7 |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 0x00C6 0x0024 |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | RCM | ● | ● | ● | ● | ○ |
| Thunderbird | 3.9L | 4V | 2002 - 2005 | REM | ● | ● | ● | ● | ○ |
| Thunderbird | 4.6L | 2V | 1994 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Thunderbird | 4.6L | Other | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Titan | 4.0L | TF | 2000 - 2002 | PCM | ● | ● | ● | ● | ○ |
| Town Car | 4.6L | 2V | 1995 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Town Car | 4.6L | 2V | 1995 - 2007 | EATC | ● | ● | ● | ● | ○ |
| Town Car | 4.6L | 2V | 1995 - 2011 | DDM | ● | ● | ● | ● | 0x000F 0x000A 0xF044 0xF045 0x0005 0x0042 |
| Town Car | 4.6L | 2V | 1995 - 2011 | DSM | ● | ● | ● | ● | 0xF041 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------|----------|--|-------------|---------|------------|-------------|-----------|-------------|--|
| Town Car | 4. 6L | 2V | 1995 - 2011 | LCM | ● | ● | ● | ● | 0xF027 0xF042 0xF043 0x0005 |
| Town Car | 4. 6L | 2V | 1995 - 2011 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024 0x00C5 |
| Town Car | 4. 6L | 2V | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Town Car | 4. 6L | 2V | 1998 - 2003 | CPM | ● | ● | ● | ● | ○ |
| Town Car | 4. 6L | 2V | 1998 - 2004 | NGSC | ● | ● | ● | ● | ○ |
| Town Car | 4. 6L | 2V | 1998 - 2005 | ACM | ● | ● | ● | ● | 0x0005 |
| Town Car | 4. 6L | 2V | 1998 - 2005 | HEC | ● | ● | ● | ● | 0x0009 |
| Town Car | 4. 6L | 2V | 1998 - 2006 | RASM | ● | ● | ● | ● | 0x0013 0x0005 |
| Town Car | 4. 6L | 2V | 1999 - 2011 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| Town Car | 4. 6L | 2V | 2002 - 2003 | RESCU | ● | ● | ● | ● | ○ |
| Town Car | 4. 6L | 2V | 2003 - 2010 | MC | ● | ● | ● | ● | ○ |
| Town Car | 4. 6L | 2V | 2003 - 2010 | NAV | ● | ● | ● | ● | 0x0016 |
| Town Car | 4. 6L | 2V | 2003 - 2011 | LTM | ● | ● | ● | ● | ○ |
| Town Car | 4. 6L | 2V | 2003 - 2011 | PAM | ● | ● | ● | ● | ○ |
| Town Car | 4. 6L | 2V | 2005 - 2011 | ABS | ● | ● | ● | ● | 0x0008 0x0005 0xF046 |
| Town Car | 4. 6L | 2V | 2006 - 2011 | IC | ● | ● | ● | ● | 0x0005 |
| Town Car | 4. 6L | 2V | 2006 - 2011 | RATC | ● | ● | ● | ● | ○ |
| Town Car | 4. 6L | 2V | 2007 - 2011 | VDM | ● | ● | ● | ● | 0x0013 0x0014 |
| Town Car | 4. 6L | 2V | 2008 - 2011 | HVAC | ● | ● | ● | ● | ○ |
| Tracer | 1. 9L | 1. 4 PT-E SFI | 1996 | ABS/TCS | ● | ● | ● | ● | ○ |
| Tracer | 1. 9L | 1. 4 PT-E SFI | 1996 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Tracer | 1. 9L | 1. 4 PT-E SFI | 1996 | RAP | ● | ● | ● | ● | ○ |
| Tracer | 2. 0L | SPI | 1997 - 1999 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Tracer | 2. 0L | SPI | 1997 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Tracer | 2. 0L | SPI | 1997 - 1999 | RAP | ● | ● | ● | ● | 0x000A |
| Tracer | 2. 0L | SPI | 1998 | ECS | ● | ● | ● | ● | ○ |
| Tracer | 2. 0L | SPI | 1999 | IAB | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | APIM | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | AWD#1 | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | CCMi | ● | ● | ● | ● | 0x00F9 |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | FCIM | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | HCM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | PAM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | SASM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | TRM | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | APIM | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | AWD#1 | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | CCMi | ● | ● | ● | ● | 0x00F9 |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | FCIM | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | HCM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | PAM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | SASM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | TRM | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | TDCi StgVI | 2014 | APIM | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | TDCi StgVI | 2014 | AWD#1 | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | TDCi StgVI | 2014 | CCMi | ● | ● | ● | ● | 0x00F9 |
| Transit | 2. 2L | TDCi StgVI | 2014 | FCIM | ● | ● | ● | ● | ○ |
| Transit | 2. 2L | TDCi StgVI | 2014 | HCM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | TDCi StgVI | 2014 | PAM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | TDCi StgVI | 2014 | SASM | ● | ● | ● | ○ | ○ |
| Transit | 2. 2L | TDCi StgVI | 2014 | TRM | ● | ● | ● | ● | ○ |
| Transit | 3. 2L | Duratorq Turbo Diesel Common Rail Injection | 2014 | TCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------|----------|--|-------------|-----------|------------|-------------|-----------|-------------|--|
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | BCMii | ● | ● | ● | ● | 0x00D5 0x0101 |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | DDM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | HCM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | HVAC | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x0114 |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | PDM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.0L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | TRM | ● | ● | ● | ● | ○ |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | BCMii | ● | ● | ● | ● | 0x00D5 0x0101 |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | DDM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | HCM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | HVAC | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | PDM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | Duratorq Turbo Diesel Common Rail Injection StgV | 2014 | TRM | ● | ● | ● | ● | ○ |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | BCMii | ● | ● | ● | ● | 0x00D5 0x0101 |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | DDM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | HCM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | HVAC | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | PDM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | EcoBoost – Gas Turbocharged Direct Injection | 2014 | TRM | ● | ● | ● | ● | ○ |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | AHCM | ● | ● | ● | ○ | 0x00CF |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | BCMii | ● | ● | ● | ● | 0x00D5 0x0101 |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | DDM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | HCM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | HVAC | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | PDM | ● | ● | ● | ○ | ○ |
| Transit Connect | 1.6L | TDCi ECO III | 2014 | TRM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | 2.0 DOHC SFI (8V) | 1995 – 1997 | PATS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | 2.0 DOHC SFI (8V) | 1995 – 1999 | ABS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | 2.0 DOHC SFI (8V) | 1995 – 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | 2.0 DOHC SFI (8V) | 1995 – 1999 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | 2.0 DOHC SFI (8V) | 1995 – 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 |
| Transit Connect | 2.0L | 2.0 DOHC SFI (8V) | 1999 | AFCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 – 2012 | ABS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 – 2012 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 – 2012 | GEM / SJB | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 – 2012 | IC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 – 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x006D |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 – 2012 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 – 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 - 2012 | SRM | ● | ● | ● | ○ | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2010 - 2012 | VSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATEC-HE / I4 | 2012 | APIM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | EPB | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | FFH | ● | ● | ● | ● | 0x00CF |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | FIP | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | HEC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | PATS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | RASM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | DURATORQ DI | 2001 | TCM | ● | ● | ● | ● | 0x003F |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | FFH | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | FIP | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | HEC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | ICU | ○ | ○ | ● | ○ | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0092 |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | RASM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.0L | Duratorq Turbo Diesel Common Rail Injection | 2001 | TCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS | ● | ● | ● | ● | 0x0008 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135 |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | BCMii | ● | ● | ● | ● | 0x0009 0x011C |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | FFH | ● | ● | ● | ● | 0x00CF |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | IPC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x00A6 0x00A7 0x00A8 0x00A9 0x00B0 0x00B1 0x00B5 0x00B6 0x00C0 0x00C1 0x00C2 0x00C4 |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | ABS | ● | ● | ● | ● | 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135 |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | BCMii | ● | ● | ● | ● | 0x011C |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | FFH | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | IPC | ● | ● | ● | ● | 0xF020 |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Inj Stage V | 2006 | SRM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS | ● | ● | ● | ● | 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | BCMii | ● | ● | ● | ● | 0x011C |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | FFH | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | IPC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DOHC SFI (16V) | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Transit Connect | 2.3L | DOHC SFI (16V) | 2001 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DOHC SFI (16V) | 2001 | HEC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DOHC SFI (16V) | 2001 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DOHC SFI (16V) | 2001 | PATS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DOHC SFI (16V) | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect | 2.3L | DOHC SFI (16V) | 2001 | RASM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DOHC SFI (16V) | 2001 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | ABS | ● | ● | ● | ● | 0x0008 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135 |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | BCMii | ● | ● | ● | ● | 0x0009 0x011C |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | FFH | ● | ● | ● | ● | 0x00CF |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | IPC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x00AC |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.3L | DURATEC-HE / I4 | 2006 | SRM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | EPB | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | FFH | ● | ● | ● | ● | 0x00CF |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | FIP | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | HEC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | PATS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | RASM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | DURATORQ DI | 2000 | TCM | ● | ● | ● | ● | 0x003F |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2000 | HEC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2000 | ICU | ○ | ○ | ● | ○ | ○ |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2000 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2000 - 2006 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2000 - 2006 | FFH | ● | ● | ● | ● | 0x00CF |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2000 - 2006 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2000 - 2006 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0090 0x0098 0x00A6 0x00A7 0x00A8 0x00A9 0x00B0 0x00B1 0x00B5 0x00B6 0x00C0 0x00C1 0x00C2 0x00C4 |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2000 - 2006 | RCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------|----------|---|-------------|-----------|------------|-------------|-----------|-------------|--|
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS | ● | ● | ● | ● | 0x0008 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135 |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | BCMii | ● | ● | ● | ● | 0x0009 0x011C |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | IPC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.4L | Duratorq Turbo Diesel Common Rail Injection | 2006 | TBM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | 2.5 turbo diesel engines with EPIC | Other | ABS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | 2.5 turbo diesel engines with EPIC | Other | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | 2.5 turbo diesel engines with EPIC | Other | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | 2.5 turbo diesel engines with EPIC | Other | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 |
| Transit Connect | 2.5L | IVCT | 2014 | DDM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | IVCT | 2014 | FCIM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | IVCT | 2014 | GPSM | ● | ● | ● | ○ | ○ |
| Transit Connect | 2.5L | IVCT | 2014 | HCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | IVCT | 2014 | HVAC | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | IVCT | 2014 | OCSM | ● | ● | ● | ● | 0x000C |
| Transit Connect | 2.5L | IVCT | 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Transit Connect | 2.5L | IVCT | 2014 | PCM | ● | ● | ● | ● | 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Transit Connect | 2.5L | IVCT | 2014 | PDM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | IVCT | 2014 | PSCM | ● | ● | ● | ● | ○ |
| Transit Connect | 2.5L | IVCT | 2014 | TRM | ● | ● | ● | ● | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | ABS | ● | ● | ● | ● | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | ACCM#2 | ● | ● | ● | ● | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | GEM / SJB | ● | ● | ● | ● | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | IC | ● | ● | ● | ● | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | PSCM | ● | ● | ● | ○ | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | RCM | ● | ● | ● | ○ | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2011 - 2013 | VSM | ● | ● | ● | ● | ○ |
| Transit Connect | 28kWh | Battery Electric Vehicle | 2013 | APIM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS | ● | ● | ● | ● | 0x0008 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135 |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | BCMii | ● | ● | ● | ● | 0x0009 0x011C |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | FFH | ● | ● | ● | ● | 0x00CF |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | IPC | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x00A6 0x00A7 0x00A8 0x00A9 0x00B0 0x00B1 0x00B5 0x00B6 0x00C0 0x00C1 0x00C2 0x00C4 |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS | ● | ● | ● | ● | 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135 |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | BCMii | ● | ● | ● | ● | 0x011C |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|---|-------------|-----------|------------|-------------|-----------|-------------|--|
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | FFH | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | IPC | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2006 | SRM | ● | ● | ● | ● | ○ |
| Transit Connect | Other | Other | 2013 | ABS | ● | ● | ● | ● | ○ |
| Transit Connect | Other | Other | 2013 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect | Other | Other | 2013 | APIM | ● | ● | ● | ● | ○ |
| Transit Connect | Other | Other | 2013 | GEM / SJB | ● | ● | ● | ● | ○ |
| Transit Connect | Other | Other | 2013 | IC | ● | ● | ● | ● | ○ |
| Transit Connect | Other | Other | 2013 | OCSM | ● | ● | ● | ● | ○ |
| Transit Connect | Other | Other | 2013 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect | Other | Other | 2013 | RCM | ● | ● | ● | ○ | ○ |
| Transit Connect | Other | Other | 2013 | VSM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 | HEC | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 | ICU | ○ | ○ | ● | ○ | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2007 | ECS | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2009 | FFH | ● | ● | ● | ● | 0x00CF |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2009 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2002 - 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0009 0x0092 0x0092 0x006F 0x0090 0x0098 0x0099 0x00AB 0x00AC 0x00B4 0x00C1 |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2009 | ABS | ● | ● | ● | ● | 0x002B 0x0054 0x00D7 0x00DD 0x00E2 0x00E8 |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2009 | ACM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2009 | IC | ● | ● | ● | ● | 0x0009 |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2007 - 2009 | SRM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2009 | GEM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Duratorq Turbo Diesel Common Rail Injection | 2009 | RCM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Endura DI | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Endura DI | 2002 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Endura DI | 2002 | ECS | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Endura DI | 2002 | FFH | ● | ● | ● | ● | 0x00CF |
| Transit Connect / Tourneo Connect | 1.8L | Endura DI | 2002 | FIP | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Endura DI | 2002 | HEC | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Endura DI | 2002 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Endura DI | 2002 | PCM | ● | ● | ● | ● | 0x0009 0x000A 0x0080 0x0081 0x0082 0x0083 |
| Transit Connect / Tourneo Connect | 1.8L | Zetec | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Zetec | 2002 | AFCM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Zetec | 2002 | CSM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Zetec | 2002 | ECS | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Zetec | 2002 | FFH | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Zetec | 2002 | HEC | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Zetec | 2002 | PAM | ● | ● | ● | ● | ○ |
| Transit Connect / Tourneo Connect | 1.8L | Zetec | 2002 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0084 |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | ABS | ● | ● | ● | ○ | 0x00DD 0x00E8 |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | ACM | ● | ● | ● | ○ | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | AHCM | ● | ● | ● | ○ | 0x00CF |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | APIM | ● | ● | ● | ● | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | BCMii | ● | ● | ● | ● | 0x0009 0x011C |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|------------|----------|---|-------------|---------|------------|-------------|-----------|-------------|---|
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | CCMii | ● | ● | ● | ● | 0x00F9 |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | FCDIM | ● | ● | ● | ● | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | GPSM | ● | ● | ● | ○ | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | HCM | ● | ● | ● | ○ | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | IPC | ● | ● | ● | ○ | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | IPM-A | ● | ● | ● | ● | 0x00E5 |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | IPM-B | ● | ● | ● | ○ | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | PAM | ● | ● | ● | ○ | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0092 0x0098 0x0099 0x009A 0x00B0 0x00B1 0x00B3 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3 0x00E7 0x013B |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | RCM | ● | ● | ● | ○ | 0x00EF |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | SASM | ● | ● | ● | ○ | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | TBC | ● | ● | ● | ○ | ○ |
| V362 | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2012 | TRM | ● | ● | ● | ○ | ○ |
| VX-1 | 1.4L | K14B | Other | ABS | ● | ● | ● | ○ | 0x0212 |
| VX-1 | 1.4L | K14B | Other | BCM#1 | ● | ● | ● | ● | ○ |
| Villager | 3.3L | Other | 2001 - 2002 | PCM | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1995 - 1998 | GEM | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1995 - 1999 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Windstar | 3.0L | V6 OHV | 1995 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 |
| Windstar | 3.0L | V6 OHV | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1996 - 1998 | PATS | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1998 | RAP | ● | ● | ● | ● | 0x000A |
| Windstar | 3.0L | V6 OHV | 1999 | DDM | ● | ● | ● | ● | 0x000A |
| Windstar | 3.0L | V6 OHV | 1999 | FEM | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1999 | IC | ● | ● | ● | ● | 0x0009 |
| Windstar | 3.0L | V6 OHV | 1999 | MC | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1999 | NGSC | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1999 | PAM | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1999 | RCM | ● | ● | ● | ● | ○ |
| Windstar | 3.0L | V6 OHV | 1999 | REM | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 1995 - 1998 | GEM | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 1995 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x0005 0x0012 |
| Windstar | 3.8L | V6 OHV | 1995 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 |
| Windstar | 3.8L | V6 OHV | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 1996 - 1998 | PATS | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 1998 | RAP | ● | ● | ● | ● | 0x000A |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | DDM | ● | ● | ● | ● | 0x000A 0x0005 0xF045 |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | FEM | ● | ● | ● | ● | 0x0005 0xF042 0xF045 0xF08D 0xF090 0xF091 0xF092 0xF0B4 |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | IC | ● | ● | ● | ● | 0x0009 0xF027 0xF08E 0xF08F |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | LPSDM | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | MC | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | NGSC | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | PAM | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | RCM | ● | ● | ● | ● | 0x000C |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | REM | ● | ● | ● | ● | 0x000F |
| Windstar | 3.8L | V6 OHV | 1999 - 2003 | RPSDM | ● | ● | ● | ● | ○ |
| Windstar | 3.8L | V6 OHV | 2000 - 2003 | DSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | 4X4 | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|------------|----------|-------------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | ABS | ● | ● | ● | ● | 0x0074 |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | ACCM#2 | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | ACM | ● | ● | ● | ○ | 0x0017 0x0018 |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | APIM | ● | ● | ● | ● | 0x0019 |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | BECM | ● | ● | ● | ● | 0x006E |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | DCDC | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | DCSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | DDM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | DSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | DSP | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | FCIM | ● | ● | ● | ○ | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | GPSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | HCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | ILCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | IPC | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | OCSM | ● | ● | ● | ● | 0x000C 0x0015 |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | PSCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 2.5L | HEV / ATKINSON 4V | 2011 - 2012 | TCM | ● | ● | ● | ○ | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | ABS | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | ACM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | DCSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | DDM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | DSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | DSP | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | EATC | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | GEM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | IC | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | OCSM | ● | ● | ● | ○ | ○ |
| Zephyr/MKZ | 3.0L | 4V | 2006 | PCM | ● | ● | ● | ● | 0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Zephyr/MKZ | 3.0L | 4V | 2006 | RCM | ● | ● | ● | ● | 0x0005 |
| Zephyr/MKZ | 3.0L | 4V | 2006 | TCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2007 | EATC | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2007 | GEM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2009 | IC | ● | ● | ● | ● | 0x0005 0xF027 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2009 | SDARS | ● | ● | ● | ● | 0x0005 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | ABS | ● | ● | ● | ● | 0x0005 0x0012 0x0008 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | ACM | ● | ● | ● | ● | 0xF05A 0xF062 0xF07A 0x0017 0x0018 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | DCSM | ● | ● | ● | ● | 0x0005 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | DDM | ● | ● | ● | ● | 0x0005 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | DSM | ● | ● | ● | ● | 0x0005 0xF041 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | DSP | ● | ● | ● | ● | 0x0005 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x0015 0x006D |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|------------|----------|------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 0x0037 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | RCM | ● | ● | ● | ● | 0xF022 0xF05D 0x0005 |
| Zephyr/MKZ | 3.5L | 4V | 2007 - 2012 | TCM | ● | ● | ● | ● | 0x0038 |
| Zephyr/MKZ | 3.5L | 4V | 2008 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Zephyr/MKZ | 3.5L | 4V | 2008 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x0005 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086 0xF08A 0x000A 0x000F 0x0042 0xF042 0xF049 0xF04B |
| Zephyr/MKZ | 3.5L | 4V | 2008 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2008 - 2012 | PAM | ● | ● | ● | ● | 0x0005 |
| Zephyr/MKZ | 3.5L | 4V | 2010 - 2012 | FCIM | ● | ● | ● | ○ | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2010 - 2012 | FDIM | ● | ● | ● | ● | 0x0005 0xF062 |
| Zephyr/MKZ | 3.5L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2010 - 2012 | HCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2010 - 2012 | IILCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2010 - 2012 | IPC | ● | ● | ● | ● | 0x0005 |
| Zephyr/MKZ | 3.5L | 4V | 2010 - 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | 3.5L | 4V | 2010 - 2012 | SOD-R | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | ABS | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | ACM | ● | ● | ● | ○ | ○ |
| Zephyr/MKZ | Other | Other | 2012 | APIM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | DCSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | DDM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | DSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | DSP | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | FCIM | ● | ● | ● | ○ | ○ |
| Zephyr/MKZ | Other | Other | 2012 | FDIM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| Zephyr/MKZ | Other | Other | 2012 | GPSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | HCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | HVAC | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | IILCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | IPC | ● | ● | ● | ● | 0x0009 |
| Zephyr/MKZ | Other | Other | 2012 | OCSM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | PAM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | RCM | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | SOD-L | ● | ● | ● | ● | ○ |
| Zephyr/MKZ | Other | Other | 2012 | SOD-R | ● | ● | ● | ● | ○ |

Special Function

| Index | Specil Function Name | Index | Specil Function Name |
|-------|--|-------|--|
| 0005 | Programmable Module Installation | 0006 | Module Reprogramming |
| 0007 | Programmable Parameters | 0008 | ABS Service Bleed |
| 0009 | PATS Functions | 000A | Remote Keyless Entry |
| 000B | G Sensor Calibration | 000C | Passenger System Reset |
| 000D | Neutral Position Setting | 000E | Ride Height Calibration |
| 000F | Factory Keyless Entry Code | 0010 | Stop Use of Transmission Adaptive |
| 0011 | Power Seat Calibration | 0012 | IVD Initialization Sequence |
| 0013 | Pneumatic Test | 0014 | Accurate Trim Test |
| 0015 | Passenger Zero Seat Weight Test | 0016 | Microphone Test |
| 0017 | Audio Speaker Walkaround Test | 0018 | Infotainment Display Test |
| 0019 | Tones Test | 001A | TPMS Functions |
| 001B | Zero Speed Test | 001C | Rear Tones Test |
| 001D | Monotones Test | 001E | Sensor Initialization |
| 001F | EPB calibration. | 0020 | EATC Operation Check |
| 0021 | Rain Sensor Reset | 0022 | LPSDM and RPSDM Service Function |
| 0023 | Power Balance | 0024 | EVAP Test |
| 0025 | Reset PCM KAM | 0026 | OBDII Modes |
| 0027 | Clear Transmission Adaptive Learning | 0028 | Clear Transmission Adaptive Tables |
| 0029 | Configure All Three Sensors Together. | 002A | Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors. |
| 002B | Configure the lateral acceleration sensor. | 002C | Configure the pressure sensor. |
| 002D | FFH SelfTest and Prefill Utility | 002E | FFH Start Heater Utility |
| 002F | FFH Unlock Utility | 0030 | Auxiliary vehicle ID reset |
| 0031 | Halt Transmission Adaptive Learning | 0032 | Headlamp Alignment |
| 0033 | Resume Transmission Adaptive Learning | 0034 | Resume Transmission Adaptive Tables |
| 0035 | Keyfob Training | 0036 | Transmission |
| 0037 | Transmission Learning | 0038 | Transmission Solenoid Body IDN |
| 0039 | VSM Service Functions | 003A | A/C Test |
| 003B | ACM | 003C | ACM Security Bypass Test |
| 003D | Air/Fuel Learning | 003E | AM Antenna Reception Sensitivity Test |
| 003F | ASM Service Functions | 0040 | audio configuration |
| 0041 | Auto Leveling Sensor Re-zero Procedure | 0042 | Tire Pressure Monitoring System |
| 0043 | BSM Radar Test | 0044 | Button Test |
| 0045 | CAN Bus Fault Test | 0046 | CCM Calibration |
| 0047 | Clear EGR Adaptive Tables | 0048 | Clear Fuel Injector&HP Pump Adaptive Table |
| 0050 | Clearing of Learning Value | 0051 | Component/Parameter Reset |
| 0053 | Configure the steering angle sensor | 0054 | Configure the yaw rate sensor |
| 0055 | DATA Reset | 0056 | DPF |
| 0057 | DPF Component Parameter | 0058 | DPF Manual Regeneration |
| 0059 | DPF Parameter Reset | 005A | Electronic Throttle Control |
| 005B | EPS Steering Angle Calibration | 005C | ETB/EGR Initialization |
| 005D | FACM | 005E | FFH Operation Check |
| 005F | Gauge Test | 0060 | ICCM Aiming Adjustment |
| 0061 | Illumination Test | 0062 | Input and Data Test |
| 0063 | Interior Scan Test | 0064 | Keyless Entry Keypad Code Reset |
| 0065 | Learning | 0066 | Misfire Check |
| 0067 | Misfire Monitor Neutral Profile Correction | 0068 | Module Identification |
| 0069 | Multifunction Output Test | 006A | Network Test |
| 006B | New FACM | 006C | Parking Aid Switch Test |
| 006D | Passenger Seat Weight Sensor ReZero | 006E | Rebalance |
| 006F | Reset the Knock Sensor Learned Values | 0070 | Reset Transmission Tables |
| 0071 | Resetting adaptive values | 0072 | RVM Aiming |
| 0074 | Service Routine | 0075 | Specil Ignition ON |
| 0076 | Steering angle sensor calibration | 0077 | Supplemental Heater test |

| Index | Specil Function Name | Index | Specil Function Name |
|-------|---|-------|---|
| 0080 | Mode 1 Powertrain Data | 0081 | Mode 6 On-Board Test Results |
| 0082 | Mode 8 - On-Board device control | 0083 | Mode 9 - Vehicle Information |
| 0084 | OBD Drive Cycle | 0085 | Service Functions |
| 0090 | Diesel Particulate Filter Static Regeneration | 0091 | DPF Regeneration Suspension |
| 0092 | Fuel Injector Correction Factors | 0093 | IQA |
| 0094 | Refill the FAT. | 0095 | Relearn Vehicle Data |
| 0096 | Reset Charge Air Cooler Bypass Valve Position | 0097 | Reset the Cooling Fan Motor Learned Values |
| 0098 | Reset the Diesel Particulate Filter Learned | 0099 | Reset the Exhaust Gas Recirculation Valve Learned |
| 009A | Reset the Intake Air Throttle Valve Learned | 009B | Reset / Clear Specified Function |
| 009C | SCR Dosing Measurement Test | 009D | SCR Parameter Reset |
| 009E | SCR System Emptying | 009F | SCR System Refill Activation |
| 00A0 | SCR Visual Leak Check | 00A1 | System Prime |
| 00A2 | WIF Reset | 00A3 | DPF Reset |
| 00A4 | Enter the Fuel Injector Default Count Value | 00A5 | Clutch Switch Learn |
| 00A6 | Engine Oil Quality History | 00A7 | Fuel Injection Pump Learn |
| 00A8 | Fuel Injector Pilot Correction Learn | 00A9 | Fuel System Leak Test |
| 00AA | Initialize the Exhaust Gas Related Component. | 00AB | Reset Differential Pressure Sensor Learned Values |
| 00AC | Reset KAM | 00AD | Reset MAF Sensor Drift. |
| 00AE | Reset MAF Sensor Offset. | 00AF | Reset the air conditioning compressor learned values. |
| 00B0 | Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values | 00B1 | Reset the Exhaust Gas Temperature Value |
| 00B2 | Reset the Fuel Injection Pump Learned Values | 00B3 | Reset the Fuel Injector Learned Values |
| 00B4 | Reset the Fuel Metering Valve Learned Values | 00B5 | Reset the Fuel Pressure Relief Valve Open Count Learned Value |
| 00B6 | Reset the Fuel Pressure Relief Valve Open Duration Learned Value | 00B7 | Reset the Fuel Rail Pressure Sensor Learned Values |
| 00B8 | Reset the Heated Exhaust Gas Oxygen Sensor Learned Values | 00B9 | Reset the Mass Air Flow Sensor Learned Values |
| 00BA | Reset the Neutral Gear Position Learned Value | 00BB | Reset the oil change indicator. |
| 00BC | Reset the Powertrain Control Module Learned | 00BD | Reset the Turbocharger Learned Values. |
| 00BE | Reset the Turbocharger Variable Vane Actuator Learned Values | 00BF | Reset the Turbocharger Variable Vane Position Sensor Learned Values |
| 00C0 | Reset the Vehicle Speed Limit | 00C1 | Reset the water in fuel Warning Indicator. |
| 00C2 | rpm Controller | 00C3 | Stop-Start Activation |
| 00C4 | Speed Limiting | 00C5 | TR sensor |
| 00C6 | Transmission Fluid Level Test | 00C7 | Automatic Transmission PRNDL Display Test |
| 00CA | ABS reset and configuration. | 00CB | PDC Reset |
| 00CC | Steering Wheel Position Sensor Calibration | 00CD | Preliminary Checks |
| 00CE | Reset TCM KAM | 00CF | Fuel System Prime |
| 00D0 | Remote Start | 00D1 | TBM SIM RAV_ID |
| 00D2 | Reset TBM Password | 00D3 | TBM Transit Mode |
| 00D4 | CEI Lock Configuration | 00D5 | BMS Reset |
| 00D6 | Navigation | 00D7 | Calibrate Steering Angle Sensor |
| 00D8 | Configure the steering column assembly. | 00D9 | Configure the longitudinal acceleration sensor. |
| 00DA | Configure the intermediate shaft. | 00DB | Module Initialization |
| 00DC | Pull Drift Compensation | 00DD | Calibrate Longitudinal Acceleration Sensor |
| 00DE | Inhibit longitudinal accelerometer monitoring | 00DF | Pull Drift Compensation enable/disable |
| 00E0 | Straight Ahead Adaption Angle Reset | 00E1 | Steering Rack Limiter Configuration |
| 00E2 | Pressure Sensor Calibration | 00E3 | Reset Pressure Sensor Offset |
| 00E4 | Enable/Disable hill launch assist . | 00E5 | Camera Alignment |
| 00E6 | Shift fork system learn. | 00E7 | Reset the High Pressure Fuel System Learned Values |
| 00E8 | BleedMASTER | 00E9 | FCDIM Keycode Reset |
| 00EA | Beltminder Enable/Disable | 00EB | TPMS reset. |
| 00EC | TPMS reset after ABS module replacement | 00ED | Show GEM configuration |
| 00EE | EPB | 00EF | Clear crash data memory. |
| 00F0 | Passenger Airbag Deactivation Switch | 00F1 | Component checks |
| 00F2 | Driver's Seat Module | 00F3 | Assembly Check |
| 00F4 | Inclination Sensor Calibration | 00F5 | Maintenance mode |
| 00F6 | Static Apply | 00F7 | Clear stored clutch engagement point |

| Index | Specil Function Name | Index | Specil Function Name |
|-------|--|-------|---|
| 00F8 | Module Configuration | 00F9 | CCMii Sensor Alignment |
| 00FA | Track Key Configuration | 00FB | Driver Window Motor Test. |
| 00FC | Passenger Window Motor Test | 00FD | Clear Self-learning Data |
| 00FE | RVC Configuration | 00FF | Special Function |
| 0100 | Disable GDM VIN | 0101 | WMM Calibration |
| 0102 | RCM | 0103 | Cooling Fan Test |
| 0104 | IAC System Test | 0105 | VCT System Test |
| 0106 | A/C Test | 0107 | MAF Sensor / TP Sensor Dynamic Test |
| 0108 | ATC Barcode Entry | 0109 | ISM Configuration |
| 010A | Valve Calibration | 010B | TP Sweep Test |
| 010C | ICP Sensor Test | 010D | Oil Aeration Test |
| 010E | Exhaust System Test | 010F | MAF Sensor Contamination Test |
| 0110 | EGR System Flow Test | 0111 | Neutral Tow Function |
| 0112 | LIN New Module Initialization | 0113 | Tachometer |
| 0114 | Camshaft Position Reference Adaption Learn | 0115 | Powertrain Control Module Central Car Configuration |
| 0116 | Powertrain Control Module (PCM) One Touch Start Configuration | 0117 | TCM Adaptive Learning |
| 0118 | On-demand lock test routine | 0119 | Rear Brake Adjustment |
| 011A | ACM Configuration | 011B | BCMii |
| 011C | Car Mod | 011D | SPRM Configuration |
| 011E | EPAS Configuration | 011F | Learn the vehicle variant and VIN data |
| 0120 | Burglar Service Functions | 0121 | The removal and installation of the selector lever or the selector lever cable. |
| 0122 | Transmission fluid drain and refill. | 0123 | The installation of a new TCM. |
| 0124 | The installation of a new automatic transmission with a new TCM. | 0125 | The installation of a new automatic transmission with the original TCM. |
| 0126 | Reset the Transmission Control Module Learned | 0127 | Reset the Transmission Oil learned Values |
| 0128 | Transmission Range Sensor Learn | 0129 | Read the ECU serial number. |
| 012A | RCM Calibration | 012B | Reset maintenance lamp |
| 012C | Special Ignition ON | 012D | IC Service Functions |
| 012E | A/F (Fuel Ratio) | 012F | Reset Expansion ID |
| 0130 | Reset security ID | 0131 | Lockout Mode Reset |
| 0132 | Sensor Learn Routine | 0133 | Ambient Air Temp Sensor Configuration |
| 0134 | Touchscreen | 0135 | Variant and VIN Data Learning Procedure |
| 0136 | Neutral Position Learning | 0137 | Clear Grade Sensor Learning Value |
| 0138 | Clear Oil Pressure Sensor Learning Value | 0139 | Grade Sensor Learning |
| 013A | Oil Pressure Sensor Learning | 013B | Fuel System Vaporizer Prime |
| 013C | Reset SOBDM-C KAM | 013D | Power Liftgate Initialization |
| 013E | LDWS Camera Alignment | 013F | SWS calibration |
| 0140 | Driver side | 0141 | Passenger side |
| 0142 | Auto Leveling Sensor | 0143 | Automatic 4 wheel drive |
| 0144 | Clear Learning Value | 0145 | CVT Learning Value Setting |
| 0146 | Headlight Zero-set | 0147 | Height Sensor Initial Setting |
| 0148 | Maintenance Information | 0149 | Reset Supply Pump Learned Values |
| 014A | Slope sensor initialization | 014B | Starter Driving Counter |
| 014C | FFH Fuel Priming | 014D | Urea Injector Test |
| 014E | Urea Pump Test | 0150 | PCM Service Functions |
| 0151 | ABD Initialization | 0152 | Tire Size Configuration |
| 0153 | Workshop test | 0154 | PROXI Alignment |
| 0155 | AFS | 0156 | HID_HEADLAMPS |
| 0157 | Air Bleed for Electric Oil Pump | 0158 | Clutch System Test |
| 0159 | CVT Slope Sensor Calibration | 015B | High Voltage (HV) De-energise Tool |
| 015C | Injector ID code | 0201 | Mazda Vehicle Check-up |
| 0202 | Spark Duration PIDs | 0203 | Windshield Wiper Test |
| 0204 | Rear Window Wiper Test | 0205 | Cooling System Degas |
| 0206 | PAD Switch | 0207 | Enable Heated Screens |
| 0208 | Reader Aiming | 0209 | System Initialize |
| 020A | Diesel Particulate Filter Dynamic Regeneration | 020B | Coupling Calibration Data Writing |

| Index | Specil Function Name | Index | Specil Function Name |
|-------|---|-------|---|
| 020C | Apply and Release Test | 020D | RF KeyPad Learn Process |
| 020E | FSC Aiming | 020F | TPMS Sensor Training Mode |
| 0210 | Police Vehicle Top Speed Limit | 0211 | Maintenance revision status |
| 0212 | Hydraulic control test | 0213 | ABS |
| F001 | Audio | F002 | Battery saver |
| F003 | Body Type | F004 | Courtesy Lamp |
| F005 | Door Trigger Disable Mode | F006 | Body and Fuel Type |
| F007 | Hazard Warning | F008 | Horn Warning |
| F009 | Master Door Trigger Disable Mode | F00A | Panic Alarm |
| F00B | Police Mode | F00C | Traction control system |
| F00D | Autolamp Off Setting | F00E | Autolamp On Setting |
| F00F | Police Speedometer Offset | F010 | Cabin Temperature Sensor Calibration Factor |
| F011 | Taxi Mode | F012 | Low Coolant Warning |
| F013 | Parking Brake Warning | F014 | Headlamp Delay Door Open |
| F015 | Headlamp Delay Ignition Off | F016 | Headlamp Delay Remote Lock Pressed |
| F017 | Dynamic Stability Control | F018 | Hill Descent Control LED |
| F019 | Brake System Configuration | F01A | BPM fitted |
| F01B | Camera fitted | F01C | Audio Interface Module |
| F01D | Sonar fitted | F01E | Navigation System |
| F01F | Parking Aid Module | F020 | Odometer Write |
| F021 | Subwoofer | F022 | Driver Beltminder Status |
| F023 | Alarm | F024 | Audio Configure |
| F025 | Autolocking While The Vehicle Is Moving | F026 | Module Reset |
| F027 | BeltMinder | F028 | Electrical Auxiliary Heater Chimes |
| F029 | Power Steering Status | F02A | Repeat flasher |
| F02B | Autolock/Relock Configuration Status | F02C | Autolocking Customer setting |
| F02D | Double Locking With REMOTE | F02E | Power Lock Configuration |
| F02F | Single Door Unlocking Using The REMOTE | F030 | Tailgate Release REMOTE Button |
| F031 | PAD Switch | F032 | Speed Control |
| F033 | Ambient Temperature Sensor Conformation | F034 | Heated Screen(s) active during warm up |
| F035 | Power Sunroof Or Taxi Meter Fitted | F036 | Deflation Detection System |
| F037 | Baseplate | F038 | Select seat trim type. |
| F039 | Select Vehicle Type | F03A | Repeat flasher |
| F03B | Internal Remote Receiver | F03C | Lock confirmation flash |
| F03D | Alarm system | F03E | Wash Fluid Sensor |
| F03F | Select Engine Type | F040 | Reverse Warning Chime |
| F041 | Easy Entry / Exit | F042 | Daytime Running Lamps |
| F043 | Turn Signal Warning Chime | F044 | Autolock |
| F045 | Horn Chirp | F046 | Tire Size (rev / mile) |
| F047 | TBM Transit Mode | F048 | Perimeter Lighting |
| F049 | Stop and taillamp outage configuration | F04A | Overspeed Warning Indicator |
| F04B | Autolock Configuration Status | F04C | Auto unlock |
| F04D | Language | F04E | Headlight Battery Saver Timeout |
| F04F | Heated Backlight | F050 | Front Foglamps |
| F051 | Headlamp Type | F052 | Button Press Chime |
| F053 | Not in Park Chime | F054 | Oil Life |
| F055 | Parking Brake Chime | F056 | Central Unlock via Key Cylinder |
| F057 | Two Stage Unlocking | F058 | Power Door Lock Inhibit |
| F059 | Perimeter Alarm | F05A | Satellite Digital Audio Receiver System |
| F05B | Autolamp | F05C | Fog Lamp |
| F05D | Passenger Beltminder Status | F05E | Keypad Configure |
| F05F | Remote Panic | F060 | Remote Keyless Entry |
| F061 | Remote open/close signal | F062 | Cellular Phone Module |
| F063 | Radio Clock | F064 | Divider Bar\$I |
| F065 | Welcome illumination | F066 | Battery saver function |
| F067 | Speedometer Accuracy Bias | F068 | Dark car |
| F069 | Horn Chirp Configuration Status | F06A | Smart Unlock |

| Index | Specil Function Name | Index | Specil Function Name |
|-------|--|-------|--|
| F06B | Fuel Economy Display Mode | F06C | Power Adjustable Pedals |
| F06D | Power Seat Recline | F06E | Fuel Gallon Configuration |
| F06F | Power Mirrors | F070 | High cool blower voltage |
| F071 | Outside Air Temperature | F072 | Oil Life Status and Warning |
| F073 | Telephone | F074 | Driver Seat Recline Memory Function |
| F075 | Pedal Memory Function | F076 | Screen Display-Brand |
| F077 | Flex Fuel | F078 | APIM |
| F079 | Steering wheel control | F07A | Auxiliary Jack |
| F07B | SWC POD type | F07C | Two-way front speakers |
| F07D | Two-way rear speakers | F07E | Trailer Brake Control Module |
| F07F | Family Entertainment System | F080 | Mirror Turn Signals |
| F081 | Vehicle Door Configuration | F082 | Fuel Tank Configuration |
| F083 | Fuel Tank Size | F084 | Rear Tire Size (Rev/Mile) |
| F085 | Trim Switch Inhibit | F086 | Fob panic activation |
| F087 | Tilt-Telescope Steering Wheel | F088 | Autolamp Delay Time |
| F089 | Global Close | F08A | Global Open |
| F08B | Auto Lock | F08C | Security Horn Alarm |
| F08D | Illuminated Exit | F08E | ABS Tire Warning |
| F08F | Sliding Door Caution | F090 | Smart Lock |
| F091 | Horn | F092 | Outside Air Temperature Display |
| F093 | Answer Back Buzzer | F094 | Automatic Locks |
| F095 | Card Key Battery Low Warning | F096 | Two(2) stage door unlocking by request switch. |
| F097 | Two(2) stage door unlocking by transmitter. | F098 | Auto relock timer (with AKE) |
| F099 | (PCM) Oil Life Used | F09A | GCC vehicle |
| F09B | Accessory Protocol Interface Module | F09C | Tuner setting |
| F09D | Smart Rear Wipe | F09E | Drip Wipe |
| F09F | Safety Belt Warning | FOA0 | Hazzard Warning Switch |
| FOA1 | Global Closing With REMOTE | FOA2 | Tailgate release available when ignition on |
| FOA3 | Select the type of liftgate striker plate fitted | FOA4 | Reset Alarm System Via Key |
| FOA5 | One-touch-up window function fitted | FOA6 | Auto high beam sensitivity |
| FOA7 | Unlock sequence | FOA8 | Daytime dimming rate setting |
| FOA9 | Fuel logic | FOAA | Fuel Meter Response Setting |
| FOAB | Voice Recognition Module | FOAC | Door ajar |
| FOAD | Cargo Unlock Setting | FOAE | General Unlock Setting |
| FOAF | Rear Door Reverse Cycling | FOB0 | Mirror Puddle Lamps |
| FOB1 | RHT Buzzer | FOB2 | Electronic-Controlled Power Steering |
| FOB3 | Heated windshield | FOB4 | Speed dependent wiper function |
| FOB5 | Audio Repeater Display | FOB6 | Power Folding Mirrors |
| FOB7 | Approach Lamps | FOB8 | Key Out Apply |