

# MaxiSYS\_HyundaiCV\_V1.00 Function List (Note:For reference only)

**NOTES:**

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.
  - This function is not supported.              ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus	2012	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus	2012	D6CC	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus	2012	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2012	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus	2012	D6CB	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus	2012	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2012	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2012	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2012	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2011	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2011	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus	2011	D6CB	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus	2011	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2011	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2011	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2011	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2010	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2010	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus	2010	D6CB	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus	2010	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2010	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2010	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2010	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2009	D6CB	ENGINE	D6CB	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus	2009	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2009	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus	2009	D6CB	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus	2009	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2009	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2009	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2009	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2008	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2008	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus	2008	D6CB	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus	2008	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2008	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2008	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus	2008	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2008	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2007	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2007	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus	2007	D6CB	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus	2007	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2007	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2007	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2007	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2006	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2006	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2006	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	C6AB	ABS	ABS (KNORR)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus	2006	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2006	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2005	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2005	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2005	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2005	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2004	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2004	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2004	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2004	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2004	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2004	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2004	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2004	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2004	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2004	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2004	C6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus	2003	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2003	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2003	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2003	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2003	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2003	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2003	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2003	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2002	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2002	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2002	D6AB	ENGINE	D6AB	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus	2002	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2002	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2002	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2002	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2001	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2001	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2001	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2001	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2001	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2001	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2001	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2000	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	2000	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2000	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	2000	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2000	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	2000	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	2000	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	1999	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	AeroBus	1999	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	1999	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus	1999	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	1999	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroBus	1999	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus	1999	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2011	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2011	D6CC (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2011	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2011	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2011	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2011	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2011	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2010	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	D6CC (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2010	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2010	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2009	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2009	D6CC (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2009	D6CC (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2009	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2009	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2008	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2008	D6CC (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2008	D6CC (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2008	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2008	D6CB (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2008	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2008	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2008	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2007	D6CB (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2007	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2007	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus (KOR)	2007	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2007	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2007	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2007	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroBus (KOR)	2006	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2006	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2006	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2006	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2006	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2006	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2006	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2006	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2005	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2005	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2005	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2005	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2005	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2005	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2005	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2005	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2004	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2004	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2004	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2004	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2004	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2004	D6CA (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2004	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2004	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2004	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2004	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2004	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroBus (KOR)	2003	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2003	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2003	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2003	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2003	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2002	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2002	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2002	D6AB (Q-DD ENG)	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2002	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●



Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroBus (KOR)	2001	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2001	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2001	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2001	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2000	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2000	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2000	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	2000	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	1999	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroBus (KOR)	1999	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AC	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity	2012	C6AC	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity	2012	C6AC	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity	2012	C6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AC	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AC	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity	2012	C6AC	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity	2012	C6AC	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity	2012	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6HA	AT	ZF ECOMAT4	●	●	●	●	○
Hyundai (General)	AeroCity	2012	D6HA	AT	ZF ECOMAT2	●	●	●	●	○
Hyundai (General)	AeroCity	2012	D6HA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6HA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	AeroCity	2012	D6HA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity	2012	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity	2012	D6HA	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity	2012	C6AE	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity	2012	C6AE	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroCity	2012	C6AE	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity	2012	C6AE	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AE	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AE	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AE	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity	2012	C6AE	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity	2012	C6AE	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity	2011	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AC	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AC	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AC	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AC	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AC	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AC	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity	2011	C6AC	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6HA	AT	ZF ECOMAT4	●	●	●	●	○
Hyundai (General)	AeroCity	2011	D6HA	AT	ZF ECOMAT2	●	●	●	●	○
Hyundai (General)	AeroCity	2011	D6HA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6HA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	AeroCity	2011	D6HA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity	2011	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity	2011	D6HA	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity	2011	C6AE	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AE	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AE	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AE	ABS	ABS6 (KNORR)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroCity	2011	C6AE	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AE	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AE	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity	2011	C6AE	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity	2011	C6AE	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity	2010	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	AeroCity	2010	D6HA	AT	ZF ECOMAT4	●	●	●	●	○
Hyundai (General)	AeroCity	2010	D6HA	AT	ZF ECOMAT2	●	●	●	●	○
Hyundai (General)	AeroCity	2010	D6HA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2010	D6HA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2010	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	AeroCity	2010	D6HA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity	2010	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity	2010	D6HA	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity	2010	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2010	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2010	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2010	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2010	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2010	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2010	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2009	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2009	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2009	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2009	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2009	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2009	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2009	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2009	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2008	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2008	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2008	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2008	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2008	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2008	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2008	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2008	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2007	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2007	D6AB	ABS	ABS (KNORR)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroCity	2007	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2007	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2007	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2007	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2007	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2007	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2006	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2006	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2006	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2006	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2006	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2006	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2006	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2006	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2005	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2005	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2005	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2005	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2005	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2005	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2005	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2005	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2004	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2004	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2004	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2004	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2004	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2003	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2003	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2003	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	AeroCity	2003	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2003	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2002	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2002	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2002	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2001	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2001	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2001	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	2000	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	2000	D6AB	ABS	ABS (KNORR)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroCity	2000	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	1999	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	1999	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity	1998	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	AeroCity	1998	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroCity (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2009	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2009	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2009	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2009	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2009	D6HA (H-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2009	C6AC (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2009	C6AC (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2009	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2009	C6AC (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2009	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2009	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2008	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2008	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2008	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2008	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2008	D6HA (H-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2008	C6AC (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2008	C6AC (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2008	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2008	C6AC (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2008	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2008	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	AeroCity (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroCity (KOR)	2007	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2007	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2007	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2006	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2006	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2006	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2006	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2006	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2006	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2005	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2005	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2005	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2005	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2005	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2004	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2004	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2004	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2004	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2004	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroCity (KOR)	2003	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2003	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2003	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2002	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2002	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2002	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2001	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2001	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2001	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2000	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2000	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	2000	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	1999	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	1999	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	1998	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	AeroCity (KOR)	1998	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	HCU	Hybrid Control System	●	●	●	●	●



Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	MCU	HEV Motor Control System	●	●	●	●	○
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	BMS	Battery Management System	●	●	●	●	●
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	AT	Dymos AMT (T130S6)	●	●	●	●	●
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Bluecity-HEV (KOR)	2013	C6GA-HEV (CNG-HEV)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroTown	2012	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2012	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2012	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2012	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown	2012	D6GA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2012	D6GA	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown	2012	D6GA	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown	2012	D6GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2011	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2011	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2011	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2011	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2011	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2011	D6DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2011	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown	2011	D6GA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2011	D6GA	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown	2011	D6GA	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown	2011	D6GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2010	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown	2010	D6GA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2010	D6GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2010	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2010	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2010	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2010	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2010	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroTown	2010	D6DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2009	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2009	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2009	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2009	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2009	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2009	D6DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2008	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2008	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2008	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2008	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2008	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2008	D6DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2007	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2007	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2007	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2007	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2007	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2007	D6DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2006	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2006	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2006	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2006	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2006	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2006	D6DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2005	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2005	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2005	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2005	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2005	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2005	D6DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2004	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2004	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2004	D6BR	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown	2004	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2004	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown	2004	D6DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown (KOR)	2012	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2012	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	AeroTown (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroTown (KOR)	2011	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2011	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroTown (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2010	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	AeroTown (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2009	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2009	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2008	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2008	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown (KOR)	2007	D6DA (KK-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2007	D6DA (KK-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2007	D6DA (KK-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown (KOR)	2006	D6DA (KK-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2006	D6DA (KK-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2006	D6DA (KK-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	AeroTown (KOR)	2005	D6DA (KK-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2005	D6DA (KK-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	AeroTown (KOR)	2005	D6DA (KK-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2012	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2012	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2012	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2012	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2012	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2012	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	County	2012	D4DD	ETACS	ETACS	●	○	○	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	County	2012	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	County	2012	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	County	2012	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	County	2012	D4GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2011	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	County	2011	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2011	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2011	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2011	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2011	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2011	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2011	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	County	2011	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	County	2011	D4GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2010	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	County	2010	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2010	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2010	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2010	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2010	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2010	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2009	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	County	2009	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2009	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2009	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2009	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2009	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2009	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	County	2008	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2008	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2008	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2008	D4DC	ETACS	ETACS	●	○	○	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	County	2008	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2008	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2007	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2007	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2007	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2007	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2007	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2006	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2006	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2006	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2006	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2006	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2005	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2005	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2005	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2005	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2005	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2004	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2004	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2004	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2004	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	County	2004	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2012	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2012	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2012	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2012	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2012	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	e-County (KOR)	2011	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2011	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2011	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2011	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2011	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	e-County (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2010	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2010	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2010	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2010	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2010	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	e-County (KOR)	2009	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2009	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2009	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2009	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2009	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2009	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2008	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2008	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2008	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2008	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2008	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2007	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2007	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2007	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2007	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2006	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2006	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2006	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2006	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2005	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2005	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2005	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-County (KOR)	2004	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2004	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-County (KOR)	2004	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2009	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2009	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2009	C6DA (KK-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2009	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2008	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2008	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2008	C6DA (KK-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2008	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2007	C6DA (KK-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2007	C6DA (KK-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2007	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2007	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2007	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2007	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2007	DB9A (OM906)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2007	DB9A (OM906)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2006	C6DA (KK-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2006	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2006	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●



Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Global900/GreenCity (KOR)	2006	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2006	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2006	DB9A (OM906)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2005	C6DA (KK-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2005	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2005	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2005	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2005	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2005	DB9A (OM906)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2004	C6DA (KK-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2004	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2004	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2004	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2004	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2004	DB9A (OM906)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Global900/GreenCity (KOR)	2003	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2003	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2003	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2002	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2002	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Hyundai (General)	Global900/GreenCity (KOR)	2002	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	HD120	2012	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	HD120	2012	D6GA	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	HD120	2012	D6GA	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	HD120	2012	D6GA	BCM	BCM	●	●	●	●	●
Hyundai (General)	HD120	2012	D6GA	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	HD120	2012	D6GA	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	HD120	2012	D6GA	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	HD120	2012	D6GA	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	HD120	2012	D6GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	HD120	2012	D6GA	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4GA	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4GA	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2012	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2012	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4GA	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4GA	DTG/DIS	DTG/DIS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4DD	ETACS	ETACS	●	○	○	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	HD35/HD45/HD65	2011	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2011	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2011	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4GA	DTG/DIS	DTG/DIS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2010	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2010	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2009	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2009	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2009	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2009	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2009	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2009	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2009	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2009	D4DC	ABS	ABS (WABCO)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	HD35/HD45/HD65	2009	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2009	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2009	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2009	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2009	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2008	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2008	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2008	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2008	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2008	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2008	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2008	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2007	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2007	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD35/HD45/HD65	2007	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2007	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2007	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2007	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2007	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2007	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2007	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2006	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2006	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2006	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2006	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2006	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2005	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2005	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2005	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2005	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2005	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2004	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2004	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2004	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2004	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD35/HD45/HD65	2004	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2012	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2012	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	e-Mighty (KOR)	2012	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2012	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2012	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	e-Mighty (KOR)	2011	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2011	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2011	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2011	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2011	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	e-Mighty (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2010	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2010	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2010	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2010	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2010	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	e-Mighty (KOR)	2009	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2009	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2009	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2009	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2009	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2009	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2008	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2008	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2008	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2008	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2008	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2007	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2007	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2007	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2007	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2006	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2006	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2006	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2006	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2005	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2005	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2005	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2005	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	e-Mighty (KOR)	2004	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	e-Mighty (KOR)	2004	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
Hyundai (General)	e-Mighty (KOR)	2004	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4GA	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4GA	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2012	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2012	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4GA	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4GA	DTG/DIS	DTG/DIS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4AF	ETACS	ETACS	●	○	○	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	HD72/HD75/HD78	2011	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2011	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2011	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4GA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4GA	DTG/DIS	DTG/DIS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2010	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2010	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2009	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2009	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2009	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2009	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2009	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2009	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2009	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2009	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2009	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2009	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2009	D4DB	ETACS	ETACS	●	○	○	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	HD72/HD75/HD78	2009	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2009	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2008	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2008	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2008	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2008	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2008	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2008	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2008	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2007	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2007	D4DD	ENGINE	D4DD	●	●	●	●	●
Hyundai (General)	HD72/HD75/HD78	2007	D4DD	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2007	D4BB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2007	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2007	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2007	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2007	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2007	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2006	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2006	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2006	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2006	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2006	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2005	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2005	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2005	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2005	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2005	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2004	D4AF	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2004	D4AL	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2004	D4DC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2004	D4DB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	HD72/HD75/HD78	2004	D4DA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2012	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2012	D6GA (G-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2012	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○



Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Mega Truck (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2012	C6GA (G-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2012	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2012	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2012	C6GA (G-CNG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2012	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2011	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2011	D6GA (G-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2011	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2011	C6GA (G-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2011	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2011	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2011	C6GA (G-CNG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2011	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2010	C6GA (G-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	C6GA (G-CNG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2010	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2010	C6DA (KK-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	C6DA (KK-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2010	C6DA (KK-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Mega Truck (KOR)	2009	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2009	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2009	D6GA (G-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2009	D6GA (G-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2009	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2008	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2008	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2008	D6GA (G-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Mega Truck (KOR)	2008	D6GA (G-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2008	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2007	D6DB (K-ENG)	ENGINE	D6DB (K-ENG)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2007	D6DB (K-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2007	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2006	D6DB (K-ENG)	ENGINE	D6DB (K-ENG)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2006	D6DB (K-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2006	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2005	D6DB (K-ENG)	ENGINE	D6DB (K-ENG)	●	●	●	●	●
Hyundai (General)	Mega Truck (KOR)	2005	D6DB (K-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Mega Truck (KOR)	2005	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2012	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CC	ENGINE	D6CC (L-ENG OBD1)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CC	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2012	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2012	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2012	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2012	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2012	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CC	ENGINE	D6CC (L-ENG OBD1)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CC	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CC	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Heavy Duty Truck	2011	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2011	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2011	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2011	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2011	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2011	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2010	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2010	D6CC	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2010	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2010	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2010	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2010	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2010	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2010	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2010	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2010	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2010	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2009	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2009	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2009	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2009	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2009	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2009	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2009	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2009	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2009	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2008	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2008	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2008	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2008	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2008	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2008	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2008	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2007	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2007	D6CB	ENGINE	D6CB	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Heavy Duty Truck	2007	D6CB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2007	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2007	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2007	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2007	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2007	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2006	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2006	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2006	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2006	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2006	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2005	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2005	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2005	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2005	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2005	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2004	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2004	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2004	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2004	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2004	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2003	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2003	D6CA	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2003	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Heavy Duty Truck	2003	D6AB	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Heavy Duty Truck	2003	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2012	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2012	C6AE (Q-CNG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2011	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Power Truck (KOR)	2011	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2011	C6AE (Q-CNG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	C6AC (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	C6AC (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Power Truck (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2010	C6AE (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2009	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2009	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	New Power Truck (KOR)	2009	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2009	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2009	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2009	C6AC (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Power Truck (KOR)	2008	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2008	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2008	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	New Power Truck (KOR)	2008	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2008	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2008	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2008	C6AC (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2007	D6CB (L-ENG)	BCM	BCM	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2007	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2007	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2007	C6AC (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2007	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2007	D6AB (Q-DD ENG)	BCM	BCM	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2007	D6AB (Q-DD ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2006	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2006	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2006	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2006	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○



Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Power Truck (KOR)	2006	C6AB (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2006	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2006	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2006	D6AB (Q-DD ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2005	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2005	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2005	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2005	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2005	C6AB (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2005	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2005	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2005	D6AB (Q-DD ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2004	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2004	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2004	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2004	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2004	D6CA (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2004	D6CA (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2004	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2004	C6AB (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2004	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2004	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	New Power Truck (KOR)	2004	D6AB (Q-DD ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	New Power Truck (KOR)	2003	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Power Truck (KOR)	2003	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2002	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2002	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2001	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2001	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2000	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	New Power Truck (KOR)	2000	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	AT	TGS Lever	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2012	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	ENGINE	D6CE (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	AT	TGS Lever	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	SCR	Selective Catalytic Reduction	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2012	D6CE (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG 10EM)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	AT	TGS Lever	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	AT	TGS Lever	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2011	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	ENGINE	D6CE (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	AT	TGS Lever	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	SCR	Selective Catalytic Reduction	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2011	D6CE (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	AT	TGS Lever	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Trago (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	AT	Astronic ATM2	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	AT	Astronic ATM2	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	ENGINE	D6CE (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	AT	Astronic ATM2	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	SCR	Selective Catalytic Reduction	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2010	D6CE (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	INHIBITO	RANGE INHIBITOR	●	○	○	●	●
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Trago (KOR)	2007	D6CB (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe	2012	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	ENGINE	D6CC42 (L-ENG JAPAN)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	SCR	Selective Catalytic Reduction	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2012	D6CC	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe	2012	D6CC	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Universe	2012	D6CC	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe	2012	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2012	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●



Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe	2012	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe	2012	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2012	D6HA	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe	2012	D6HA	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Universe	2012	D6HA	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe	2011	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CC	ENGINE	D6CC42 (L-ENG JAPAN)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CC	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CC	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe	2011	D6CC	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CC	SCR	Selective Catalytic Reduction	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2011	D6CC	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe	2011	D6CC	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe	2011	D6CC	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe	2011	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2011	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	INTARDER	ZF Intarder	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe	2011	D6HA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe	2011	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2011	D6HA	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe	2011	D6HA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe	2011	D6HA	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe	2010	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CC	ENGINE	D6CC (L-ENG JAPAN)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2010	D6CC	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe	2010	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2010	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AC	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe	2010	D6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2010	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CC	ENGINE	D6CC (L-ENG JAPAN)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CC	INTARDE	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2009	D6CC	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe	2009	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CB	INTARDE	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2009	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2009	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CB	INTARDE	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe	2008	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2008	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2007	D6CB	ENGINE	D6CB	●	●	●	●	●
Hyundai (General)	Universe	2007	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe	2007	D6CB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2007	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe	2007	D6CA	ENGINE	D6CA	●	●	●	●	●
Hyundai (General)	Universe	2007	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6CA	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AB	ENGINE	D6AB	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AB	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AC	ENGINE	D6AC	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AC	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe	2007	D6AV	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2012	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2012	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	C6AE (Q-CNG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	C6AE (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2011	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2011	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	C6AE (Q-CNG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	C6AE (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	LDWS	LDWS	●	●	●	●	●



Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2009	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	C6AC (Q-CNG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	C6AC (Q-CNG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	C6AC (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2008	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	Universe (KOR)	2008	D6CC (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CC (L-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2008	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CB (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2008	D6CB (L-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CB (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2008	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	C6AC (Q-CNG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	C6AC (Q-CNG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	C6AC (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	Universe (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2007	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2007	D6CB (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2007	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Hyundai (General)	Universe (KOR)	2007	D6CB (L-ENG)	ADR	ADR	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2007	D6CB (L-ENG)	LDWS	LDWS	●	●	●	●	●
Hyundai (General)	Universe (KOR)	2007	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	New Granbird	2012	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	New Granbird	2012	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	New Granbird	2011	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Granbird	2011	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CC (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	○	○	●	○
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	DTG/DIS	DTG(10EM)	●	●	●	●	○
Hyundai (General)	New Granbird	2011	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	○	○	●	○
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	New Granbird	2010	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Granbird	2010	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CC (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	○	○	●	○
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Hyundai (General)	New Granbird	2010	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Hyundai (General)	New Granbird	2009	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2009	D6CC (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	New Granbird	2009	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2009	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2009	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Granbird	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2009	D6HA (H-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	New Granbird	2009	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2009	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Granbird	2008	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2008	D6CC (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	New Granbird	2008	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Hyundai (General)	New Granbird	2008	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2008	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	New Granbird	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Hyundai (General)	New Granbird	2008	D6HA (H-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	New Granbird	2008	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●

Area	Vehicle Type	Year	engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Hyundai (General)	New Granbird	2008	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Hyundai (General)	New Granbird	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Hyundai (General)	Granbird	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2007	D6CB (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	Granbird	2006	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2006	D6CB (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	Granbird	2005	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2005	D6CB (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	Granbird	2004	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2004	D6CA (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	Granbird	2004	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2004	D6CB (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Hyundai (General)	Granbird	2003	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2003	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2002	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2002	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2001	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Hyundai (General)	Granbird	2001	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Hyundai (General)	KM928	2004	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Hyundai (General)	KM928	2003	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Hyundai (General)	KM928	2002	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Hyundai (General)	KM928	2001	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●