

MaxiSys_Mazda_V4.11 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--|----------|-----------------|-------------|---------|------------|-------------|-----------|-------------|---|
| (All MY05) Escape/Tribute/Maverick/Mariner | 2. 3L | DURATEC-HE / I4 | 2005 | 4X4 | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2. 3L | DURATEC-HE / I4 | 2005 | ABS | ● | ● | ● | ● | 0x0008 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2. 3L | DURATEC-HE / I4 | 2005 | GEM | ● | ● | ● | ● | 0x000A 0x000F |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2. 3L | DURATEC-HE / I4 | 2005 | IC | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2. 3L | DURATEC-HE / I4 | 2005 | PAM | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2. 3L | DURATEC-HE / I4 | 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 2. 3L | DURATEC-HE / I4 | 2005 | RCM | ● | ● | ● | ● | 0x000C |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3. 0L | 4V | 2005 | 4X4 | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3. 0L | 4V | 2005 | ABS | ● | ● | ● | ● | 0x0008 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3. 0L | 4V | 2005 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057 0xF058 0xF059 0xF090 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3. 0L | 4V | 2005 | IC | ● | ● | ● | ● | 0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053 0xF054 0xF055 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3. 0L | 4V | 2005 | PAM | ● | ● | ● | ● | ○ |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3. 0L | 4V | 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 |
| (All MY05) Escape/Tribute/Maverick/Mariner | 3. 0L | 4V | 2005 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| 626 / 626 WAGON / TELSTAR | 1. 8L | FP | 1997 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0082 0x0083 |
| 626 / 626 WAGON / TELSTAR | 1. 8L | FP | 1999 | ABS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 1. 8L | FP | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2. 0L | FS | 1997 - 1999 | ABS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2. 0L | FS | 1997 - 2001 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0023 0x0025 |
| 626 / 626 WAGON / TELSTAR | 2. 0L | FS | 1998 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2. 0L | RF-T | 1997 - 2000 | PCM | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2. 0L | RF-T | 1999 - 2000 | ABS | ● | ● | ● | ● | ○ |
| 626 / 626 WAGON / TELSTAR | 2. 5L | KL | 1997 - 2001 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| 626 / 626 WAGON / TELSTAR | 2. 5L | KL | 1998 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2. 0L | LF | 2007 | ABS | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2. 0L | LF | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| ATENZA (JPN) / MAZDA6 (General) | 2. 0L | LF | 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| ATENZA (JPN) / MAZDA6 (General) | 2. 0L | LF | 2007 | EPS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------------------|----------|------------|-------|---------|------------|-------------|-----------|-------------|-----------------------------|
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | IC | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | ICCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | LCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | MPM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | RCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | RKE | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | RVM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.0L | LF | 2007 | TCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | 4X4 | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | ABS | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | EPS | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | IC | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | ICCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | LCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | MPM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | RCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | RKE | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | RVM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) / MAZDA6 (General) | 2.5L | L5 | 2007 | TCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | 4X4 | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | ABS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | ACU | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | AFS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | BSML | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | BSMR | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | EPS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | FFH | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | IC | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | ICCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | LCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | MPM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | RCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | RKE | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 1.8L | L8 | Other | RVM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------|----------|------------|-------|---------|------------|-------------|-----------|-------------|-----------------------------|
| ATENZA / MAZDA6 | 1. 8L | L8 | Other | TCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | 4X4 | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | ABS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | ACU | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | AFS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | BSML | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | BSMR | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | EATC | ● | ● | ● | ● | 0x0020 |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | EPS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | FFH | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | IC | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | ICCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | LCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | MPM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | RCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | RKE | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | RVM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 0L | LF | Other | TCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | 4X4 | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | ABS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | ACU | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | AFS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | BSML | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | BSMR | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | EATC | ● | ● | ● | ● | 0x0020 |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | EPS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | FFH | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | IC | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | ICCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | LCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | MPM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | RCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | RKE | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | RVM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 2L | R2_T | Other | TCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | 4X4 | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | ABS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|---|
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | ACU | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | AFS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | BSML | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | BSMR | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | EPS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | FFH | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | IC | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | ICCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | LCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | MPM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | RCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | RKE | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | RVM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 2. 5L | L5 | Other | TCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | 4X4 | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | ABS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | ACU | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | AFS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | BSML | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | BSMR | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | EATC | ● | ● | ● | ● | 0x0020 |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | EPS | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | FFH | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | IC | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | ICCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | LCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | MPM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | RCM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | RKE | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | RVM | ● | ● | ● | ● | ○ |
| ATENZA / MAZDA6 | 3. 7L | CA | Other | TCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN)/MAZDA6 (General) | 2. 0L | LF | 2002 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x001E 0x0008 |
| ATENZA (JPN)/MAZDA6 (General) | 2. 0L | LF | 2002 - 2005 | IC | ● | ● | ● | ● | ○ |
| ATENZA (JPN)/MAZDA6 (General) | 2. 0L | LF | 2002 - 2005 | LHID | ● | ● | ● | ● | 0x0146 |
| ATENZA (JPN)/MAZDA6 (General) | 2. 0L | LF | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6 0x0201 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| ATENZA (JPN) /MAZDA6 (General) | 2.0L | LF | 2002 - 2005 | RCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.0L | LF | 2002 - 2005 | RHID | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.0L | LF | 2005 | GEM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.0L | LF | 2005 | LCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.0L | LF | 2005 | RKE | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.0L | LF | 2005 | TCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2002 - 2005 | 4X4 | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2002 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2002 - 2005 | IC | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2002 - 2005 | LHID | ● | ● | ● | ● | 0x0146 |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2002 - 2005 | RCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2002 - 2005 | RHID | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2002 - 2005 | TCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2005 | GEM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2005 | LCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3 | 2005 | RKE | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | 4X4 | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | GEM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | IC | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | LCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | LHID | ● | ● | ● | ● | 0x0146 |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | RCM | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | RHID | ● | ● | ● | ● | ○ |
| ATENZA (JPN) /MAZDA6 (General) | 2.3L | L3_T | 2005 | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | 4X4 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| AXELA / MAZDA3 | 1.5L | ZY | Other | AFS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | BCM/GEM | ● | ● | ● | ○ | 0x0120 |
| AXELA / MAZDA3 | 1.5L | ZY | Other | BSML | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | BSMR | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | EATC | ● | ● | ● | ● | 0x0020 |
| AXELA / MAZDA3 | 1.5L | ZY | Other | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | LCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | MID#1 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 | 1.5L | ZY | Other | RCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------|----------|------------|-------|---------|------------|-------------|-----------|-------------|-----------------------------|
| AXELA / MAZDA3 | 1.5L | ZY | Other | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | RVM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.5L | ZY | Other | TCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | 4X4 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | AFS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | BCM/GEM | ● | ● | ● | ○ | 0x0120 |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | BSML | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | BSMR | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | FACM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | LCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | MID#1 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | RVM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Y6 | Other | TCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | 4X4 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | AFS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | BCM/GEM | ● | ● | ● | ○ | 0x0120 |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | BSML | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | BSMR | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | LCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | MID#1 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | RVM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 1.6L | Z6 | Other | TCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | 4X4 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | ACU | ● | ● | ● | ● | 0x0017 0x003E |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------|----------|------------|-------|---------|------------|-------------|-----------|-------------|---|
| AXELA / MAZDA3 | 2.0L | LF | Other | AFS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | BCM/GEM | ● | ● | ● | ○ | 0x0120 |
| AXELA / MAZDA3 | 2.0L | LF | Other | BSML | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | BSMR | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | EATC | ● | ● | ● | ● | 0x0020 |
| AXELA / MAZDA3 | 2.0L | LF | Other | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | LCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | MID#1 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 | 2.0L | LF | Other | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | RVM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | LF | Other | TCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | PE | Other | ABS | ● | ● | ● | ● | 0x001E |
| AXELA / MAZDA3 | 2.0L | PE | Other | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| AXELA / MAZDA3 | 2.0L | PE | Other | AFS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | PE | Other | BCM/GEM | ● | ● | ● | ○ | 0x0120 |
| AXELA / MAZDA3 | 2.0L | PE | Other | BSML | ● | ● | ● | ● | 0x0043 |
| AXELA / MAZDA3 | 2.0L | PE | Other | BSMR | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | PE | Other | EATC | ● | ● | ● | ● | 0x0020 |
| AXELA / MAZDA3 | 2.0L | PE | Other | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | PE | Other | IC | ● | ● | ● | ● | 0x001A |
| AXELA / MAZDA3 | 2.0L | PE | Other | LCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | PE | Other | MID#1 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.0L | PE | Other | PCM | ● | ● | ● | ○ | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0201 |
| AXELA / MAZDA3 | 2.0L | PE | Other | RCM | ● | ● | ● | ● | 0x006D |
| AXELA / MAZDA3 | 2.0L | PE | Other | RKE | ● | ● | ● | ● | 0x012C |
| AXELA / MAZDA3 | 2.0L | PE | Other | RVM | ● | ● | ● | ● | 0x0072 |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | 4X4 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | AFS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | BCM/GEM | ● | ● | ● | ○ | 0x0120 |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | BSML | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | BSMR | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | EATC | ● | ● | ● | ● | 0x0020 |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | FFH | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2.2L | R2_T | Other | IC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------|----------|------------|-------|---------|------------|-------------|-----------|-------------|-----------------------------|
| AXELA / MAZDA3 | 2. 2L | R2_T | Other | LCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 2L | R2_T | Other | MID#1 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 2L | R2_T | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 | 2. 2L | R2_T | Other | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 2L | R2_T | Other | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 2L | R2_T | Other | RVM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 2L | R2_T | Other | TCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | 4X4 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | AFS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | BCM/GEM | ● | ● | ● | ○ | 0x0120 |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | BSML | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | BSMR | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | EATC | ● | ● | ● | ● | 0x0020 |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | LCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | MID#1 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | RVM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 3L | L3_T | Other | TCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | 4X4 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | AFS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | BCM/GEM | ● | ● | ● | ○ | 0x0120 |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | BSML | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | BSMR | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | LCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | MID#1 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | RVM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 | 2. 5L | L5 | Other | TCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|--------------|--------|------------|-------------|-----------|-------------|-----------------------------|
| AXELA / MAZDA3 (Japan / General Specs.) | 1.5L | ZY | 2003 - 2006 | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 1.5L | ZY | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 1.5L | ZY | 2003 - 2006 | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 1.5L | ZY | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 1.5L | ZY | 2003 - 2006 | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 1.5L | ZY | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 (Japan / General Specs.) | 1.5L | ZY | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 1.5L | ZY | 2006 | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2003 - 2006 | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2003 - 2006 | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2003 - 2006 | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2006 | 4X4 | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2006 | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.0L | LF | 2006 | TCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2003 - 2006 | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2003 - 2006 | EPS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2003 - 2006 | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2006 | RKE | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3 | 2006 | TCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3_T | 2006 | ABS | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3_T | 2006 | EATC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3_T | 2006 | GEM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3_T | 2006 | IC | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3_T | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3_T | 2006 | RCM | ● | ● | ● | ● | ○ |
| AXELA / MAZDA3 (Japan / General Specs.) | 2.3L | L3_T | 2006 | RKE | ● | ● | ● | ● | ○ |
| AZ WAGON(MD/MJ)/SPIANO (HF) | 660cc | F6A-T | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| AZ WAGON(MD/MJ)/SPIANO (HF) | 660cc | F6A-T | 1998 - Other | PCM | ● | ● | ● | ● | ○ |
| AZ WAGON(MD/MJ)/SPIANO (HF) | 660cc | F6A-T | 1998 - Other | RCM | ● | ● | ● | ● | ○ |
| AZ WAGON(MD/MJ)/SPIANO (HF) | 660cc | K6A | 1998 - 2005 | ABS | ● | ● | ● | ● | ○ |
| AZ WAGON(MD/MJ)/SPIANO (HF) | 660cc | K6A | 1998 - 2005 | PCM | ● | ● | ● | ● | ○ |
| AZ WAGON(MD/MJ)/SPIANO (HF) | 660cc | K6A | 1998 - 2005 | RCM | ● | ● | ● | ● | ○ |
| AZ WAGON(MD/MJ)/SPIANO (HF) | 660cc | K6A_T | 1998 | TCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------------------|----------|-----------------|--------------|--------|------------|-------------|-----------|-------------|-----------------|
| AZ WAGON (MD/MJ) /SPIANO (HF) | 660cc | K6A_T | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| AZ WAGON (MD/MJ) /SPIANO (HF) | 660cc | K6A_T | 1998 - Other | PCM | ● | ● | ● | ● | ○ |
| AZ WAGON (MD/MJ) /SPIANO (HF) | 660cc | K6A_T | 1998 - Other | RCM | ● | ● | ● | ● | ○ |
| AZ-OFFROAD | 660cc | K6A_T | 1999 - 2004 | TCM | ● | ● | ● | ● | ○ |
| AZ-OFFROAD | 660cc | K6A_T | 1999 - 2008 | ABS | ● | ● | ● | ● | ○ |
| AZ-OFFROAD | 660cc | K6A_T | 1999 - 2008 | PCM | ● | ● | ● | ● | ○ |
| AZ-OFFROAD | 660cc | K6A_T | 1999 - 2008 | RCM | ● | ● | ● | ● | ○ |
| AZ-WAGON (MJ) | 660cc | K6A | 2003 - 2006 | ABS | ● | ● | ● | ● | ○ |
| AZ-WAGON (MJ) | 660cc | K6A | 2003 - 2006 | PCM | ● | ● | ● | ● | ○ |
| AZ-WAGON (MJ) | 660cc | K6A | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| AZ-WAGON (MJ) | 660cc | K6A_T | 2003 - 2005 | ABS | ● | ● | ● | ● | ○ |
| AZ-WAGON (MJ) | 660cc | K6A_T | 2003 - 2005 | PCM | ● | ● | ● | ● | ○ |
| AZ-WAGON (MJ) | 660cc | K6A_T | 2003 - 2005 | RCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A | Other | ABS | ● | ● | ● | ○ | 0x0213 |
| AZ-WAGON / CAROL | 660cc | K6A | Other | BCM#1 | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A | Other | EATC | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A | Other | EPS | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A | Other | PCM | ● | ● | ● | ● | 0x0201 |
| AZ-WAGON / CAROL | 660cc | K6A | Other | RCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A | Other | TCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A S | Other | ABS | ● | ● | ● | ○ | 0x0213 |
| AZ-WAGON / CAROL | 660cc | K6A S | Other | BCM#1 | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A S | Other | EATC | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A S | Other | EPS | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A S | Other | PCM | ● | ● | ● | ● | 0x0201 |
| AZ-WAGON / CAROL | 660cc | K6A S | Other | RCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A S | Other | TCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A_T | Other | ABS | ● | ● | ● | ○ | 0x0213 |
| AZ-WAGON / CAROL | 660cc | K6A_T | Other | BCM#1 | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A_T | Other | EATC | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A_T | Other | EPS | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A_T | Other | PCM | ● | ● | ● | ● | 0x0201 |
| AZ-WAGON / CAROL | 660cc | K6A_T | Other | RCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | K6A_T | Other | TCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | R06A (A STOP) | Other | ABS | ● | ● | ● | ○ | 0x0212 |
| AZ-WAGON / CAROL | 660cc | R06A (A STOP) | Other | BCM#1 | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | R06A (A STOP) | Other | EATC | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | R06A (A STOP) | Other | PCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | R06A (A STOP) | Other | RCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | R06A T (A STOP) | Other | ABS | ● | ● | ● | ○ | 0x0212 |
| AZ-WAGON / CAROL | 660cc | R06A T (A STOP) | Other | BCM#1 | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|-----------------|--------------|---------|------------|-------------|-----------|-------------|--|
| AZ-WAGON / CAROL | 660cc | R06A T (A STOP) | Other | EATC | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | R06A T (A STOP) | Other | PCM | ● | ● | ● | ● | ○ |
| AZ-WAGON / CAROL | 660cc | R06A T (A STOP) | Other | RCM | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2. 2L | F2 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2. 5L | WL | 2001 | PCM | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2. 5L | WL | 2001 - 2002 | ABS | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2. 5L | WL_T | 2001 - 2005 | ABS | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2. 5L | WL_T | 2001 - 2005 | PCM | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2. 6L | G6 | 1996 - 1999 | PCM | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2. 6L | G6 | 1999 | ABS | ● | ● | ● | ● | ○ |
| B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour | 2. 9L | W9 | 2002 | ABS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1. 8L | F8 | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1. 8L | F8 | 1999 - 2002 | PCM | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1. 8L | F8 | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1. 8L | F8 | 2002 | TCM | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1. 8L | L8 | 2010 | ABS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1. 8L | L8 | 2010 | IC | ● | ● | ● | ○ | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 1. 8L | L8 | 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| BONGO / BONGO BRAWNY / SPECTRON | 1. 8L | L8 | 2010 | TCM | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 2. 0L | RF-T | 2003 - 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 2. 0L | RF-T | 2003 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0055 0x005C |
| BONGO / BONGO BRAWNY / SPECTRON | 2. 0L | RF-T | 2003 - 2007 | TCM | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 2. 2L | R2 | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO / BONGO BRAWNY / SPECTRON | 2. 2L | R2 | 1999 | PCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 1. 8L | F8 | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 1. 8L | F8 | 1999 | PCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2. 0L | FE | 1997 - 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2. 0L | FE | 1997 - 2002 | PCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2. 0L | FE | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2. 0L | FE | 2002 | TCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2. 2L | R2 | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2. 2L | R2 | 1999 | PCM | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2. 5L | WL | 1999 | ABS | ● | ● | ● | ● | ○ |
| BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES | 2. 5L | WL | 1999 | PCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 2L | F2 | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------|----------|------------|------|---------|------------|-------------|-----------|-------------|--|
| BT-50 / Ranger | 2. 2L | F2 | 2007 | PCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 2L | F2 | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 5L | L5 | 2012 | PCM | ● | ● | ● | ○ | 0x0080 0x0081 0x0082 0x0083 |
| BT-50 / Ranger | 2. 5L | WL | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 5L | WL | 2007 | PCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 5L | WL | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 5L | WL-CD | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 5L | WL-CD | 2007 | PCM | ● | ● | ● | ● | 0x0055 0x0080 0x0081 0x0082 |
| BT-50 / Ranger | 2. 5L | WL-CD | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 5L | WL-CD | 2007 | TCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 6L | G6 | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 2. 6L | G6 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| BT-50 / Ranger | 2. 6L | G6 | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 3. 0L | WE-CD | 2007 | ABS/TCS | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 3. 0L | WE-CD | 2007 | PCM | ● | ● | ● | ● | 0x0055 0x0080 0x0081 0x0082 |
| BT-50 / Ranger | 3. 0L | WE-CD | 2007 | RCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 3. 0L | WE-CD | 2007 | TCM | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 4. 0L | V6 SOHC | 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| BT-50 / Ranger | 4. 0L | V6 SOHC | 2007 | ESOF | ● | ● | ● | ● | ○ |
| BT-50 / Ranger | 4. 0L | V6 SOHC | 2007 | PCM | ● | ● | ● | ● | 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 |
| BT-50 / Ranger | 4. 0L | V6 SOHC | 2007 | RCM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | 4X4 | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | ABS | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | EATC | ● | ● | ● | ● | 0x0020 |
| Biante (Japan) | 2. 0L | LF | 2008 | EPS | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | GEM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | IC | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | LPSDM | ● | ● | ● | ● | 0x0022 |
| Biante (Japan) | 2. 0L | LF | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Biante (Japan) | 2. 0L | LF | 2008 | RCM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | RKE | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | RPSDM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | LF | 2008 | TCM | ● | ● | ● | ○ | ○ |
| Biante (Japan) | 2. 0L | PE | 2012 | ABS | ● | ● | ● | ● | 0x001E |
| Biante (Japan) | 2. 0L | PE | 2012 | EATC | ● | ● | ● | ● | 0x0020 |
| Biante (Japan) | 2. 0L | PE | 2012 | EPS | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | PE | 2012 | GEM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | PE | 2012 | LPSDM | ● | ● | ● | ● | 0x0022 |
| Biante (Japan) | 2. 0L | PE | 2012 | RCM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 0L | PE | 2012 | RKE | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|---------------|--------------|--------|------------|-------------|-----------|-------------|-----------------------------|
| Biante (Japan) | 2. 0L | PE | 2012 | RPSDM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 3L | L3 | 2008 | ABS | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 3L | L3 | 2008 | EATC | ● | ● | ● | ● | 0x0020 |
| Biante (Japan) | 2. 3L | L3 | 2008 | EPS | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 3L | L3 | 2008 | GEM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 3L | L3 | 2008 | IC | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 3L | L3 | 2008 | LPSDM | ● | ● | ● | ● | 0x0022 |
| Biante (Japan) | 2. 3L | L3 | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Biante (Japan) | 2. 3L | L3 | 2008 | RCM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 3L | L3 | 2008 | RKE | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 3L | L3 | 2008 | RPSDM | ● | ● | ● | ● | ○ |
| Biante (Japan) | 2. 3L | L3 | 2008 | TCM | ● | ● | ● | ○ | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 1. 8L | FP | 1997 - 1999 | PCM | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 1. 8L | FP | 1999 | ABS | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 2. 0L | FS | 1997 - 1999 | PCM | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 2. 0L | FS | 1999 | ABS | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 2. 0L | RF | 1997 | PCM | ● | ● | ● | ● | ○ |
| CAPELLA / CAPELLA W / TELSTAR / TELSTAR W | 2. 5L | KL | 1999 | ABS | ● | ● | ● | ● | ○ |
| CAROL | 660cc | F6A | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| CAROL | 660cc | F6A | 1998 - Other | PCM | ● | ● | ● | ● | ○ |
| CAROL | 660cc | F6A | 1998 - Other | RCM | ● | ● | ● | ● | ○ |
| CAROL | 660cc | K6A | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| CAROL | 660cc | K6A | 1998 - Other | PCM | ● | ● | ● | ● | ○ |
| CAROL | 660cc | K6A | 1998 - Other | RCM | ● | ● | ● | ● | ○ |
| CAROL | 660cc | K6A | 1998 - Other | TCM | ● | ● | ● | ● | ○ |
| CAROL (2003 / 9 -) | 660cc | K6A | 2003 - 2004 | PCM | ● | ● | ● | ● | ○ |
| CAROL (2003 / 9 -) | 660cc | K6A | 2003 - Other | ABS | ● | ● | ● | ● | ○ |
| CAROL (2003 / 9 -) | 660cc | K6A | 2003 - Other | RCM | ● | ● | ● | ● | ○ |
| CAROL (HB24S) | 660cc | K6A | 2004 - 2005 | ABS | ● | ● | ● | ● | ○ |
| CAROL (HB24S) | 660cc | K6A | 2004 - 2005 | PCM | ● | ● | ● | ● | ○ |
| CAROL (HB24S) | 660cc | K6A | 2004 - 2005 | RCM | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | K6A | Other | ABS | ● | ● | ● | ○ | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | K6A | Other | PCM | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | K6A | Other | RCM | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A | Other | ABS | ● | ● | ● | ○ | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A | Other | EPS | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A | Other | PCM | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A | Other | RCM | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A (A STOP) | Other | ABS | ● | ● | ● | ○ | 0x0212 |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A (A STOP) | Other | BCM#1 | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A (A STOP) | Other | PCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------------------|----------|-----------------|-------------|--------|------------|-------------|-----------|-------------|--|
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A (A STOP) | Other | RCM | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A T (A STOP) | Other | ABS | ● | ● | ● | ○ | 0x0212 |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A T (A STOP) | Other | BCM#1 | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A T (A STOP) | Other | EATC | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A T (A STOP) | Other | PCM | ● | ● | ● | ● | ○ |
| CAROL/FLAIR_WAGON/SCRUM/FLAIR | 660cc | R06A T (A STOP) | Other | RCM | ● | ● | ● | ● | ○ |
| CX-5 | 2. 0L | PE | Other | BSML | ● | ● | ● | ● | 0x0043 |
| CX-5 | 2. 0L | PE | Other | BSMR | ● | ● | ● | ○ | ○ |
| CX-5 | 2. 0L | PE | Other | RVM | ● | ● | ● | ○ | 0x0072 |
| CX-5 | 2. 2L | SH | Other | BSML | ● | ● | ● | ● | 0x0043 |
| CX-5 | 2. 2L | SH | Other | BSMR | ● | ● | ● | ○ | ○ |
| CX-5 | 2. 2L | SH | Other | RVM | ● | ● | ● | ○ | 0x0072 |
| CX-5 | 2. 5L | PY | Other | BSML | ● | ● | ● | ● | ○ |
| CX-5 | 2. 5L | PY | Other | BSMR | ● | ● | ● | ○ | ○ |
| CX-5 | 2. 5L | PY | Other | RVM | ● | ● | ● | ○ | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | 4X4 | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | ABS | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | AM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | EATC | ● | ● | ● | ● | 0x0020 |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | EPS | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | FFH | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | GEM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | IC | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | LCM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | MID#1 | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | PCM | ● | ● | ● | ● | 0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | RCM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | RKE | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | RVM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 2L | R2_T | 2009 | SCR CU | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | 4X4 | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | ABS | ● | ● | ● | ● | 0x0008 |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | AM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | EATC | ● | ● | ● | ● | 0x0020 |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | GEM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | IC | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | LCM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | RCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------------------------|----------|------------|-------------|--------|------------|-------------|-----------|-------------|-----------------------------|
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | RKE | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | TCM | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2009 | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2009 | MID#1 | ● | ● | ● | ● | ○ |
| CX-7 (Europe / General Specs.) | 2. 3L | L3_T | 2009 | RVM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | 4X4 | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | ABS | ● | ● | ● | ● | 0x0008 |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | AM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | EATC | ● | ● | ● | ● | 0x0020 |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | GEM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | IC | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | ICCM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | LCM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | RCM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | RKE | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2006 - 2009 | TCM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2009 | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2009 | MID#1 | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 3L | L3_T | 2009 | RVM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | 4X4 | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | ABS | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | AM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | EATC | ● | ● | ● | ● | 0x0020 |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | GEM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | IC | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | ICCM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | LCM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | MID#1 | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | RCM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | RKE | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | RVM | ● | ● | ● | ● | ○ |
| CX-7 (Japan / General Specs.) | 2. 5L | L5 | 2009 | TCM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | 4X4 | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | ABS | ● | ● | ● | ● | 0x0008 |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | AM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | EATC | ● | ● | ● | ● | 0x0020 |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | GEM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | IC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------------------------|----------|------------|--------------|--------|------------|-------------|-----------|-------------|-----------------------------|
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | RCM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | RKE | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2007 - 2010 | TCM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2010 | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2010 | BSML | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2010 | BSMR | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2010 | LCM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 3L | L3_T | 2010 | MID#1 | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | 4X4 | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | ABS | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | AM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | BSML | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | BSMR | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | EATC | ● | ● | ● | ● | 0x0020 |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | GEM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | IC | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | LCM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | MID#1 | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | RCM | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | RKE | ● | ● | ● | ● | ○ |
| CX-7 (North America / General Specs.) | 2. 5L | L5 | 2010 | TCM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | 4X4 | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | ABS | ● | ● | ● | ● | 0x0008 |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | AM | ● | ● | ● | ● | 0x0005 |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | GEM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | IC | ● | ● | ● | ● | 0x0005 0x001A |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | LCM | ● | ● | ○ | ○ | ○ |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | LTM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | RCM | ● | ● | ● | ● | 0x0005 |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | RKE | ● | ● | ● | ● | 0x0005 |
| CX-9 (North America / General Specs.) | 3. 5L | CY | 2007 - Other | TCM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | 4X4 | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | ABS | ● | ● | ● | ● | 0x0008 |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | AM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | BSML | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | BSMR | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | IC | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | LCM | ● | ● | ○ | ○ | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | LTM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | RCM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | RKE | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2008 - 2011 | TCM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2010 - 2011 | ACU | ● | ● | ● | ● | 0x0017 0x003E |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2010 - 2011 | DSM | ● | ● | ● | ● | ○ |
| CX-9 (North America / General Specs.) | 3. 7L | CA | 2011 | VSM | ● | ● | ● | ○ | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | 4X4 | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | ABS | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | EPS | ● | ● | ● | ● | 0x005B |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | IC | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | RCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | RKE | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 3L | ZJ | 2007 | TCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 5L | ZY | 2007 | ABS | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 5L | ZY | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| DEMIO (JPN) / MAZDA2 (General) | 1. 5L | ZY | 2007 | EPS | ● | ● | ● | ● | 0x005B |
| DEMIO (JPN) / MAZDA2 (General) | 1. 5L | ZY | 2007 | IC | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 5L | ZY | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO (JPN) / MAZDA2 (General) | 1. 5L | ZY | 2007 | RCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 5L | ZY | 2007 | RKE | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (General) | 1. 5L | ZY | 2007 | TCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | 4X4 | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | ABS | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | BCM/GEM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | EPS | ● | ● | ● | ● | 0x005B |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | IC | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | RCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | RKE | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | TCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | P3 | Other | VSM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | ZJ | Other | 4X4 | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | ZJ | Other | ABS | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1. 3L | ZJ | Other | BCM/GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|--------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.3L | ZJ | Other | EATC | ● | ● | ● | ● | 0x0020 |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.3L | ZJ | Other | EPS | ● | ● | ● | ● | 0x005B |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.3L | ZJ | Other | IC | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.3L | ZJ | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.3L | ZJ | Other | RCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.3L | ZJ | Other | RKE | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.3L | ZJ | Other | TCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.3L | ZJ | Other | VSM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | 4X4 | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | ABS | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | BCM/GEM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | EATC | ● | ● | ● | ● | 0x0020 |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | EPS | ● | ● | ● | ● | 0x005B |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | IC | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | RCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | RKE | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | TCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.5L | ZY | Other | VSM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | 4X4 | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | ABS | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | BCM/GEM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | EPS | ● | ● | ● | ● | 0x005B |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | IC | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | RCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | RKE | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | TCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / MAZDA2 (OTHER) | 1.6L | Y6 | Other | VSM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.3L | ZJ | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.3L | ZJ | 2002 - Other | 4X4 | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.3L | ZJ | 2002 - Other | ABS/TCS | ● | ● | ● | ● | 0x001E |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.3L | ZJ | 2002 - Other | IC | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.3L | ZJ | 2002 - Other | RCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.3L | ZJ | 2002 - Other | RKE | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.3L | ZJ | 2005 | EPS | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.3L | ZJ | 2005 | LCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.5L | ZY | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.5L | ZY | 2002 - Other | 4X4 | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.5L | ZY | 2002 - Other | ABS/TCS | ● | ● | ● | ● | 0x001E |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|-----------------|--------------|-----------|------------|-------------|-----------|-------------|---|
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.5L | ZY | 2002 - Other | IC | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.5L | ZY | 2002 - Other | RCM | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.5L | ZY | 2002 - Other | RKE | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.5L | ZY | 2005 | EPS | ● | ● | ● | ● | ○ |
| DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General) | 1.5L | ZY | 2005 | LCM | ● | ● | ● | ● | ○ |
| DEMIO / 121 DEMIO / 121 | 1.3L | B3 | 1996 - 2000 | ABS | ● | ● | ● | ● | ○ |
| DEMIO / 121 DEMIO / 121 | 1.3L | B3 | 1996 - 2000 | PCM | ● | ● | ● | ● | ○ |
| DEMIO / 121 DEMIO / 121 | 1.3L | B3 | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| DEMIO / 121 DEMIO / 121 | 1.5L | B5 | 1996 - 2000 | ABS | ● | ● | ● | ● | ○ |
| DEMIO / 121 DEMIO / 121 | 1.5L | B5 | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| DEMIO / 121 DEMIO / 121 | 1.5L | B5 | 2000 | PCM | ● | ● | ● | ● | ○ |
| DEMIO / FESTIVA MINI WAGON | 1.3L | B3 | 1996 - 1999 | ABS | ● | ● | ● | ● | ○ |
| DEMIO / FESTIVA MINI WAGON | 1.3L | B3 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| DEMIO / FESTIVA MINI WAGON | 1.3L | B3 | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| DEMIO / FESTIVA MINI WAGON | 1.5L | B5 | 1996 - 1999 | ABS | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | ABS | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | GEM | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Escape / Tribute (2006/4 -) | 2.3L | L3 | 2006 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | ABS | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | GEM | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| Escape / Tribute (2006/3) | 2.3L | L3 | 2003 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 0x0053 |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 0xF05A |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | FDIM | ● | ● | ● | ● | 0xF05A |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | IC | ● | ● | ● | ● | 0x0005 0x0009 0xF027 0xF04B 0xF04C 0xF054 |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escape / Tribute / Mariner | 2.3L | DURATEC-HE / I4 | 2008 | PSCM | ● | ● | ○ | ○ | 0x0005 0x0053 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------------|----------|-------------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Escape / Tribute / Mariner | 2. 3L | DURATEC-HE / I4 | 2008 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Escape / Tribute / Mariner | 2. 3L | DURATEC-HE / I4 | 2008 | SDARS | ● | ● | ● | ● | 0x0019 |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | ABS | ● | ● | ● | ● | 0x0005 0x0012 0x0053 0x0074 |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | ACM | ● | ● | ● | ● | 0x0005 0x0016 0x0017 0x0018 |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | BCM | ● | ● | ● | ● | 0x006E |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | FDIM | ● | ● | ● | ● | 0x0005 0xF05A |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | IC | ● | ● | ● | ● | 0x0005 0x0009 0xF027 0xF04B 0xF04C 0xF054 |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | OCSM | ● | ● | ● | ○ | 0x000C |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | PSCM | ● | ● | ○ | ○ | 0x0005 0x0053 |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | RCM | ● | ● | ● | ● | 0x0005 0xF022 0xF05D |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | SDARS | ● | ● | ● | ● | 0x0019 |
| Escape / Tribute / Mariner | 2. 3L | HEV / ATKINSON 4V | 2008 | TCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 | SDARS | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | ABS | ● | ● | ● | ● | 0x0008 0x0012 0x0053 |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | IC | ● | ● | ● | ● | 0x0009 |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | PCM | ● | ● | ● | ● | 0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023 |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | PSCM | ● | ● | ○ | ○ | 0x0053 0x00CC |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2009 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | DURATEC-HE / I4 | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | 2. 5L | HEV / ATKINSON 4V | 2009 | SDARS | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | HEV / ATKINSON 4V | 2009 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2. 5L | HEV / ATKINSON 4V | 2009 - 2012 | ABS | ● | ● | ● | ● | 0x0053 0x0074 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------------|----------|-------------------|-------------|-----------|------------|-------------|-----------|-------------|--|
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | ACM | ● | ● | ● | ● | 0x0017 0x0018 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x0019 0x001C |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | BCM | ● | ● | ● | ● | 0x006E |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | FDIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | GEM / SJB | ● | ● | ● | ● | 0x000F 0x0042 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | IC | ● | ● | ● | ● | 0x0009 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | PCM | ● | ● | ● | ● | 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | PSCM | ● | ● | ○ | ○ | 0x0053 0x00CC |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2009 - 2012 | TCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | ACCM#2 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 2.5L | HEV / ATKINSON 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2009 | SDARS | ● | ● | ● | ● | 0x0019 0x0005 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | ABS | ● | ● | ● | ● | 0x0005 0x0008 0x0012 0x0053 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | ACM | ● | ● | ● | ● | 0x0016 0x0017 0x0018 0xF05A |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | FDIM | ● | ● | ● | ● | 0xF05A 0x0005 0xF062 0xF063 0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | HVAC | ● | ● | ● | ● | 0x0005 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | IC | ● | ● | ● | ● | 0x0009 0xF027 0xF04B 0xF04C 0xF054 0x0005 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | OCSM | ● | ● | ● | ○ | 0x000C 0x006D |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 0x0038 0x0067 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | PSCM | ● | ● | ○ | ○ | 0x0005 0x0053 0x00CC |
| Escape / Tribute / Mariner | 3.0L | 4V | 2008 - 2012 | RCM | ● | ● | ● | ● | 0xF022 0xF05D 0x0005 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2009 - 2012 | APIM | ● | ● | ● | ● | 0x001C 0x0019 |
| Escape / Tribute / Mariner | 3.0L | 4V | 2010 - 2012 | GPSM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | ABS | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | ACM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | APIM | ● | ● | ● | ○ | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------|----------|------------------------------------|-------------|-----------|------------|-------------|-----------|-------------|---|
| Escape / Tribute / Mariner | Other | Other | 2012 | FCIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | FDIM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | GEM / SJB | ● | ● | ● | ● | 0x0042 |
| Escape / Tribute / Mariner | Other | Other | 2012 | GPSM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | HVAC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | OCSM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | PAM | ● | ● | ● | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | PSCM | ● | ● | ○ | ○ | ○ |
| Escape / Tribute / Mariner | Other | Other | 2012 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | GEM | ● | ● | ● | ● | 0x000A |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2001 - 2004 | RCM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.0L | Zetec | 2003 - 2004 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0008 |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | IC | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 |
| Escape / Tribute / Maverick | 2.3L | DURATEC-HE / I4 | 2006 - 2007 | RCM | ● | ● | ● | ● | 0x000C |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2004 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057 0xF058 0xF059 0xF090 |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2007 | IC | ● | ● | ● | ● | 0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053 0xF054 0xF055 |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2007 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escape / Tribute / Maverick | 3.0L | 4V | 2001 - 2007 | RCM | ● | ● | ● | ● | 0x000C 0x006D |
| Escape / Tribute / Maverick | 3.0L | 4V | 2003 - 2007 | PAM | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 3.0L | 4V | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| Escape / Tribute / Maverick | 3.0L | 4V | 2006 - 2007 | ABS | ● | ● | ● | ● | 0x0005 0x0008 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | ABS | ● | ● | ● | ● | 0x0012 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | ACM | ● | ● | ● | ● | 0x0017 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | BCM#1 | ● | ● | ● | ● | 0x000F 0x00D5 0x0101 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------|----------|--|-------------|--------|------------|-------------|-----------|-------------|---|
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | DSM | ● | ● | ● | ● | 0x00F2 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | IPC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | IPM-B | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 | RGTM | ● | ● | ● | ○ | 0x013D |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | PDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | RFA | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | SASM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Escape/Kuga | 1.6L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | TRM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | ABS | ● | ● | ● | ● | 0x0012 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | ACM | ● | ● | ● | ● | 0x0017 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | BCM#1 | ● | ● | ● | ● | 0x00D5 0x0101 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | DSM | ● | ● | ● | ● | 0x00F2 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | IPC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | IPM-B | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct Injection | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 | RGTM | ● | ● | ● | ○ | 0x013D |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2.0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | GPSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------|----------|------------------------------------|-------------|--------|------------|-------------|-----------|-------------|--|
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | PDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | RFA | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | SASM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 0L | EcoBoost - Gas Turbocharged Direct | 2013 - 2014 | TRM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 | ABS | ● | ● | ● | ● | 0x0012 |
| Escape/Kuga | 2. 5L | IVCT | 2013 | ACM | ● | ● | ● | ● | 0x0017 |
| Escape/Kuga | 2. 5L | IVCT | 2013 | BCM#1 | ● | ● | ● | ● | 0x00D5 0x0101 |
| Escape/Kuga | 2. 5L | IVCT | 2013 | DSM | ● | ● | ● | ● | 0x00F2 |
| Escape/Kuga | 2. 5L | IVCT | 2013 | FCDIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 | IPC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 | IPM-B | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 | OCSM | ● | ● | ● | ● | 0x000C |
| Escape/Kuga | 2. 5L | IVCT | 2013 | PCM | ● | ● | ● | ● | 0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Escape/Kuga | 2. 5L | IVCT | 2013 | RGTM | ● | ● | ● | ○ | 0x013D |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | APIM | ● | ● | ● | ● | 0x0019 |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | DDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | DSP | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | FCIM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | GPSM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | HCM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | HVAC | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | PAM | ● | ● | ○ | ○ | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | PDM | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | PSCM | ● | ● | ● | ○ | 0x00CB 0x00CC |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | RCM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | RFA | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | SASM | ● | ● | ● | ○ | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | SOD-L | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | SOD-R | ● | ● | ● | ● | ○ |
| Escape/Kuga | 2. 5L | IVCT | 2013 - 2014 | TRM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1. 3L | B3 | 1998 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1. 3L | B3 | 1998 | PCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|-----------------|
| FAMILIA / LASER | 1.5L | ZL | 1998 - 2000 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.5L | ZL | 1998 - 2002 | PCM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.5L | ZL | 2000 - 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.8L | FP | 1998 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 1.8L | FP | 1998 | PCM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | FS | 1999 - 2000 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | FS | 1999 - 2002 | PCM | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | FS | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | RF | 1998 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA / LASER | 2.0L | RF | 1998 | PCM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.2L | CR12 | 2007 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.2L | CR12 | 2007 | EPS | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.2L | CR12 | 2007 | GEM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.2L | CR12 | 2007 | IC | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.2L | CR12 | 2007 | IPDM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.2L | CR12 | 2007 | PCM | ● | ● | ● | ● | 0x0150 |
| FAMILIA VAN (BV*Y12) | 1.2L | CR12 | 2007 | RCM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.5L | HR15 | 2007 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.5L | HR15 | 2007 | EPS | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.5L | HR15 | 2007 | GEM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.5L | HR15 | 2007 | IC | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.5L | HR15 | 2007 | IPDM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.5L | HR15 | 2007 | PCM | ● | ● | ● | ● | 0x0150 |
| FAMILIA VAN (BV*Y12) | 1.5L | HR15 | 2007 | RCM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.6L | HR16 | 2007 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.6L | HR16 | 2007 | EPS | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.6L | HR16 | 2007 | GEM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.6L | HR16 | 2007 | IC | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.6L | HR16 | 2007 | IPDM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.6L | HR16 | 2007 | PCM | ● | ● | ● | ● | 0x0150 |
| FAMILIA VAN (BV*Y12) | 1.6L | HR16 | 2007 | RCM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.8L | MR18 | 2007 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.8L | MR18 | 2007 | EPS | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.8L | MR18 | 2007 | GEM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.8L | MR18 | 2007 | IC | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.8L | MR18 | 2007 | IPDM | ● | ● | ● | ● | ○ |
| FAMILIA VAN (BV*Y12) | 1.8L | MR18 | 2007 | PCM | ● | ● | ● | ● | 0x0150 |
| FAMILIA VAN (BV*Y12) | 1.8L | MR18 | 2007 | RCM | ● | ● | ● | ● | ○ |
| FAMILIA WAGON/VAN (B*Y11-500000-) | 1.3L | QG13 | 1999 - 2002 | PCM | ● | ● | ● | ● | 0x0150 |
| FAMILIA WAGON/VAN (B*Y11-500000-) | 1.3L | QG13 | 2002 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA WAGON/VAN (B*Y11-500000-) | 1.5L | QG15 | 1999 - 2002 | PCM | ● | ● | ● | ● | 0x0150 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|---------------|-------------|---------|------------|-------------|-----------|-------------|---|
| FAMILIA WAGON/VAN (B*Y11-500000-) | 1. 5L | QG15 | 2002 | ABS | ● | ● | ● | ● | ○ |
| FAMILIA WAGON/VAN (B*Y11-500000-) | 1. 8L | QG18 | 1999 - 2002 | PCM | ● | ● | ● | ● | 0x0150 |
| FRIENDEE / FREDa / BONGO FRIENDEE | 2. 0L | FE | 1997 - 2002 | PCM | ● | ● | ● | ● | ○ |
| FRIENDEE / FREDa / BONGO FRIENDEE | 2. 0L | FE | 2002 | TCM | ● | ● | ● | ● | ○ |
| FRIENDEE / FREDa / BONGO FRIENDEE | 2. 5L | WL_T | 1999 | PCM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | HCS | 1996 - 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | HCS | 1996 - 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | HCS | 1996 - 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | HCS | 1996 - 1999 | PCM | ● | ● | ● | ● | 0x0025 0x0080 0x0081 0x0082 0x0083 0x0023 |
| Fiesta / Mazda 121 / Bantam | 1. 0L | HCS | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | Zetec Rocam | 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | Zetec Rocam | 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | Zetec Rocam | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | Zetec Rocam | 1999 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | Zetec Rocam | 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 0L | Zetec Rocam | 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta / Mazda 121 / Bantam | 1. 25L | Zetec-SE | 1996 - 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 25L | Zetec-SE | 1996 - 2000 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 25L | Zetec-SE | 1996 - 2000 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 25L | Zetec-SE | 1996 - 2000 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| Fiesta / Mazda 121 / Bantam | 1. 25L | Zetec-SE | 1999 - 2000 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 25L | Zetec-SE | 1999 - 2000 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 25L | Zetec-SE | 2000 | PATS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 3L | Endura-E | 1996 - 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 3L | Endura-E | 1996 - 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 3L | Endura-E | 1996 - 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 3L | Endura-E | 1996 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| Fiesta / Mazda 121 / Bantam | 1. 3L | Endura-E | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 3L | Endura-E | 1999 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | 1. 4 PT-E SFI | 1994 - 1996 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | 1. 4 PT-E SFI | 1994 - 1996 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | 1. 4 PT-E SFI | 1994 - 1996 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | PT-E | 2000 | PCM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1. 4L | Zetec-SE | 1996 - 1999 | ABS/TCS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------|----------|-------------|--------------|---------|------------|-------------|-----------|-------------|--|
| Fiesta / Mazda 121 / Bantam | 1.4L | Zetec-SE | 1996 - 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.4L | Zetec-SE | 1996 - 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.4L | Zetec-SE | 1996 - 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 |
| Fiesta / Mazda 121 / Bantam | 1.4L | Zetec-SE | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.4L | Zetec-SE | 1999 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Other | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Other | 2001 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Other | 2001 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Other | 2001 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Other | 2001 | PATS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Other | 2001 | PCM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec Rocam | 1999 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec Rocam | 1999 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec Rocam | 1999 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec Rocam | 1999 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec Rocam | 1999 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec Rocam | 1999 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec-SE | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec-SE | 2000 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec-SE | 2000 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec-SE | 2000 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec-SE | 2000 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.6L | Zetec-SE | 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura DI | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura DI | 2000 | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura DI | 2000 | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura DI | 2000 | FIP | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura DI | 2000 | GEM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura DI | 2000 | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura DI | 2000 | PATS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura DI | 2000 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura-DE | 1996 - Other | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura-DE | 1996 - Other | CSM | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura-DE | 1996 - Other | ECS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura-DE | 1996 - Other | HEC | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura-DE | 1996 - Other | PATS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Endura-DE | 1996 - Other | PCM | ○ | ○ | ● | ○ | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Zetec | 1992 - 1994 | ABS/TCS | ● | ● | ● | ● | ○ |
| Fiesta / Mazda 121 / Bantam | 1.8L | Zetec | 1992 - 1994 | CSM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------|----------|------------|--------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| Fiesta / Mazda 121 / Bantam | 1. 8L | Zetec | 1992 - 1994 | HEC | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | F6A-T | 1998 | TCM | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | F6A-T | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | F6A-T | 1998 - Other | PCM | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | F6A-T | 1998 - Other | RCM | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | K6A | 2000 - Other | ABS | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | K6A | 2000 - Other | PCM | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | K6A | 2000 - Other | RCM | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | K6A_T | 1999 - Other | ABS | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | K6A_T | 1999 - Other | PCM | ● | ● | ● | ● | ○ |
| LAPUTA | 660cc | K6A_T | 1999 - Other | RCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 3L | B3 | 1996 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 3L | B3 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1. 3L | B3 | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 3L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 5L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 5L | Z5 | 1996 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 5L | Z5 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1. 5L | ZL | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 5L | ZL | 1998 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1. 6L | B6 | 1996 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 6L | B6 | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1. 6L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 6L | ZM | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 6L | ZM | 1998 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1. 6L | ZM | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 8L | BP | 1996 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 8L | BP | 1996 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1. 8L | FP | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 1. 8L | FP | 1998 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| LASER / 323 / TIERRA | 1. 8L | Other | Other | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | FS | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | FS | 2000 - 2001 | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | FS | 2000 - 2001 | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | RF | 1998 | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | RF | 1998 - Other | ABS | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | RF-T | 1998 - 2000 | PCM | ● | ● | ● | ● | ○ |
| LASER / 323 / TIERRA | 2. 0L | RF-T | 2000 | ABS | ● | ● | ● | ● | ○ |
| MARVIE | 2. 5L | G5 | 1996 | PCM | ● | ● | ● | ● | ○ |
| MAZDA 929 | 3. 0L | JE | 1997 | PCM | ● | ● | ● | ● | ○ |
| MAZDA2 (China) | 1. 3L | ZJ | 2007 | ABS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| MAZDA2 (China) | 1. 3L | ZJ | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA2 (China) | 1. 3L | ZJ | 2007 | EPS | ● | ● | ● | ● | 0x005B |
| MAZDA2 (China) | 1. 3L | ZJ | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (China) | 1. 3L | ZJ | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (China) | 1. 3L | ZJ | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (China) | 1. 3L | ZJ | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA2 (China) | 1. 5L | ZY | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA2 (China) | 1. 5L | ZY | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA2 (China) | 1. 5L | ZY | 2007 | EPS | ● | ● | ● | ● | 0x005B |
| MAZDA2 (China) | 1. 5L | ZY | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (China) | 1. 5L | ZY | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (China) | 1. 5L | ZY | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (China) | 1. 5L | ZY | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 25L | MZI | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA2 (EURO STG3/4 Specs) | 1. 25L | MZI | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 25L | MZI | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (EURO STG3/4 Specs) | 1. 25L | MZI | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZI | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZI | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZI | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZI | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZI | 2002 - 2006 | TCM | ● | ● | ● | ● | 0x003F |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZ_CD_DI | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZ_CD_DI | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZ_CD_DI | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZ_CD_DI | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 4L | MZ_CD_DI | 2002 - 2006 | TCM | ● | ● | ● | ● | 0x003F |
| MAZDA2 (EURO STG3/4 Specs) | 1. 6L | MZI | 2002 | TCM | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 6L | MZI | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA2 (EURO STG3/4 Specs) | 1. 6L | MZI | 2002 - 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (EURO STG3/4 Specs) | 1. 6L | MZI | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (EURO STG3/4 Specs) | 1. 6L | MZI | 2002 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 3L | ZJ | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 3L | ZJ | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA2 (Europe) | 1. 3L | ZJ | 2007 | EPS | ● | ● | ● | ● | 0x005B |
| MAZDA2 (Europe) | 1. 3L | ZJ | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 3L | ZJ | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (Europe) | 1. 3L | ZJ | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 3L | ZJ | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 3L | ZJ | 2007 | VSM | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 4L | Y4 | 2007 | ABS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|-------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| MAZDA2 (Europe) | 1. 4L | Y4 | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA2 (Europe) | 1. 4L | Y4 | 2007 | EPS | ● | ● | ● | ● | 0x005B |
| MAZDA2 (Europe) | 1. 4L | Y4 | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 4L | Y4 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (Europe) | 1. 4L | Y4 | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 4L | Y4 | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 4L | Y4 | 2007 | VSM | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 5L | ZY | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 5L | ZY | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA2 (Europe) | 1. 5L | ZY | 2007 | EPS | ● | ● | ● | ● | 0x005B |
| MAZDA2 (Europe) | 1. 5L | ZY | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 5L | ZY | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (Europe) | 1. 5L | ZY | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 5L | ZY | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 5L | ZY | 2007 | VSM | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 6L | Y6 | 2008 | ABS | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 6L | Y6 | 2008 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA2 (Europe) | 1. 6L | Y6 | 2008 | EPS | ● | ● | ● | ● | 0x005B |
| MAZDA2 (Europe) | 1. 6L | Y6 | 2008 | IC | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 6L | Y6 | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA2 (Europe) | 1. 6L | Y6 | 2008 | RCM | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 6L | Y6 | 2008 | RKE | ● | ● | ● | ● | ○ |
| MAZDA2 (Europe) | 1. 6L | Y6 | 2008 | VSM | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 1. 6L | Z6 | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 1. 6L | Z6 | 2007 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 1. 6L | Z6 | 2007 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 1. 6L | Z6 | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 1. 6L | Z6 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (China / General) | 1. 6L | Z6 | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 1. 6L | Z6 | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 2. 0L | LF | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 2. 0L | LF | 2007 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 2. 0L | LF | 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 2. 0L | LF | 2007 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 2. 0L | LF | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 2. 0L | LF | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (China / General) | 2. 0L | LF | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (China / General) | 2. 0L | LF | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 3L | ZJ | 2003 - 2006 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 3L | ZJ | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 3L | ZJ | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|-------------|--------|------------|-------------|-----------|-------------|---|
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 3L | ZJ | 2003 - 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 3L | ZJ | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 3L | ZJ | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 3L | ZJ | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2003 - 2006 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2003 - 2006 | EPS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2003 - 2006 | FACM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2003 - 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Y6 | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Z6 | 2003 - 2006 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Z6 | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Z6 | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Z6 | 2003 - 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Z6 | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Z6 | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 1. 6L | Z6 | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | LF | 2003 - 2006 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | LF | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | LF | 2003 - 2006 | EPS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | LF | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | LF | 2003 - 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | LF | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | LF | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | LF | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | RF-T | 2006 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | RF-T | 2006 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | RF-T | 2006 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | RF-T | 2006 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | RF-T | 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | RF-T | 2006 | PCM | ● | ● | ● | ● | 0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | RF-T | 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 0L | RF-T | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3 | 2003 - 2006 | ABS | ● | ● | ● | ● | 0x001E |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3 | 2003 - 2006 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3 | 2003 - 2006 | EPS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3 | 2003 - 2006 | GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|-------------|--------|------------|-------------|-----------|-------------|--|
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3 | 2003 - 2006 | IC | ● | ● | ● | ● | 0x012D |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3 | 2003 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0201 0x0009 |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3 | 2003 - 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3 | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3_T | 2006 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3_T | 2006 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3_T | 2006 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3_T | 2006 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3_T | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3_T | 2006 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (EURO STG3/4/5 and General Specs.) | 2. 3L | L3_T | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 1. 6L | Z6 | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (North America / General) | 1. 6L | Z6 | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 1. 6L | Z6 | 2006 | TPM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 1. 6L | Z6 | 2006 - 2012 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 1. 6L | Z6 | 2006 - 2012 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 1. 6L | Z6 | 2006 - 2012 | IC | ● | ● | ● | ● | 0x012D |
| MAZDA3 (North America / General) | 1. 6L | Z6 | 2006 - 2012 | RCM | ● | ● | ● | ● | 0x006D |
| MAZDA3 (North America / General) | 2. 0L | LF | 2004 - 2009 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 0L | LF | 2004 - 2009 | EPS | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 0L | LF | 2004 - 2009 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 0L | LF | 2004 - 2009 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 0L | LF | 2004 - 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (North America / General) | 2. 0L | LF | 2004 - 2009 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 0L | LF | 2004 - 2009 | TPM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 0L | LF | 2006 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 0L | LF | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2004 - 2009 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2004 - 2009 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2004 - 2009 | EPS | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2004 - 2009 | GEM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2004 - 2009 | IC | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2004 - 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2004 - 2009 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2004 - 2009 | TPM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2006 | RKE | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3 | 2006 - 2009 | TCM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3_T | 2007 - 2009 | ABS | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3_T | 2007 - 2009 | EATC | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2. 3L | L3_T | 2007 - 2009 | GEM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|-------------|--------|------------|-------------|-----------|-------------|-----------------------------|
| MAZDA3 (North America / General) | 2.3L | L3_T | 2007 - 2009 | IC | ● | ● | ● | ○ | ○ |
| MAZDA3 (North America / General) | 2.3L | L3_T | 2007 - 2009 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA3 (North America / General) | 2.3L | L3_T | 2007 - 2009 | RCM | ● | ● | ● | ● | ○ |
| MAZDA3 (North America / General) | 2.3L | L3_T | 2007 - 2009 | TPM | ● | ● | ● | ● | ○ |
| MAZDA3 / AXELA | 1.5L | P5 | Other | BSML | ● | ● | ● | ● | 0x0043 |
| MAZDA3 / AXELA | 1.5L | P5 | Other | BSMR | ● | ● | ● | ○ | ○ |
| MAZDA3 / AXELA | 1.5L | P5 | Other | RVM | ● | ● | ● | ○ | 0x0072 |
| MAZDA3 / AXELA | 1.6L | Z6 | Other | BSML | ● | ● | ● | ● | 0x0043 |
| MAZDA3 / AXELA | 1.6L | Z6 | Other | BSMR | ● | ● | ● | ○ | ○ |
| MAZDA3 / AXELA | 1.6L | Z6 | Other | RVM | ● | ● | ● | ○ | 0x0072 |
| MAZDA3 / AXELA | 2.0L | PE | Other | BSML | ● | ● | ● | ● | 0x0043 |
| MAZDA3 / AXELA | 2.0L | PE | Other | BSMR | ● | ● | ● | ○ | ○ |
| MAZDA3 / AXELA | 2.0L | PE | Other | RVM | ● | ● | ● | ○ | 0x0072 |
| MAZDA3 / AXELA | 2.2L | SH | Other | BSML | ● | ● | ● | ● | 0x0043 |
| MAZDA3 / AXELA | 2.2L | SH | Other | BSMR | ● | ● | ● | ○ | ○ |
| MAZDA3 / AXELA | 2.2L | SH | Other | RVM | ● | ● | ● | ○ | 0x0072 |
| MAZDA3 / AXELA | 2.5L | PY | Other | BSML | ● | ● | ● | ● | 0x0043 |
| MAZDA3 / AXELA | 2.5L | PY | Other | BSMR | ● | ● | ● | ○ | ○ |
| MAZDA3 / AXELA | 2.5L | PY | Other | RVM | ● | ● | ● | ○ | 0x0072 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 | GEM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2005 - 2007 | RPSDM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 1.8L | L8 | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | GEM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2005 - 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2007 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2007 | RPSDM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | LF | 2007 | TCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|-------------|---------|------------|-------------|-----------|-------------|---|
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | FFH | ● | ● | ● | ● | 0x002D 0x002F |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | GEM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2005 - 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2007 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2007 | RPSDM | ● | ● | ● | ● | ○ |
| MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX | 2.0L | RF-T | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2006 - 2010 | ABS | ● | ● | ● | ● | ○ |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2006 - 2010 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2006 - 2010 | EPS | ● | ● | ● | ● | ○ |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2006 - 2010 | GEM | ● | ● | ● | ● | ○ |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2006 - 2010 | IC | ● | ● | ● | ● | ○ |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2006 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2006 - 2010 | RCM | ● | ● | ● | ● | ○ |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2006 - 2010 | TPM | ● | ● | ● | ● | ○ |
| MAZDA5 (North America Specs.) | 2.3L | L3 | 2008 - 2010 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.0L | LF | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.0L | LF | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (China) | 2.0L | LF | 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (China) | 2.0L | LF | 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.0L | LF | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.0L | LF | 2007 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.0L | LF | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (China) | 2.0L | LF | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.0L | LF | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.0L | LF | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.5L | L5 | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.5L | L5 | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (China) | 2.5L | L5 | 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (China) | 2.5L | L5 | 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.5L | L5 | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.5L | L5 | 2007 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.5L | L5 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (China) | 2.5L | L5 | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.5L | L5 | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (China) | 2.5L | L5 | 2007 | TCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|---|
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2002 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x001E 0x0008 |
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2002 - 2005 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2002 - 2005 | LHID | ● | ● | ● | ● | 0x0146 |
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2002 - 2005 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2002 - 2005 | RHID | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2005 | GEM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2005 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 1.8L | L8 | 2005 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2002 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2002 - 2005 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2002 - 2005 | LHID | ● | ● | ● | ● | 0x0146 |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2002 - 2005 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2002 - 2005 | RHID | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2005 | GEM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2005 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2005 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | LF | 2005 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2002 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2002 - 2005 | FFH | ● | ● | ● | ● | 0x0131 |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2002 - 2005 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2002 - 2005 | LHID | ● | ● | ● | ● | 0x0146 |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0055 0x0080 0x0081 0x0082 0x0083 0x005C 0x0201 |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2002 - 2005 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2002 - 2005 | RHID | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2005 | GEM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2005 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.0L | RF-T | 2005 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2002 | 4X4 | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2002 - 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 0x001E |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2002 - 2005 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2002 - 2005 | LHID | ● | ● | ● | ● | 0x0146 |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2002 - 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x0201 0x0009 |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2002 - 2005 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2002 - 2005 | RHID | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2002 - 2005 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2005 | GEM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2.3L | L3 | 2005 | LCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------------------|----------|------------|------|---------|------------|-------------|-----------|-------------|-----------------------------|
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3 | 2005 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | 4X4 | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | GEM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | LHID | ● | ● | ● | ● | 0x0146 |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | RHID | ● | ● | ● | ● | ○ |
| MAZDA6 (EURO STG3/4 and General) | 2. 3L | L3_T | 2005 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | RVM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 1. 8L | L8 | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | RVM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | LF | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | FFH | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | LCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|---|
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | PCM | ● | ● | ● | ● | 0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | RVM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 0L | RF-T | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | EPS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | FFH | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | PCM | ● | ● | ● | ● | 0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | RVM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 2L | R2_T | 2007 - 2008 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | EPS | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | RVM | ● | ● | ● | ● | ○ |
| MAZDA6 (Europe and General) | 2. 5L | L5 | 2007 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | BSML | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | BSMR | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 2. 5L | L5 | 2009 - 2010 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | ABS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|----------------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | BSML | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | BSMR | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (Middle East / General) | 3. 7L | CA | 2009 - 2010 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | BSML | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | BSMR | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 2. 5L | L5 | 2009 - 2010 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | ABS | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | BSML | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | BSMR | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | EATC | ● | ● | ● | ● | 0x0020 |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | LCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (North America / General) | 3. 7L | CA | 2009 - 2010 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 / ATENZA | 2. 0L | PE | Other | BSML | ● | ● | ● | ● | ○ |
| MAZDA6 / ATENZA | 2. 0L | PE | Other | BSMR | ● | ● | ● | ○ | ○ |
| MAZDA6 / ATENZA | 2. 0L | PE | Other | RVM | ● | ● | ● | ○ | ○ |
| MAZDA6 / ATENZA | 2. 2L | SH | Other | BSML | ● | ● | ● | ● | 0x0043 |
| MAZDA6 / ATENZA | 2. 2L | SH | Other | BSMR | ● | ● | ● | ○ | ○ |
| MAZDA6 / ATENZA | 2. 2L | SH | Other | RVM | ● | ● | ● | ○ | 0x0072 |
| MAZDA6 / ATENZA | 2. 5L | PY | Other | BSML | ● | ● | ● | ● | 0x0043 |
| MAZDA6 / ATENZA | 2. 5L | PY | Other | BSMR | ● | ● | ● | ○ | ○ |
| MAZDA6 / ATENZA | 2. 5L | PY | Other | RVM | ● | ● | ● | ○ | 0x0072 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------------------|----------|------------|--------------|---------|------------|-------------|-----------|-------------|--|
| MAZDA6 (North America/General) | 2. 3L | L3 | 2003 - 2008 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA6 (North America/General) | 2. 3L | L3 | 2003 - 2008 | IC | ● | ● | ● | ● | 0x0009 |
| MAZDA6 (North America/General) | 2. 3L | L3 | 2003 - 2008 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA6 (North America/General) | 2. 3L | L3 | 2003 - 2008 | RCM | ● | ● | ● | ● | 0x006D |
| MAZDA6 (North America/General) | 2. 3L | L3 | 2003 - 2008 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 2. 3L | L3 | 2006 - 2008 | GEM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 2. 3L | L3 | 2008 | TPM | ● | ● | ● | ○ | ○ |
| MAZDA6 (North America/General) | 2. 3L | L3_T | 2006 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 2. 3L | L3_T | 2006 - 2007 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA6 (North America/General) | 2. 3L | L3_T | 2006 - 2007 | GEM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 2. 3L | L3_T | 2006 - 2007 | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 2. 3L | L3_T | 2006 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MAZDA6 (North America/General) | 2. 3L | L3_T | 2006 - 2007 | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 2. 3L | L3_T | 2006 - 2007 | RKE | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 3. 0L | AJ | 2003 - 2008 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0201 |
| MAZDA6 (North America/General) | 3. 0L | AJ | 2003 - 2008 | TCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 3. 0L | AJ | 2003 - Other | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| MAZDA6 (North America/General) | 3. 0L | AJ | 2003 - Other | IC | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 3. 0L | AJ | 2003 - Other | RCM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 3. 0L | AJ | 2006 - 2008 | GEM | ● | ● | ● | ● | ○ |
| MAZDA6 (North America/General) | 3. 0L | AJ | 2008 | TPM | ● | ● | ● | ○ | ○ |
| MILLENNIA / EUNOS 800 | 2. 0L | KF | 1998 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2. 3L | KJ | 1998 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2. 5L | KL | 1998 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2. 5L | KL | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| MILLENNIA / EUNOS 800 | 2. 5L | KL | 2002 | PCM | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 0L | FS | 1999 | ABS | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 0L | FS | 1999 - 2000 | PCM | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 0L | FS | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 0L | RF-T | 2002 - 2004 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 0L | RF-T | 2002 - 2004 | FFH | ● | ● | ● | ● | 0x0131 |
| MPV (Europe/General) | 2. 0L | RF-T | 2002 - 2004 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MPV (Europe/General) | 2. 3L | L3 | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 3L | L3 | 2002 | PCM | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 5L | GY | 1999 - 2000 | ABS | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 5L | GY | 1999 - 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 2. 5L | GY | 1999 - 2000 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6 |
| MPV (Europe/General) | 3. 0L | AJ | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (Europe/General) | 3. 0L | AJ | 2002 | PCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-------------------------------|----------|------------|-------------|---------|------------|-------------|-----------|-------------|--|
| MPV (Europe/General) | 3.0L | AJ | 2002 | TCM | ● | ● | ● | ● | ○ |
| MPV (JPN/General) | 2.0L | FS | 1999 | ABS | ● | ● | ● | ● | ○ |
| MPV (JPN/General) | 2.0L | FS | 1999 | PCM | ● | ● | ● | ● | ○ |
| MPV (JPN/General) | 2.3L | L3 | 2002 - 2004 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (JPN/General) | 2.3L | L3 | 2002 - 2004 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6 |
| MPV (JPN/General) | 2.5L | GY | 1999 | ABS | ● | ● | ● | ● | ○ |
| MPV (JPN/General) | 2.5L | GY | 1999 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6 |
| MPV (JPN/General) | 3.0L | AJ | 2002 - 2004 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (JPN/General) | 3.0L | AJ | 2002 - 2004 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MPV (JPN/General) | 3.0L | AJ | 2002 - 2004 | TCM | ● | ● | ● | ● | ○ |
| MPV (North America / General) | 2.5L | GY | 2000 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (North America / General) | 2.5L | GY | 2000 - 2001 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6 |
| MPV (North America / General) | 3.0L | AJ | 2002 - 2006 | ABS/TCS | ● | ● | ● | ● | ○ |
| MPV (North America / General) | 3.0L | AJ | 2002 - 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MPV (North America / General) | 3.0L | AJ | 2002 - 2006 | TCM | ● | ● | ● | ● | 0x00C5 |
| MPV (North America / General) | 3.0L | AJ | 2004 - 2006 | RCM | ● | ● | ● | ● | 0x006D |
| MPV (North America / General) | 3.0L | JE | 1997 - 1999 | PCM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 | IC | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | 4X4 | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | ABS | ● | ● | ● | ● | 0x0008 0x001E |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | AM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | GEM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | HCM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | ICCM | ● | ● | ● | ● | 0x0060 |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | LCM | ● | ● | ● | ● | 0x0021 |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | LTM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | RCM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | RKE | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | RPSDM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3 | 2006 - 2013 | TCM | ● | ● | ● | ● | 0x0136 |
| MPV / Mazda8 (JPN/General) | 2.3L | L3_T | 2006 | 4X4 | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3_T | 2006 | ABS | ● | ● | ● | ● | 0x0008 |
| MPV / Mazda8 (JPN/General) | 2.3L | L3_T | 2006 | AM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3_T | 2006 | GEM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3_T | 2006 | HCM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3_T | 2006 | IC | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2.3L | L3_T | 2006 | ICCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------------------------|----------|------------|--------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| MPV / Mazda8 (JPN/General) | 2. 3L | L3_T | 2006 | LCM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 3L | L3_T | 2006 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MPV / Mazda8 (JPN/General) | 2. 3L | L3_T | 2006 | LTM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 3L | L3_T | 2006 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MPV / Mazda8 (JPN/General) | 2. 3L | L3_T | 2006 | RCM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 3L | L3_T | 2006 | RKE | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 3L | L3_T | 2006 | RPSDM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 3L | L3_T | 2006 | TCM | ● | ● | ● | ○ | ○ |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | ABS | ● | ● | ● | ● | 0x001E |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | AM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | GEM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | HCM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | ICCM | ● | ● | ● | ● | 0x0060 |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | LCM | ● | ● | ● | ● | 0x0021 |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | LPSDM | ● | ● | ● | ● | 0x0022 |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | LTM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | RCM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | RKE | ● | ● | ● | ● | 0xF093 0xF094 0xF095 |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | RPSDM | ● | ● | ● | ● | ○ |
| MPV / Mazda8 (JPN/General) | 2. 5L | L5 | 2012 | TCM | ● | ● | ● | ● | ○ |
| MX-5 | 1. 6L | B6 | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| MX-5 | 1. 6L | B6 | 2000 | PCM | ● | ● | ● | ● | ○ |
| MX-5 | 1. 8L | BP | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| MX-5 | 1. 8L | BP | 2000 | PCM | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 1. 8L | L8 | 2005 | TCM | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 1. 8L | L8 | 2005 - 2008 | ABS | ● | ● | ● | ● | 0x001E |
| MX-5 (Europe / General Specs.) | 1. 8L | L8 | 2005 - 2008 | IC | ● | ● | ● | ● | 0x001A 0x012D |
| MX-5 (Europe / General Specs.) | 1. 8L | L8 | 2005 - 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MX-5 (Europe / General Specs.) | 1. 8L | L8 | 2005 - 2008 | RCM | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 1. 8L | L8 | 2005 - 2008 | RHT | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 1. 8L | L8 | 2005 - 2008 | RKE | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 2. 0L | LF | 2005 - 2008 | ABS | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 2. 0L | LF | 2005 - 2008 | IC | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 2. 0L | LF | 2005 - 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| MX-5 (Europe / General Specs.) | 2. 0L | LF | 2005 - 2008 | RCM | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 2. 0L | LF | 2005 - 2008 | RHT | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 2. 0L | LF | 2005 - 2008 | RKE | ● | ● | ● | ● | ○ |
| MX-5 (Europe / General Specs.) | 2. 0L | LF | 2005 - 2008 | TCM | ● | ● | ● | ● | ○ |
| MX-5 (North America / General Specs.) | 2. 0L | LF | 2006 - Other | ABS | ● | ● | ● | ● | 0x0005 |
| MX-5 (North America / General Specs.) | 2. 0L | LF | 2006 - Other | IC | ● | ● | ● | ● | 0x0005 |
| MX-5 (North America / General Specs.) | 2. 0L | LF | 2006 - Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---------------------------------------|----------|------------|--------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| MX-5 (North America / General Specs.) | 2.0L | LF | 2006 - Other | RCM | ● | ● | ● | ● | 0x0005 |
| MX-5 (North America / General Specs.) | 2.0L | LF | 2006 - Other | RKE | ● | ● | ● | ● | 0x0005 |
| MX-5 (North America / General Specs.) | 2.0L | LF | 2006 - Other | TCM | ● | ● | ● | ● | ○ |
| MX-5 (North America / General Specs.) | 2.0L | LF | 2007 - 2010 | RHT | ● | ● | ● | ● | ○ |
| MX-5 MIATA | 1.8L | BP | 1997 - 2005 | PCM | ● | ● | ● | ● | ○ |
| MX-5 MIATA | 1.8L | BP | 2001 - 2005 | ABS/TCS | ● | ● | ● | ● | ○ |
| MX-5 MIATA | 1.8L | BP Turbo | 2004 | ABS/TCS | ● | ● | ● | ● | ○ |
| MX-5 MIATA | 1.8L | BP Turbo | 2004 | PCM | ● | ● | ● | ● | ○ |
| Millenia | 2.3L | KJ | 1997 - 2001 | PCM | ● | ● | ● | ● | ○ |
| Millenia | 2.3L | KJ | 2000 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| Millenia | 2.5L | KL | 1997 - 2001 | PCM | ● | ● | ● | ● | ○ |
| Millenia | 2.5L | KL | 2000 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| PREMACY | 1.8L | FP | 1999 | ABS | ● | ● | ● | ● | ○ |
| PREMACY | 1.8L | FP | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| PREMACY | 1.8L | FP | 2000 | PCM | ● | ● | ● | ● | ○ |
| PREMACY | 2.0L | FS | 2001 | ABS | ● | ● | ● | ● | ○ |
| PREMACY | 2.0L | FS | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| PREMACY | 2.0L | FS | 2001 | PCM | ● | ● | ● | ● | ○ |
| PREMACY | 2.0L | RF-T | 1999 - 2000 | ABS | ● | ● | ● | ● | ○ |
| PREMACY | 2.0L | RF-T | 1999 - 2003 | PCM | ● | ● | ● | ● | ○ |
| PREMACY | 2.0L | RF-T | 2000 - 2003 | ABS/TCS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP | 1999 | ABS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP | 1999 - 2002 | PCM | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP_DE | 1999 | ABS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 1.8L | FP_DE | 1999 | PCM | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 2.0L | FS | 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 2.0L | FS | 2001 | PCM | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 2.0L | RF-T | 1999 | ABS | ● | ● | ● | ● | ○ |
| PREMACY / IXION | 2.0L | RF-T | 1999 | PCM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | 4X4 | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | ABS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | ACU | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | EPS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | IC | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | LPSDM | ● | ● | ● | ● | 0x0022 |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | RCM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | RKE | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|------------------|----------|------------|-------|---------|------------|-------------|-----------|-------------|--|
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | RPSDM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.6L | Y6 | Other | TCM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | ABS | ● | ● | ● | ● | 0x001E |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | ACU | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | EATC | ● | ● | ● | ● | 0x0020 |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | EPS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | IC | ● | ● | ● | ● | 0x001A |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | LPSDM | ● | ● | ● | ● | 0x0022 |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0201 |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | RCM | ● | ● | ● | ● | 0x006D |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | RKE | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 1.8L | L8 | Other | RPSDM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | 4X4 | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | ABS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | ACU | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| PREMACY / MAZDA5 | 2.0L | LF | Other | EATC | ● | ● | ● | ● | 0x0020 |
| PREMACY / MAZDA5 | 2.0L | LF | Other | EPS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | IC | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | LPSDM | ● | ● | ● | ● | 0x0022 |
| PREMACY / MAZDA5 | 2.0L | LF | Other | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| PREMACY / MAZDA5 | 2.0L | LF | Other | RCM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | RKE | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | RPSDM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | LF | Other | TCM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | PE | Other | ABS | ● | ● | ● | ● | 0x001E |
| PREMACY / MAZDA5 | 2.0L | PE | Other | ACU | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | PE | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| PREMACY / MAZDA5 | 2.0L | PE | Other | EATC | ● | ● | ● | ● | 0x0020 |
| PREMACY / MAZDA5 | 2.0L | PE | Other | EPS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | PE | Other | IC | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | PE | Other | LPSDM | ● | ● | ● | ● | 0x0022 |
| PREMACY / MAZDA5 | 2.0L | PE | Other | RCM | ● | ● | ● | ● | 0x006D |
| PREMACY / MAZDA5 | 2.0L | PE | Other | RKE | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.0L | PE | Other | RPSDM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | ABS | ● | ● | ● | ● | 0x001E |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | ACU | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | BCM/GEM | ● | ● | ● | ● | 0x0120 |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | EATC | ● | ● | ● | ● | 0x0020 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|---|----------|------------|-------------|---------|------------|-------------|-----------|-------------|--|
| PREMACY / MAZDA5 | 2.5L | L5 | Other | EPS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | IC | ● | ● | ● | ● | 0x001A |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | LPSDM | ● | ● | ● | ● | 0x0022 |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0201 |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | RCM | ● | ● | ● | ● | 0x006D |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | RKE | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | RPSDM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 | 2.5L | L5 | Other | TCM | ● | ● | ● | ○ | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | 4X4 | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | ABS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | EPS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | GEM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | RCM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2005 - 2007 | RKE | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2006 - 2007 | LPSDM | ● | ● | ● | ● | 0x0022 |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2006 - 2007 | RPSDM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.0L | LF | 2006 - 2007 | TCM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2005 - 2007 | ABS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2005 - 2007 | EATC | ● | ● | ● | ● | 0x0020 |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2005 - 2007 | EPS | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2005 - 2007 | GEM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2005 - 2007 | IC | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2005 - 2007 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2005 - 2007 | RCM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2005 - 2007 | RKE | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2007 | LPSDM | ● | ● | ● | ● | 0x0022 |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2007 | RPSDM | ● | ● | ● | ● | ○ |
| PREMACY / MAZDA5 (Japan / General Specs.) | 2.3L | L3 | 2007 | TCM | ● | ● | ● | ● | ○ |
| PROBE / MX-6 | 2.0L | Other | 1996 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| PROBE / MX-6 | 2.5L | KL | 1996 - 1997 | PCM | ● | ● | ● | ● | ○ |
| PROCEED | 2.5L | G5 | 1996 | PCM | ● | ● | ● | ● | ○ |
| PROCEED | 2.6L | G6 | 1996 | PCM | ● | ● | ● | ● | ○ |
| PROTEGE | 1.5L | Z5 | 1997 - 1998 | PCM | ● | ● | ● | ● | ○ |
| PROTEGE | 1.6L | ZM | 1999 - 2001 | PCM | ● | ● | ● | ● | ○ |
| PROTEGE | 1.6L | ZM | 2000 - 2001 | ABS/TCS | ● | ● | ● | ● | ○ |
| PROTEGE | 1.8L | BP | 1997 - 1998 | PCM | ● | ● | ● | ● | ○ |
| PROTEGE | 1.8L | FP | 1999 - 2000 | PCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--|----------|------------------------|-------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| PROTEGE | 1. 8L | FP | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| PROTEGE | 2. 0L | FS | 2001 - 2003 | ABS/TCS | ● | ● | ● | ● | ○ |
| PROTEGE | 2. 0L | FS | 2001 - 2003 | PCM | ● | ● | ● | ● | ○ |
| PROTEGE | 2. 0L | FS_T | 2003 | ABS/TCS | ● | ● | ● | ● | ○ |
| PROTEGE | 2. 0L | FS_T | 2003 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ROADSTER / MX-5 | 1. 6L | B6 | 2000 | ABS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1. 6L | B6 | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1. 6L | B6 | 2002 | PCM | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1. 8L | BP | 2000 | ABS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1. 8L | BP | 2002 | ABS/TCS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1. 8L | BP | 2002 | PCM | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1. 8L | BP Turbo | 2003 | ABS/TCS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 1. 8L | BP Turbo | 2003 | PCM | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2. 0L | LF | 2005 - 2008 | ABS | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2. 0L | LF | 2005 - 2008 | IC | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2. 0L | LF | 2005 - 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| ROADSTER / MX-5 | 2. 0L | LF | 2005 - 2008 | RCM | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2. 0L | LF | 2005 - 2008 | RHT | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2. 0L | LF | 2005 - 2008 | RKE | ● | ● | ● | ● | ○ |
| ROADSTER / MX-5 | 2. 0L | LF | 2005 - 2008 | TCM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | ABS | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | ABS/TCS | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | EPS | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | IC | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | LCM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | RCM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | RKE | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | SASM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B | 2008 | TCM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP High-Power | 2003 | ABS/TCS | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP High-Power | 2003 | EPS | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP High-Power | 2003 | IC | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP High-Power | 2003 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP High-Power | 2003 | RCM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP High-Power | 2003 | RKE | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP High-Power | 2003 | SASM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP High-Power | 2003 | TCM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP Standard Power | 2003 | ABS/TCS | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP Standard Power | 2003 | EPS | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP Standard Power | 2003 | IC | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--|----------|---|-------------|---------|------------|-------------|-----------|-------------|--|
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP Standard Power | 2003 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP Standard Power | 2003 | RCM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP Standard Power | 2003 | RKE | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP Standard Power | 2003 | SASM | ● | ● | ● | ● | ○ |
| RX-8 (Europe / General / Japan Specs.) | 654x2cc | 13B-MSP Standard Power | 2003 | TCM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | ABS | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | ABS/TCS | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | EPS | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | IC | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | LCM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | RCM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | RKE | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | SASM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | TCM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B | 2009 - 2010 | TPM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2004 - 2008 | ABS/TCS | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2004 - 2008 | EPS | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2004 - 2008 | IC | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2004 - 2008 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2004 - 2008 | RCM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2004 - 2008 | RKE | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2004 - 2008 | SASM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2004 - 2008 | TPM | ● | ● | ● | ○ | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP High-Power | 2006 - 2008 | TCM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | ABS/TCS | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | EPS | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | IC | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | RCM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | RKE | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | SASM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | TCM | ● | ● | ● | ● | ○ |
| RX-8 (North America Specs) | 654x2cc | 13B-MSP Standard Power | 2004 - 2005 | TPM | ● | ● | ● | ○ | ○ |
| Ranger / Courier / Mazda B Series /Bravo | 4.0L | V6 SOHC | 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Courier / Mazda B Series /Bravo | 4.0L | V6 SOHC | 2003 | ESOF | ● | ● | ● | ● | ○ |
| Ranger / Courier / Mazda B Series /Bravo | 4.0L | V6 SOHC | 2003 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ABS | ● | ● | ● | ● | 0x0008 0x001E 0x00CA |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ACM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | 0x00D5 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|---|-------------|-----------|------------|-------------|-----------|-------------|--|
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00B0 0x00B1 0x00B3 0x00B9 0x00BC 0x00BD |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RCM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TCM | ● | ● | ● | ● | 0x0038 |
| Ranger / Mazda B-Series / Courier | 2. 2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2004 - 2007 | GEM | ● | ● | ● | ● | 0x000A 0x0203 |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2004 - 2009 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2004 - 2011 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2004 - 2011 | IC | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2004 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0024 0x0028 0x0031 |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2004 - 2011 | RCM | ● | ● | ● | ● | 0x000C |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2005 | TPM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | OCSM | ● | ● | ● | ○ | 0x000C |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2007 - 2011 | SDARS | ● | ● | ● | ● | 0x0019 |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2008 - 2011 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Ranger / Mazda B-Series / Courier | 2. 3L | DURATEC-HE / I4 | 2010 - 2011 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Ranger / Mazda B-Series / Courier | 2. 3L | OHC | 1995 - 1997 | ABS/TCS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | OHC | 1995 - 1997 | GEM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | OHC | 1995 - 1997 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Ranger / Mazda B-Series / Courier | 2. 3L | OHC | 1995 - 1997 | RAP | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | OHC | 1996 - 1997 | IAB | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | Other | 1996 - 2003 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 2. 3L | Other | 1996 - 2003 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 2. 3L | Other | 1996 - 2003 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 |
| Ranger / Mazda B-Series / Courier | 2. 3L | Other | 2001 | PATS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | Other | 2001 - 2003 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 3L | Other | 2001 - 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Ranger / Mazda B-Series / Courier | 2. 3L | Other | 2001 - 2003 | RCM | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|-----------------|-------------|---------|------------|-------------|-----------|-------------|---|
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | ABS | ● | ● | ● | ● | 0x0008 0x001E 0x00CA |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | ACM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | BCMii | ● | ● | ● | ● | 0x00D5 |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | DDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | HVAC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | IPC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | PDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | RCM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | TCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | DURATEC-HE / I4 | 2011 | TRM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | Other | 1998 | IAB | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | Other | 1998 - 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 2. 5L | Other | 1998 - 2001 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 2. 5L | Other | 1998 - 2001 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 |
| Ranger / Mazda B-Series / Courier | 2. 5L | Other | 1998 - 2001 | RAP | ● | ● | ● | ● | 0x000A |
| Ranger / Mazda B-Series / Courier | 2. 5L | Other | 1999 - 2001 | PATS | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 2. 5L | Other | 1999 - 2001 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 5L | Other | 2001 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 8L | Other | 2001 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 8L | Other | 2001 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 2. 8L | Other | 2001 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 2. 8L | Other | 2001 | PATS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 2. 8L | Other | 2001 | PCM | ● | ● | ● | ● | 0x0009 0x0080 0x0081 0x0082 |
| Ranger / Mazda B-Series / Courier | 2. 8L | Other | 2001 | RAP | ● | ● | ● | ● | 0x000A |
| Ranger / Mazda B-Series / Courier | 2. 8L | Other | 2001 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3. 0L | FFV | 1999 - 2000 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 3. 0L | FFV | 1999 - 2000 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 3. 0L | FFV | 1999 - 2000 | PATS | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 3. 0L | FFV | 1999 - 2000 | PCM | ● | ● | ● | ● | 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Ranger / Mazda B-Series / Courier | 3. 0L | FFV | 1999 - 2000 | RAP | ● | ● | ● | ● | 0x000A |
| Ranger / Mazda B-Series / Courier | 3. 0L | FFV | 1999 - 2000 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3. 0L | Other | 1995 - 2003 | RAP | ● | ● | ● | ● | 0x000A |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|---|-------------|-----------|------------|-------------|-----------|-------------|---|
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1995 - 2007 | GEM | ● | ● | ● | ● | 0x0203 0x000A |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1995 - 2008 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1995 - 2008 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 1999 - 2008 | RCM | ● | ● | ● | ● | 0x000C |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2000 - 2001 | PATS | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2001 - 2008 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2004 - 2008 | IC | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2005 | TPM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2007 - 2008 | OCSM | ● | ● | ● | ○ | 0x000C |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2007 - 2008 | SDARS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.0L | Other | 2008 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ABS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | ACM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | BCMii | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | DDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | HVAC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | IPC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | PDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | RCM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TBM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 3.2L | Duratorq Turbo Diesel Common Rail Injection | 2011 | TRM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1995 - 2002 | ABS/TCS | ● | ● | ● | ● | 0x0008 |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1995 - 2002 | GEM | ● | ● | ● | ● | 0x0203 |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1995 - 2002 | PCM | ● | ● | ● | ● | 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1995 - 2002 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1996 - 1998 | IAB | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1999 - 2001 | PATS | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 1999 - 2002 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | Other | 2001 - 2002 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 | RAP | ● | ● | ● | ● | 0x000A 0x000F |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 - 2007 | GEM | ● | ● | ● | ● | 0x0203 0x000A |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 - 2009 | ABS/TCS | ● | ● | ● | ● | 0x0008 |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|-----------------------------------|----------|------------|--------------|-----------|------------|-------------|-----------|-------------|---|
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 - 2011 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 - 2011 | PCM | ● | ● | ● | ● | 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2003 - 2011 | RCM | ● | ● | ● | ● | 0x000C |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2004 - 2011 | IC | ● | ● | ● | ● | 0x0009 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2005 | TPM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2007 - 2011 | OCSM | ● | ● | ● | ○ | 0x000C |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2007 - 2011 | SDARS | ● | ● | ● | ● | 0x0019 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2008 - 2011 | GEM / SJB | ● | ● | ● | ● | 0x000A 0x0042 |
| Ranger / Mazda B-Series / Courier | 4.0L | V6 SOHC | 2010 - 2011 | ABS | ● | ● | ● | ● | 0x0008 0x0012 |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | 4X4 | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | ABS/TCS | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | GEM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | IC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 | PCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2004 - 2011 | RCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | ABS | ● | ● | ● | ● | 0x00CA |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | ACM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | BCMii | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | DDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | FCDIM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | HVAC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | IPC | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | PAM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | PDM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | SRM | ● | ● | ● | ○ | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | TBM | ● | ● | ● | ○ | 0x00D1 0x00D2 0x00D3 |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | TCM | ● | ● | ● | ● | ○ |
| Ranger / Mazda B-Series / Courier | Other | Other | 2011 | TRM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | F6A | 1999 - Other | ABS | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | F6A | 1999 - Other | PCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | F6A | 1999 - Other | RCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | F6A-T | 1999 - Other | ABS | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | F6A-T | 1999 - Other | PCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | F6A-T | 1999 - Other | RCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | F6A-T | 1999 - Other | TCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | K6A | 2001 - Other | ABS | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | K6A | 2001 - Other | PCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | K6A | 2001 - Other | RCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | K6A_T | 2001 - Other | ABS | ● | ● | ● | ● | ○ |

| Vehicle | Capacity | EngineType | Year | Module | Read Codes | Erase Codes | Live Data | Active Test | Specil Function |
|--------------------------------|----------|------------|--------------|---------|------------|-------------|-----------|-------------|-----------------------------|
| SCRUM | 660cc | K6A_T | 2001 - Other | PCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | K6A_T | 2001 - Other | RCM | ● | ● | ● | ● | ○ |
| SCRUM | 660cc | K6A_T | 2001 - Other | TCM | ● | ● | ● | ● | ○ |
| SCRUM (2003 / 9 -) | 660cc | K6A | 2003 - Other | ABS | ● | ● | ● | ● | ○ |
| SCRUM (2003 / 9 -) | 660cc | K6A | 2003 - Other | PCM | ● | ● | ● | ● | ○ |
| SCRUM (2003 / 9 -) | 660cc | K6A | 2003 - Other | RCM | ● | ● | ● | ● | ○ |
| SCRUM (2003 / 9 -) | 660cc | K6A_T | 2003 - Other | ABS | ● | ● | ● | ● | ○ |
| SCRUM (2003 / 9 -) | 660cc | K6A_T | 2003 - Other | PCM | ● | ● | ● | ● | ○ |
| SCRUM (2003 / 9 -) | 660cc | K6A_T | 2003 - Other | RCM | ● | ● | ● | ● | ○ |
| SCRUM (2003 / 9 -) | 660cc | K6A_T | 2003 - Other | TCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A | 2005 | ABS | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A | 2005 | PCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A | 2005 | RCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A_T | 2005 | ABS | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A_T | 2005 | PCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A_T | 2005 | RCM | ● | ● | ● | ● | ○ |
| SCRUM (2005 / 9) DG64V / DG64W | 660cc | K6A_T | 2005 | TCM | ● | ● | ● | ● | ○ |
| SENTIA | 3. 0L | JE | 1997 | PCM | ● | ● | ● | ● | ○ |
| SENTIA | 3. 0L | JE_H0 | 1997 | PCM | ● | ● | ● | ● | ○ |
| TITAN DASH | 2. 0L | FE | 2000 - 2002 | PCM | ● | ● | ● | ● | ○ |
| TITAN DASH | 2. 0L | FE | 2002 | TCM | ● | ● | ● | ● | ○ |
| TITAN DASH | 2. 0L | FE LPG | 2002 | PCM | ● | ● | ● | ● | ○ |
| TITAN DASH | 2. 0L | FE LPG | 2002 | TCM | ● | ● | ● | ● | ○ |
| TITAN DASH | 2. 0L | RF-T | 2004 | PCM | ● | ● | ● | ● | 0x0080 0x0081 0x0082 0x0083 |
| TITAN DASH | 2. 0L | RF-T | 2004 | TCM | ● | ● | ● | ● | ○ |
| VX-1 | 1. 4L | K14B | Other | ABS | ● | ● | ● | ○ | 0x0212 |
| VX-1 | 1. 4L | K14B | Other | BCM#1 | ● | ● | ● | ● | ○ |
| XEDOS9 | 2. 0L | KF | 1996 | ABS | ● | ● | ● | ● | ○ |
| XEDOS9 | 2. 3L | KJ | 1996 - 1998 | ABS | ● | ● | ● | ● | ○ |
| XEDOS9 | 2. 5L | KL | 1996 - 2000 | ABS | ● | ● | ● | ● | ○ |
| XEDOS9 | 2. 5L | KL | 2000 | ABS/TCS | ● | ● | ● | ● | ○ |
| XEDOS9 | 2. 5L | KL | 2000 | PCM | ● | ● | ● | ● | ○ |

Special Function

| Index | Specil Function Name | Index | Specil Function Name |
|-------|--|-------|--|
| 0005 | Programmable Module Installation | 0006 | Module Reprogramming |
| 0007 | Programmable Parameters | 0008 | ABS Service Bleed |
| 0009 | PATS Functions | 000A | Remote Keyless Entry |
| 000B | G Sensor Calibration | 000C | Passenger System Reset |
| 000D | Neutral Position Setting | 000E | Ride Height Calibration |
| 000F | Factory Keyless Entry Code | 0010 | Stop Use of Transmission Adaptive |
| 0011 | Power Seat Calibration | 0012 | IVD Initialization Sequence |
| 0013 | Pneumatic Test | 0014 | Accurate Trim Test |
| 0015 | Passenger Zero Seat Weight Test | 0016 | Microphone Test |
| 0017 | Audio Speaker Walkaround Test | 0018 | Infotainment Display Test |
| 0019 | Tones Test | 001A | TPMS Functions |
| 001B | Zero Speed Test | 001C | Rear Tones Test |
| 001D | Monotones Test | 001E | Sensor Initialization |
| 001F | EPB calibration. | 0020 | EATC Operation Check |
| 0021 | Rain Sensor Reset | 0022 | LPSDM and RPSDM Service Function |
| 0023 | Power Balance | 0024 | EVAP Test |
| 0025 | Reset PCM KAM | 0026 | OBDII Modes |
| 0027 | Clear Transmission Adaptive Learning | 0028 | Clear Transmission Adaptive Tables |
| 0029 | Configure All Three Sensors Together. | 002A | Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors. |
| 002B | Configure the lateral acceleration sensor. | 002C | Configure the pressure sensor. |
| 002D | FFH SelfTest and Prefill Utility | 002E | FFH Start Heater Utility |
| 002F | FFH Unlock Utility | 0030 | Auxiliary vehicle ID reset |
| 0031 | Halt Transmission Adaptive Learning | 0032 | Headlamp Alignment |
| 0033 | Resume Transmission Adaptive Learning | 0034 | Resume Transmission Adaptive Tables |
| 0035 | Keyfob Training | 0036 | Transmission |
| 0037 | Transmission Learning | 0038 | Transmission Solenoid Body IDN |
| 0039 | VSM Service Functions | 003A | A/C Test |
| 003B | ACM | 003C | ACM Security Bypass Test |
| 003D | Air/Fuel Learning | 003E | AM Antenna Reception Sensitivity Test |
| 003F | ASM Service Functions | 0040 | audio configuration |
| 0041 | Auto Leveling Sensor Re-zero Procedure | 0042 | Tire Pressure Monitoring System |
| 0043 | BSM Radar Test | 0044 | Button Test |
| 0045 | CAN Bus Fault Test | 0046 | CCM Calibration |
| 0047 | Clear EGR Adaptive Tables | 0048 | Clear Fuel Injector&HP Pump Adaptive Table |
| 0050 | Clearing of Learning Value | 0051 | Component/Parameter Reset |
| 0053 | Configure the steering angle sensor | 0054 | Configure the yaw rate sensor |
| 0055 | DATA Reset | 0056 | DPF |
| 0057 | DPF Component Parameter | 0058 | DPF Manual Regeneration |
| 0059 | DPF Parameter Reset | 005A | Electronic Throttle Control |
| 005B | EPS Steering Angle Calibration | 005C | ETB/EGR Initialization |
| 005D | FACM | 005E | FFH Operation Check |
| 005F | Gauge Test | 0060 | ICCM Aiming Adjustment |
| 0061 | Illumination Test | 0062 | Input and Data Test |
| 0063 | Interior Scan Test | 0064 | Keyless Entry Keypad Code Reset |
| 0065 | Learning | 0066 | Misfire Check |
| 0067 | Misfire Monitor Neutral Profile Correction | 0068 | Module Identification |
| 0069 | Multifunction Output Test | 006A | Network Test |
| 006B | New FACM | 006C | Parking Aid Switch Test |
| 006D | Passenger Seat Weight Sensor ReZero | 006E | Rebalance |
| 006F | Reset the Knock Sensor Learned Values | 0070 | Reset Transmission Tables |
| 0071 | Resetting adaptive values | 0072 | RVM Aiming |
| 0074 | Service Routine | 0075 | Specil Ignition ON |
| 0076 | Steering angle sensor calibration | 0077 | Supplemental Heater test |

| Index | Specil Function Name | Index | Specil Function Name |
|-------|---|-------|---|
| 0080 | Mode 1 Powertrain Data | 0081 | Mode 6 On-Board Test Results |
| 0082 | Mode 8 - On-Board device control | 0083 | Mode 9 - Vehicle Information |
| 0084 | OBD Drive Cycle | 0085 | Service Functions |
| 0090 | Diesel Particulate Filter Static Regeneration | 0091 | DPF Regeneration Suspension |
| 0092 | Fuel Injector Correction Factors | 0093 | IQA |
| 0094 | Refill the FAT. | 0095 | Relearn Vehicle Data |
| 0096 | Reset Charge Air Cooler Bypass Valve Position | 0097 | Reset the Cooling Fan Motor Learned Values |
| 0098 | Reset the Diesel Particulate Filter Learned | 0099 | Reset the Exhaust Gas Recirculation Valve Learned |
| 009A | Reset the Intake Air Throttle Valve Learned | 009B | Reset / Clear Specified Function |
| 009C | SCR Dosing Measurement Test | 009D | SCR Parameter Reset |
| 009E | SCR System Emptying | 009F | SCR System Refill Activation |
| 00A0 | SCR Visual Leak Check | 00A1 | System Prime |
| 00A2 | WIF Reset | 00A3 | DPF Reset |
| 00A4 | Enter the Fuel Injector Default Count Value | 00A5 | Clutch Switch Learn |
| 00A6 | Engine Oil Quality History | 00A7 | Fuel Injection Pump Learn |
| 00A8 | Fuel Injector Pilot Correction Learn | 00A9 | Fuel System Leak Test |
| 00AA | Initialize the Exhaust Gas Related Component. | 00AB | Reset Differential Pressure Sensor Learned Values |
| 00AC | Reset KAM | 00AD | Reset MAF Sensor Drift. |
| 00AE | Reset MAF Sensor Offset. | 00AF | Reset the air conditioning compressor learned values. |
| 00B0 | Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values | 00B1 | Reset the Exhaust Gas Temperature Value |
| 00B2 | Reset the Fuel Injection Pump Learned Values | 00B3 | Reset the Fuel Injector Learned Values |
| 00B4 | Reset the Fuel Metering Valve Learned Values | 00B5 | Reset the Fuel Pressure Relief Valve Open Count Learned Value |
| 00B6 | Reset the Fuel Pressure Relief Valve Open Duration Learned Value | 00B7 | Reset the Fuel Rail Pressure Sensor Learned Values |
| 00B8 | Reset the Heated Exhaust Gas Oxygen Sensor Learned Values | 00B9 | Reset the Mass Air Flow Sensor Learned Values |
| 00BA | Reset the Neutral Gear Position Learned Value | 00BB | Reset the oil change indicator. |
| 00BC | Reset the Powertrain Control Module Learned | 00BD | Reset the Turbocharger Learned Values. |
| 00BE | Reset the Turbocharger Variable Vane Actuator Learned Values | 00BF | Reset the Turbocharger Variable Vane Position Sensor Learned Values |
| 00C0 | Reset the Vehicle Speed Limit | 00C1 | Reset the water in fuel Warning Indicator. |
| 00C2 | rpm Controller | 00C3 | Stop-Start Activation |
| 00C4 | Speed Limiting | 00C5 | TR sensor |
| 00C6 | Transmission Fluid Level Test | 00C7 | Automatic Transmission PRNDL Display Test |
| 00CA | ABS reset and configuration. | 00CB | PDC Reset |
| 00CC | Steering Wheel Position Sensor Calibration | 00CD | Preliminary Checks |
| 00CE | Reset TCM KAM | 00CF | Fuel System Prime |
| 00D0 | Remote Start | 00D1 | TBM SIM RAV_ID |
| 00D2 | Reset TBM Password | 00D3 | TBM Transit Mode |
| 00D4 | CEI Lock Configuration | 00D5 | BMS Reset |
| 00D6 | Navigation | 00D7 | Calibrate Steering Angle Sensor |
| 00D8 | Configure the steering column assembly. | 00D9 | Configure the longitudinal acceleration sensor. |
| 00DA | Configure the intermediate shaft. | 00DB | Module Initialization |
| 00DC | Pull Drift Compensation | 00DD | Calibrate Longitudinal Acceleration Sensor |
| 00DE | Inhibit longitudinal accelerometer monitoring | 00DF | Pull Drift Compensation enable/disable |
| 00E0 | Straight Ahead Adaption Angle Reset | 00E1 | Steering Rack Limiter Configuration |
| 00E2 | Pressure Sensor Calibration | 00E3 | Reset Pressure Sensor Offset |
| 00E4 | Enable/Disable hill launch assist . | 00E5 | Camera Alignment |
| 00E6 | Shift fork system learn. | 00E7 | Reset the High Pressure Fuel System Learned Values |
| 00E8 | BleedMASTER | 00E9 | FCDIM Keycode Reset |
| 00EA | Beltminder Enable/Disable | 00EB | TPMS reset. |
| 00EC | TPMS reset after ABS module replacement | 00ED | Show GEM configuration |
| 00EE | EPB | 00EF | Clear crash data memory. |
| 00F0 | Passenger Airbag Deactivation Switch | 00F1 | Component checks |
| 00F2 | Driver's Seat Module | 00F3 | Assembly Check |
| 00F4 | Inclination Sensor Calibration | 00F5 | Maintenance mode |
| 00F6 | Static Apply | 00F7 | Clear stored clutch engagement point |

| Index | Specil Function Name | Index | Specil Function Name |
|-------|--|-------|---|
| 00F8 | Module Configuration | 00F9 | CCMii Sensor Alignment |
| 00FA | Track Key Configuration | 00FB | Driver Window Motor Test. |
| 00FC | Passenger Window Motor Test | 00FD | Clear Self-learning Data |
| 00FE | RVC Configuration | 00FF | Special Function |
| 0100 | Disable GDM VIN | 0101 | WMM Calibration |
| 0102 | RCM | 0103 | Cooling Fan Test |
| 0104 | IAC System Test | 0105 | VCT System Test |
| 0106 | A/C Test | 0107 | MAF Sensor / TP Sensor Dynamic Test |
| 0108 | ATC Barcode Entry | 0109 | ISM Configuration |
| 010A | Valve Calibration | 010B | TP Sweep Test |
| 010C | ICP Sensor Test | 010D | Oil Aeration Test |
| 010E | Exhaust System Test | 010F | MAF Sensor Contamination Test |
| 0110 | EGR System Flow Test | 0111 | Neutral Tow Function |
| 0112 | LIN New Module Initialization | 0113 | Tachometer |
| 0114 | Camshaft Position Reference Adaption Learn | 0115 | Powertrain Control Module Central Car Configuration |
| 0116 | Powertrain Control Module (PCM) One Touch Start Configuration | 0117 | TCM Adaptive Learning |
| 0118 | On-demand lock test routine | 0119 | Rear Brake Adjustment |
| 011A | ACM Configuration | 011B | BCMii |
| 011C | Car Mod | 011D | SPRM Configuration |
| 011E | EPAS Configuration | 011F | Learn the vehicle variant and VIN data |
| 0120 | Burglar Service Functions | 0121 | The removal and installation of the selector lever or the selector lever cable. |
| 0122 | Transmission fluid drain and refill. | 0123 | The installation of a new TCM. |
| 0124 | The installation of a new automatic transmission with a new TCM. | 0125 | The installation of a new automatic transmission with the original TCM. |
| 0126 | Reset the Transmission Control Module Learned | 0127 | Reset the Transmission Oil learned Values |
| 0128 | Transmission Range Sensor Learn | 0129 | Read the ECU serial number. |
| 012A | RCM Calibration | 012B | Reset maintenance lamp |
| 012C | Special Ignition ON | 012D | IC Service Functions |
| 012E | A/F (Fuel Ratio) | 012F | Reset Expansion ID |
| 0130 | Reset security ID | 0131 | Lockout Mode Reset |
| 0132 | Sensor Learn Routine | 0133 | Ambient Air Temp Sensor Configuration |
| 0134 | Touchscreen | 0135 | Variant and VIN Data Learning Procedure |
| 0136 | Neutral Position Learning | 0137 | Clear Grade Sensor Learning Value |
| 0138 | Clear Oil Pressure Sensor Learning Value | 0139 | Grade Sensor Learning |
| 013A | Oil Pressure Sensor Learning | 013B | Fuel System Vaporizer Prime |
| 013C | Reset SOBDM-C KAM | 013D | Power Liftgate Initialization |
| 013E | LDWS Camera Alignment | 013F | SWS calibration |
| 0140 | Driver side | 0141 | Passenger side |
| 0142 | Auto Leveling Sensor | 0143 | Automatic 4 wheel drive |
| 0144 | Clear Learning Value | 0145 | CVT Learning Value Setting |
| 0146 | Headlight Zero-set | 0147 | Height Sensor Initial Setting |
| 0148 | Maintenance Information | 0149 | Reset Supply Pump Learned Values |
| 014A | Slope sensor initialization | 014B | Starter Driving Counter |
| 014C | FFH Fuel Priming | 014D | Urea Injector Test |
| 014E | Urea Pump Test | 0150 | PCM Service Functions |
| 0151 | ABD Initialization | 0152 | Tire Size Configuration |
| 0153 | Workshop test | 0154 | PROXI Alignment |
| 0155 | AFS | 0156 | HID_HEADLAMPS |
| 0157 | Air Bleed for Electric Oil Pump | 0158 | Clutch System Test |
| 0159 | CVT Slope Sensor Calibration | 015B | High Voltage (HV) De-energise Tool |
| 015C | Injector ID code | 0201 | Mazda Vehicle Check-up |
| 0202 | Spark Duration PIDs | 0203 | Windshield Wiper Test |
| 0204 | Rear Window Wiper Test | 0205 | Cooling System Degas |
| 0206 | PAD Switch | 0207 | Enable Heated Screens |
| 0208 | Reader Aiming | 0209 | System Initialize |
| 020A | Diesel Particulate Filter Dynamic Regeneration | 020B | Coupling Calibration Data Writing |

| Index | Specil Function Name | Index | Specil Function Name |
|-------|---|-------|---|
| 020C | Apply and Release Test | 020D | RF KeyPad Learn Process |
| 020E | FSC Aiming | 020F | TPMS Sensor Training Mode |
| 0210 | Police Vehicle Top Speed Limit | 0211 | Maintenance revision status |
| 0212 | Hydraulic control test | 0213 | ABS |
| F001 | Audio | F002 | Battery saver |
| F003 | Body Type | F004 | Courtesy Lamp |
| F005 | Door Trigger Disable Mode | F006 | Body and Fuel Type |
| F007 | Hazard Warning | F008 | Horn Warning |
| F009 | Master Door Trigger Disable Mode | F00A | Panic Alarm |
| F00B | Police Mode | F00C | Traction control system |
| F00D | Autolamp Off Setting | F00E | Autolamp On Setting |
| F00F | Police Speedometer Offset | F010 | Cabin Temperature Sensor Calibration Factor |
| F011 | Taxi Mode | F012 | Low Coolant Warning |
| F013 | Parking Brake Warning | F014 | Headlamp Delay Door Open |
| F015 | Headlamp Delay Ignition Off | F016 | Headlamp Delay Remote Lock Pressed |
| F017 | Dynamic Stability Control | F018 | Hill Descent Control LED |
| F019 | Brake System Configuration | F01A | BPM fitted |
| F01B | Camera fitted | F01C | Audio Interface Module |
| F01D | Sonar fitted | F01E | Navigation System |
| F01F | Parking Aid Module | F020 | Odometer Write |
| F021 | Subwoofer | F022 | Driver Beltminder Status |
| F023 | Alarm | F024 | Audio Configure |
| F025 | Autolocking While The Vehicle Is Moving | F026 | Module Reset |
| F027 | BeltMinder | F028 | Electrical Auxiliary Heater Chimes |
| F029 | Power Steering Status | F02A | Repeat flasher |
| F02B | Autolock/Relock Configuration Status | F02C | Autolocking Customer setting |
| F02D | Double Locking With REMOTE | F02E | Power Lock Configuration |
| F02F | Single Door Unlocking Using The REMOTE | F030 | Tailgate Release REMOTE Button |
| F031 | PAD Switch | F032 | Speed Control |
| F033 | Ambient Temperature Sensor Conformation | F034 | Heated Screen(s) active during warm up |
| F035 | Power Sunroof Or Taxi Meter Fitted | F036 | Deflation Detection System |
| F037 | Baseplate | F038 | Select seat trim type. |
| F039 | Select Vehicle Type | F03A | Repeat flasher |
| F03B | Internal Remote Receiver | F03C | Lock confirmation flash |
| F03D | Alarm system | F03E | Wash Fluid Sensor |
| F03F | Select Engine Type | F040 | Reverse Warning Chime |
| F041 | Easy Entry / Exit | F042 | Daytime Running Lamps |
| F043 | Turn Signal Warning Chime | F044 | Autolock |
| F045 | Horn Chirp | F046 | Tire Size (rev / mile) |
| F047 | TBM Transit Mode | F048 | Perimeter Lighting |
| F049 | Stop and taillamp outage configuration | F04A | Overspeed Warning Indicator |
| F04B | Autolock Configuration Status | F04C | Auto unlock |
| F04D | Language | F04E | Headlight Battery Saver Timeout |
| F04F | Heated Backlight | F050 | Front Foglamps |
| F051 | Headlamp Type | F052 | Button Press Chime |
| F053 | Not in Park Chime | F054 | Oil Life |
| F055 | Parking Brake Chime | F056 | Central Unlock via Key Cylinder |
| F057 | Two Stage Unlocking | F058 | Power Door Lock Inhibit |
| F059 | Perimeter Alarm | F05A | Satellite Digital Audio Receiver System |
| F05B | Autolamp | F05C | Fog Lamp |
| F05D | Passenger Beltminder Status | F05E | Keypad Configure |
| F05F | Remote Panic | F060 | Remote Keyless Entry |
| F061 | Remote open/close signal | F062 | Cellular Phone Module |
| F063 | Radio Clock | F064 | Divider Bar\$I |
| F065 | Welcome illumination | F066 | Battery saver function |
| F067 | Speedometer Accuracy Bias | F068 | Dark car |
| F069 | Horn Chirp Configuration Status | F06A | Smart Unlock |

| Index | Specil Function Name | Index | Specil Function Name |
|-------|--|-------|--|
| F06B | Fuel Economy Display Mode | F06C | Power Adjustable Pedals |
| F06D | Power Seat Recline | F06E | Fuel Gallon Configuration |
| F06F | Power Mirrors | F070 | High cool blower voltage |
| F071 | Outside Air Temperature | F072 | Oil Life Status and Warning |
| F073 | Telephone | F074 | Driver Seat Recline Memory Function |
| F075 | Pedal Memory Function | F076 | Screen Display-Brand |
| F077 | Flex Fuel | F078 | APIM |
| F079 | Steering wheel control | F07A | Auxiliary Jack |
| F07B | SWC POD type | F07C | Two-way front speakers |
| F07D | Two-way rear speakers | F07E | Trailer Brake Control Module |
| F07F | Family Entertainment System | F080 | Mirror Turn Signals |
| F081 | Vehicle Door Configuration | F082 | Fuel Tank Configuration |
| F083 | Fuel Tank Size | F084 | Rear Tire Size (Rev/Mile) |
| F085 | Trim Switch Inhibit | F086 | Fob panic activation |
| F087 | Tilt-Telescope Steering Wheel | F088 | Autolamp Delay Time |
| F089 | Global Close | F08A | Global Open |
| F08B | Auto Lock | F08C | Security Horn Alarm |
| F08D | Illuminated Exit | F08E | ABS Tire Warning |
| F08F | Sliding Door Caution | F090 | Smart Lock |
| F091 | Horn | F092 | Outside Air Temperature Display |
| F093 | Answer Back Buzzer | F094 | Automatic Locks |
| F095 | Card Key Battery Low Warning | F096 | Two(2) stage door unlocking by request switch. |
| F097 | Two(2) stage door unlocking by transmitter. | F098 | Auto relock timer (with AKE) |
| F099 | (PCM) Oil Life Used | F09A | GCC vehicle |
| F09B | Accessory Protocol Interface Module | F09C | Tuner setting |
| F09D | Smart Rear Wipe | F09E | Drip Wipe |
| F09F | Safety Belt Warning | FOA0 | Hazzard Warning Switch |
| FOA1 | Global Closing With REMOTE | FOA2 | Tailgate release available when ignition on |
| FOA3 | Select the type of liftgate striker plate fitted | FOA4 | Reset Alarm System Via Key |
| FOA5 | One-touch-up window function fitted | FOA6 | Auto high beam sensitivity |
| FOA7 | Unlock sequence | FOA8 | Daytime dimming rate setting |
| FOA9 | Fuel logic | FOAA | Fuel Meter Response Setting |
| FOAB | Voice Recognition Module | FOAC | Door ajar |
| FOAD | Cargo Unlock Setting | FOAE | General Unlock Setting |
| FOAF | Rear Door Reverse Cycling | FOB0 | Mirror Puddle Lamps |
| FOB1 | RHT Buzzer | FOB2 | Electronic-Controlled Power Steering |
| FOB3 | Heated windshield | FOB4 | Speed dependent wiper function |
| FOB5 | Audio Repeater Display | FOB6 | Power Folding Mirrors |
| FOB7 | Approach Lamps | FOB8 | Key Out Apply |