

# MaxiSYS\_SsangYong\_V1.00 Function List (Note:For reference only)

## NOTES:

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported.              ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Area	Vehicle Type	System Name	syssubitemdesc	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
General	MUSSO	ECM	2.3 MSE/RATIO	●	●	●	●	●	0037
General	MUSSO	ECM	3.2 MSE/RATIO	●	●	●	●	●	0037
General	MUSSO	TCM	BTRA 4	●	●	●	●	○	0039
General	MUSSO	TCM	BTR BOSCH	●	●	●	●	○	
General	MUSSO	ABS	ABS 5.0	●	●	●	●	●	
General	MUSSO	ABS	ABS-ABD 5.0	●	●	●	●	●	
General	MUSSO	ABS	ABS-EBD 5.3	●	●	●	●	●	
General	MUSSO	ABS	ABD-EBD 5.3	●	●	●	●	●	
General	MUSSO	ABS	ABS 5.3(Running Change)	●	●	●	●	●	
General	MUSSO	ECS	ALL	●	●	●	●	●	
General	MUSSO	AIRBAG	ALL	○	●	●	○	○	
General	MUSSO	TOD	ALL	○	●	●	○	○	
General	MUSSO	TCCU(P/T)	ALL	●	○	○	○	○	0008, 0051
General	MUSSO	Huber EGR	ALL	●	●	●	○	○	0041, 0043, 0045
General	KORANDO	ECM	2.3 MSE/RATIO	●	●	●	●	●	0037
General	KORANDO	ECM	3.2 MSE/RATIO	●	●	●	●	●	0037
General	KORANDO	TCM	BTRA 4	●	●	●	●	○	0039
General	KORANDO	TCM	BTR BOSCH	●	●	●	●	○	
General	KORANDO	ABS	ABS 5.0	●	●	●	●	●	
General	KORANDO	ABS	ABS-ABD 5.0	●	●	●	●	●	
General	KORANDO	ABS	ABS-EBD 5.3	●	●	●	●	●	
General	KORANDO	ABS	ABD-EBD 5.3	●	●	●	●	●	
General	KORANDO	ABS	ABS 5.3(Running Change)	●	●	●	●	●	
General	KORANDO	ECS	ALL	●	●	●	●	●	
General	KORANDO	AIRBAG	ALL	○	●	●	○	○	
General	KORANDO	TOD	ALL	○	●	●	○	○	
General	KORANDO	TCCU(P/T)	ALL	●	○	○	○	○	0008, 0051
General	KORANDO	Huber EGR	ALL	●	●	●	○	○	0041, 0043, 0045
General	ISTANA	ECM	2.3 MSE/RATIO	●	●	●	●	●	0037
General	ISTANA	ABS	ABS 5.0 Free Running	●	●	●	●	●	
General	ISTANA	ABS	ABS(TEVES)	●	●	●	●	●	0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031
General	CHAIRMAN	ECM	3.6 BOSCH	●	●	●	●	●	0037
General	CHAIRMAN	ECM	3.2 DOHC BOSCH	●	●	●	●	●	

Area	Vehicle Type	System Name	syssubitemdesc	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
General	CHAIRMAN	ECM	2. 3 MSE/RATIO	●	●	●	●	●	0037
General	CHAIRMAN	ECM	2. 8 MSE/RATIO	●	●	●	●	●	0037
General	CHAIRMAN	ECM	3. 2 MSE/RATIO	●	●	●	●	●	0037
General	CHAIRMAN	TCM	BTRA 4	●	●	●	●	○	0039
General	CHAIRMAN	TCM	NAG 5 A/T	○	●	●	○	○	
General	CHAIRMAN	TCM	DC 5 A/T	●	●	●	●	○	0004, 0006
General	CHAIRMAN	ABS	ABS 5. 3(Running Change)	●	●	●	●	●	
General	CHAIRMAN	ABS	ABD 5. 3	●	●	●	●	●	
General	CHAIRMAN	ABS	ASR 5. 3	●	●	●	●	●	
General	CHAIRMAN	ABS	TEVES (ABS/ESP)	●	●	●	●	●	0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031
General	CHAIRMAN	ABS	TEVES (ABS)	●	●	●	●	●	0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031
General	CHAIRMAN	ECS	VDO	●	●	●	●	○	
General	CHAIRMAN	ECS	SACHS	●	●	●	●	○	
General	CHAIRMAN	AIRBAG	BOSCH	○	●	●	○	○	
General	CHAIRMAN	AIRBAG	BOSCH	○	●	●	○	○	
General	CHAIRMAN	AIRBAG	SRE-NCS	○	●	●	○	○	
General	CHAIRMAN	Power Trank	CHAIRMAN ALL	●	●	●	○	○	
General	CHAIRMAN	TPMS	CHAIRMAN ALL	●	●	●	●	○	
General	CHAIRMAN	Dual Rekes	CHAIRMAN ALL	○	●	●	○	○	
General	CHAIRMAN	IMMOBILIZER	GASOLINE	○	○	○	○	○	0008, 0051
General	CHAIRMAN	IMMOBILIZER	DIESEL	○	○	○	○	○	0012, 0010
General	REXTON	ECM	2. 3 MSE	●	●	●	●	●	0037
General	REXTON	ECM	2. 8 MSE	●	●	●	●	●	0037
General	REXTON	ECM	3. 2 MSE	●	●	●	●	●	0037
General	REXTON	ECM	DSL 2. 7 (C2I)	●	●	●	●	●	0033, 0035, 0047, 0049
General	REXTON	ECM	DSL 2. 7 (C3I)	●	●	●	●	●	0014, 0018, 0020
General	REXTON	TCM	BTRA 4	●	●	●	●	○	0039
General	REXTON	TCM	DC 5 A/T	●	●	●	●	○	0004, 0006
General	REXTON	ABS	TEVES (ABS/ESP)	●	●	●	●	●	0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031
General	REXTON	ABS	Bosch	●	●	●	●	●	0001, 0005, 0007, 0009
General	REXTON	AIRBAG	SRE-NCS	○	●	●	○	○	
General	REXTON	AIRBAG	SRE-SMART	●	●	●	○	○	
General	REXTON	TOD	OLD	○	●	●	○	○	
General	REXTON	TOD	NEW	○	●	●	●	○	
General	REXTON	TCCU	OLD	●	○	○	○	○	0008, 0051
General	REXTON	TCCU	NEW	●	●	●	●	○	
General	REXTON	Huber EGR	All	●	●	●	○	○	0041, 0043, 0045
General	REXTON	SSPS	All	●	●	●	○	○	
General	REXTON	TPMS	All	●	●	●	●	○	
General	REXTON	TGS Lever	All	●	●	●	○	○	

Area	Vehicle Type	System Name	syssubitemdesc	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
General	REXTON	IMMOBILIZER	GASOLINE	○	○	○	○	○	0008, 0051
General	REXTON	IMMOBILIZER	DIESEL	○	○	○	○	○	0012, 0010
General	RODIUS/STAVIC	ECM	DSL D27DT (C2I)	●	●	●	●	●	0014, 0018, 0020
General	RODIUS/STAVIC	ECM	DSL D27DT (C2I)	●	●	●	●	●	0033, 0035, 0047, 0049
General	RODIUS/STAVIC	ECM	DSL D27DT (C3I)	●	●	●	●	●	0014, 0018, 0020
General	RODIUS/STAVIC	ECM	DSL D27DT (C3I)	●	●	●	●	●	0033, 0035, 0047, 0049
General	RODIUS/STAVIC	ECM	3. 2 MSE/RATIO	●	●	●	●	●	0037
General	RODIUS/STAVIC	TCM	DC 5 A/T	●	●	●	●		0004, 0006
General	RODIUS/STAVIC	ABS	TEVES (ABS/ESP)	●	●	●	●	●	0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031
General	RODIUS/STAVIC	AIRBAG	SRE-SMART	●	●	●	○	○	
General	RODIUS/STAVIC	TOD	NEW		●	●	●	○	
General	RODIUS/STAVIC	TCCU	NEW	●	●	●	●	○	
General	RODIUS/STAVIC	TGS Lever	All	●	●	●	○	○	
General	RODIUS/STAVIC	IMMOBILIZER	GASOLINE	○	○	○	○	○	0008, 0051
General	RODIUS/STAVIC	IMMOBILIZER	DIESEL	○	○	○	○	○	0012, 0010
General	KYRON	ECM	2. 3 MSE	●	●	●	●	●	0037
General	KYRON	ECM	3. 2 MSE	●	●	●	●	●	0037
General	KYRON	ECM	DSL 2. 0 (C2I)	●	●	●	●	●	0033, 0035, 0002, 0049
General	KYRON	ECM	DSL 2. 0 (C3I)	●	●	●	●	●	0016, 0018, 0020
General	KYRON	ECM	DSL 2. 7 (C2I)	●	●	●	●	●	0033, 0035, 0047, 0049
General	KYRON	ECM	DSL 2. 7 (C3I)	●	●	●	●	●	0014, 0018, 0020
General	KYRON	TCM	BTRA 4	●	●	●	●	○	0039
General	KYRON	TCM	DC 5 A/T	●	●	●	●	○	0004, 0006
General	KYRON	ABS	TEVES (ABS/ESP)	●	●	●	●	●	0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031
General	KYRON	AIRBAG	SRE-SMART	●	●	●	○	○	
General	KYRON	TCCU	ALL	●	●	●	●	○	
General	KYRON	SSPS	ALL	●	●	●	○	○	
General	KYRON	TGS Lever	ALL	●	●	●	○	○	
General	KYRON	IMMOBILIZER	GASOLINE	○	○	○	○	○	0008, 0051
General	KYRON	IMMOBILIZER	DIESEL	○	○	○	○	○	0012, 0010
General	ACTYON	ECM	2. 3 MSE	●	●	●	●	●	0037
General	ACTYON	ECM	DSL 2. 0 (C2I)	●	●	●	●	●	0033, 0035, 0002, 0049
General	ACTYON	ECM	DSL 2. 0 (C3I)	●	●	●	●	●	0016, 0018, 0020
General	ACTYON	TCM	BTRA 4	●	●	●	●	○	0039
General	ACTYON	TCM	DC 5 A/T	●	●	●	●	○	0004, 0006
General	ACTYON	ABS	TEVES (ABS/ESP)	●	●	●	●	●	0011, 0013, 0015, 0017, 0019, 0021, 0023, 0025, 0027, 0029, 0031
General	ACTYON	AIRBAG	SRE-SMART	●	●	●	○	○	
General	ACTYON	TCCU	ALL	●	●	●	●	○	
General	ACTYON	SSPS	ALL	●	●	●	○	○	
General	ACTYON	IMMOBILIZER	GASOLINE	○	○	○	○	○	0008, 0051

Area	Vehicle Type	System Name	syssubitemdesc	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
General	ACTYON	IMMOBILIZER	DIESEL	○	○	○	○	○	0012, 0010
General	KORANDO C	ECM	ALL	●	●	●	●	●	0032, 0034, 0036, 0038, 0040, 0042, 0044, 0046, 0048
General	KORANDO C	TCM	ALL	○	●	●	●	○	0028, 0030
General	KORANDO C	ABS/ESP	ALL	●	●	●	●	●	0024, 0026, 0050
General	KORANDO C	E-Coupling	ALL	●	●	●	●	○	
General	KORANDO C	EPS	ALL	●	●	●	●	○	0022
General	KORANDO C	BCM	ALL	●	●	●	●	○	
General	KORANDO C	SKM	ALL	●	○	○	●	○	

## Special\_Function

Index	Special Function Name	Index	Special Function Name
0001	Air Bleeding	0002	Injector Coding
0003	Rear right line Air Bleeding(RR)	0004	Reset Adaption
0005	Rear left line Air Bleeding(LR)	0006	Read and Write Adaption
0007	Front left line Air Bleeding(LF)	0008	Finger Data
0009	Front right line Air Bleeding(RF)	0010	Key Coding
0011	Select Sensor Reset Item	0012	Key Coding Status
0013	Pitch G-Sensor (4WD only)	0014	C3I 5 Injector Corrections
0015	Yaw G-sensor	0016	C3I 4 Injector Corrections
0017	Pressure Sensor	0018	Engine Variant Coding
0019	All listed sensors	0020	Chassis Variant Coding
0021	CLEAR VARIANT CODE	0022	Steering Reset
0023	AIR BLEEDING (TEVES)	0024	Coding Erase
0025	Air Bleeding (TEVES) Rear right line	0026	Longitudinal acceleration sensor
0027	Air Bleeding (TEVES) Rear left line	0028	TCU Adaptation Reset
0029	Air Bleeding (TEVES) Front left line	0030	TCU Initial hydraulic calibration
0031	Air Bleeding (TEVES) Front right line	0032	Injector Coding
0033	Leak Detection	0034	Engine Variant Coding
0035	Rail Pressure Reset	0036	Chassis Variant Coding
0037	ECU RESET	0038	EGR Position Relearning
0039	TPS VALUE CLEAR(DIESEL ONLY)	0040	Throttle Position Relearning
0041	Huber EGR VIN Write	0042	Swirl Valve Relearning
0043	Huber EGR Initial	0044	Rail Pressure Initialization
0045	Huber EGR System Reset	0046	O2 Sensor Initialization
0047	Injector Coding	0048	VIN Write
0049	Variant Coding	0050	Air Bleeding
0051	Key Coding		