

MaxiDas_Honda_V5.20 Function List

NOTES:

- This function is supported. ▲ This function is the new feature in this version.
 - This function is not supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Unit	ECU Info.	Read codes	Erase Codes	Live Data	Freeze Data	Active Test	Special Function
PGM-FI	●	●	●	●	●	●	30, 31, 38, 39, 45, 62, 79, 109
DIESEL	●	●	●	●	●	●	02, 29, 37, 53, 54, 55, 52, 61, 79, 86
A/T	●	●	●	●	●	○	13, 26, 27, 48, 60, 70, 85, 91, 92
CVT	●	●	●	●	●	○	21, 22, 50, 91, 93, 94, 95, 96, 100
ABS	●	●	●	●	※	○	06, 12, 63, 66, 68, 72, 99, 105, 111, 112
SRS	●	●	●	●	○	●	69, 103
EPS	●	●	●	●	●		01, 40, 43, 71, 101, 108
POP-UP HOOD	●	●	●	●			113
IMA	●	●	●	●	●		98, 64
IMMOBI	○	○	○	●	○	○	05, 80, 79, 84, 57, 104
KEYLESS ACCESS (RL)	●	●	●	●	○	○	97, 56, 82, 83
EVPS	●	●	●	●	●	○	
CMS	●	●	●	●	●	○	73, 28
ACM	●	●	●	●	●	●	
TPMS	●	●	●	●		○	89, 106
SH-AWD	●	●	●	●	●	○	93, 04, 36, 24, 35, 115, 101, 10, 51
VTM 4	●	●	●	●	●	○	51, 25
LKAS CAMERA	●	●	●	●	●	○	
LKAS CONTROL	●	●	●	●	●	○	102, 33
iNVS	●	●	●	●	●	○	20, 74, 114
Honda Smart Parking	●	●	●	●	●	○	110
Adaptive cruise	●	●	●	●	●	○	03, 09, 16, 17, 18, 19, 28, 47, 49, 59, 73, 107
Hydraulic booster	●	●	●	●	○	○	46, 44, 07
Active Damper System	●	●	●	●	●	○	34
4WS	●	●	●	●	●	●	67, 65, 41, 42, 75, 76
DBW	●	●	●	●	●	●	
ATTS	●	●	●	●	●	○	14, 101, 58, 11
i-SHIFT	●	●	●	●	○	○	
R/C ENG STARTER	○	○	○	○	○	○	104, 78, 77
BODY ELECTRICAL	●	●	●	●		●	
BSI	●	●	●	●		●	
Electric Parking Brake	●	●	●	●			88
MVCS	●	●	●	●		●	15, 08, 32, 33
PCU	●	●	●	●			87
SVT	●	●	●	●		●	90, 81, 23

Special_Function

index	Specil Function Name	index2	Specil Function Name3
01	A/C fan minimum	59	Light check
02	A/F Sensor 1 Learning Clear	60	Lockup solenoid test
03	ACC RELAY	61	MAF Sensor Learning Clear
04	Acceleration Device Test	62	Main Fuel Tank Alcohol Content Write Data
05	Add and Delete Keys	63	Mode Clear
06	All Sensors	64	Motor rotor position calibration
07	Memorizing 0[zero] position	65	NEUTRAL ADJUSTMENT
08	AIMING DATA TRANSFER	66	Neutral Rewrite
09	Alarm buzzer	67	NEUTRAL REWRITING
10	ALL Sensor	68	Neutral Test
11	ALL SENSORS	69	OPDS initialization
12	LF Apply/Dump Solenoid	70	Pressure test assistance mode
13	ATFP motor test	71	PS signal
14	ATTS TEST SHORT TIME MODE	72	Pulser test
15	AUTO MULTI CAMERA AIMING	73	Radar aiming
16	BRAKE ACTUATOR 3	74	Read camera parameters
17	Brake booster 1	75	REAR MAIN SENSOR NEUTRAL CHECK
18	Brake booster 2	76	REAR SUB SENSOR NEUTRAL CHECK
19	Buzzer check	77	REGISTER NEW TRANSMITTER
20	Camera aiming	78	REGISTER REMOTE CONTROL ENGINE STARTER UNIT
21	CAS solenoid A (LF)	79	Replace ECM/PCM
22	CAS solenoid B (RF)	80	Replace Immobilizer Receiver/Control Unit
23	Change Mode	81	Replace internal Battery
24	Clutch Coil Test	82	Replace Keyless Access ECU
25	Left Clutch electromagnetic coil test	83	Replace Knob ignition
26	Clutch pressure control (Linear) Solenoid Valve A	84	Replace MPCS/MICU/IMOES
27	Clutch pressure control solenoid valve control	85	REPLACE PCM/TCM
28	CMBS brake	86	Reset \"Calculated PM Value\"
29	Compression test	87	Self Check
30	CRANK (CKP) PATTERN CLEAR	88	Sensor Calibration
31	CRANK (CKP) PATTERN LEARNING	89	Sensor ID Learning
32	Set all customization data to default	90	Set Maintenance Mode
33	Customize	91	Shift lock solenoid test
34	Damper Stroke Calibration	92	Shift solenoid
35	Differential Torque	93	Shift solenoid test
36	Direct electromagnetic clutch Test	94	Shift solenoid Valve A
37	DPF Differential pressure sensor initial learn	95	Shift solenoid Valve B
38	ECM/PCM Reset	96	Shift solenoid valve O/P
39	ETCS (TAC) TEST	97	Smart information
40	Frequency change	98	SOC REWRITE
41	FRONT MAIN SENSOR NEUTRAL CHECK	99	Left front solenoid
42	FRONT SUB SENSOR NEUTRAL CHECK	100	Start clutch feedback learn
43	Gear ratio sensor	101	Steering angle sensor
44	Hydraulic booster CAS	102	Steering rewrite
45	IDLE ADJUST	103	SWS initialization
46	Increasing Master Cylinder pressure	104	System Check
47	INDICATOR LIGHT	105	LF TCS Solenoid
48	Indicator test	106	Threshold rewriting
49	Information display	107	Throttle opening angle
50	Inhibitor Solenoid	108	Torque Sensor Learn
51	Initialization	109	TP POSITION CHECK
52	Injector Test	110	Voice guide output test

Special_Function

index	Specil Function Name	index2	Specil Function Name3
53	IQA data status	111	Left Front VSA
54	IQA write data	112	VSA-TCS control valve
55	ISV Forced Learning	113	WARNING DISPLAY FORCE ACTIVATION
56	Keyless Remotes	114	Write camera parameters
57	Keyless Transmitter Registration	115	YAW Rate/Lateral Acceleration Sensor
58	LATERAL G & YAW RATE SENSORS		