

# MaxiDas\_Nissan\_V4.30 Function List

**NOTES:**

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported.              ▲ This function is the new feature in this version.

**As for special function please refer to the special function table.**

Unit	ECU Info.	Read codes	Erase Codes	Freeze Data	Live Data	Active Test	WORK SUPPORT	Other
ABS	●	●	●	※	●	●	※	
TCS	●	●	●	●	●	●	●	
IVMS	●	●	●	●	●	●	●	
CVT	●	●	●	○	●	○	●	CAN DIAG SUPPORT MNTR
ASCD	○	●	○	○	●	○	○	
AIR PRESSURE MONITOR	※	●	○	○	●	※	●	
Active SUS	●	●	●	●	●	●	●	
ACT D/SUS	●	●	●	●	●	●		
4WD	●	●	●	※	●	※	●	
SMART ENTRANCE	○	●	●	※	●	※	●	CAN DIAG SUPPORT MNTR
ICC	●	●	●	※	●	●	●	CAN DIAG SUPPORT MNTR
NATS	○	●	●	○	○	○	○	C/U INITIALIZATION SELF FOUNDATION CHECK
Engine	●	●	●	※	●	●	●	
A/T	●	●	●	※	●	※	●	
S/BLIND CAMERA	●	○	○	○	●	○	●	
REAR VIEW CAMERA	●	○	○	○	●	○	●	
MOTOR ASSIST	○	●	●	○	●	○	●	
HEAD LAMP LEVELIZER	●	●	●	○	●	●	●	
DIFF LOCK	○	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
ALL MODE AWD/4WD	○	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
IPDM	○	●	●	○	●	●		
AIR LEVELIZER	●	●	●	○	●	●	●	
SONAR	●	●	●	○	●	●		
AT	●	●	●	○	●	●	●	CALIBRATION DATA
Airbag	○	●	●	○	○	○	○	READ CODES [PAST] TROUBLE DIAG RECORD ECU DISCRIMINATED NO
PRECRASH SEATBELT	●	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
MULTI AV	※	●	●	○	●	○	○	

# MaxiDas\_Nissan\_V4.30 Function List

**NOTES:**

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported.              ▲ This function is the new feature in this version.

**As for special function please refer to the special function table.**

METER AC AMP	●	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
METER	○	●	●	○	●	○	○	CAN DIAG SUPPORT MNTR
IPDM E/R	○	●	●	○	●	●	○	CAN DIAG SUPPORT MNTR
INTELLIGENT KEY	●	●	●	○	●	●	●	CAN DIAG SUPPORT MNTR
HICAS	●	●	●	○	●	※		CAN DIAG SUPPORT MNTR
EPS	●	●	●	○	●	○	●	CAN DIAG SUPPORT MNTR
E-4WD	●	●	●	※	●	●		CAN DIAG SUPPORT MNTR
DRIVER POSITION	●	●	●	○	●	●	●	CAN DIAG SUPPORT MNTR
BCM	※	●	●	○	●	●	●	CAN DIAG SUPPORT MNTR
AUTO SLIDE DOOR	●	●	●	○	●	●		CAN DIAG SUPPORT MNTR
AFS	●	●	●	○	●	●	●	CAN DIAG SUPPORT MNTR
HVAC	●	●	●	○	●	●	●	
HYBRID SYSTEM	●	●	●	○	●	●		
LDW	●	●	●	○	●	●		CAN DIAG SUPPORT MNTR
AUTO BACK DOOR	○	●	●	○	●	○	○	
OCCUPANT DETECTION	○	○	○	○	○	●	○	
TOTAL ILLUM C/U	●	○	○	○	●	○	●	
CONVERTIBLE ROOF	●	●	●	○	●	●	●	



## Special\_Function

index	Specil Function Name	index2	Specil Function Name3
0001	work support		
0002	CAN DIAG SUPPORT MNTR		
0003	ECU DISCRIMINATED NO"		
0004	C/U INITIALIZATION		
0005	READ CODES [PAST]		
0006	SELF FOUNCTION CHECK"		
0007	CALIBRATION DATA		
0008	TROUBLE DIAG RECORD		