

MaxiDas_SEAT_V6.50 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Control Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function (●)	Special Function (※)
ABS Brakes	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0008, 0009, 000C
Auto Dist. Reg	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Engine	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005, 0008	0006, 0007, 0009
Auto Trans	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Auto HVAC	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Cent. Elect.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Park/Steer Assist	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Airbags	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Steering wheel	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Instruments	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009, 000A
Aux. Heat	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
CAN Gateway	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Engine II	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Engine III	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
AWD	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Immobilizer	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Centr. Locks	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Navigation	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Inter. Monitor	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Central Conv.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Xenon Range	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Radio	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Engine Conjunct.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Diesel pump	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Electric drive	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Battery Regul.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Battery charger	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Clutch	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Differential Locks	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Door Elect, Driver	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009

MaxiDas_SEAT_V6.50 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Control Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function (●)	Special Function (※)
Door Elect, Pass.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Door, Rear Left	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Door, Rear Right	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Braker Booster	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Braker Boost.Assi.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Parking Brake	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009, 000B
Entry Assist, Driver	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Entry Assist, Passenger	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Steering Angle	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009, 000C
Susp. Elect.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Anti Slip	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Level Control	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Steering assistance	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Rear spoiler	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Stabilizers	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Chassis Control	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Acc/Start Auth.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Tire pressure monitoring	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Telematics	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Seat Mem. Pass	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Auto Roof	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Seat Mem. Driver	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Seat, Rear PS	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Parking aid	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Control Head	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Sound system	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
TV-Tuner	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Voice Control	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009

MaxiDas_SEAT_V6.50 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Control Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function (●)	Special Function (※)
Telephone	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
HVAC, Rear	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Roof Electronics	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Seat, Rear, DS	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Auxiliary Fuel Tank	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Wiper Electr.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Left light control	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Right light control	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Auto. Lighting switch	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Towing Protection	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Trailer Function	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Sec. Air Heating	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Active Steering	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0008, 0009
Position Sensing	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Lane Change	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Tire Pressure II	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Lane Maintain	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Back-up Cam.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Sliding Door Left	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Driver Ident.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Intercom	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Special Function	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Data Transfer	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Operations	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Trunk Elect.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Auxiliary Heater	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Media Player 1	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Media Player 2	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Media Player 3	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009

MaxiDas_SEAT_V6.50 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.
- ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Control Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function (●)	Special Function (※)
Media Player 4	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Ctrl Head RR	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Ctrl Head LR	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Ctrl Head Roof	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Ctrl Head Dash	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Digital Radio	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Digital TV	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Centr. Electr. II	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Information Electr.	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Centr. Conv. II	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009
Inform. Electr. II	●	●	●	●	※	●	0001, 0002, 0003, 0004, 0005	0006, 0007, 0009



Special Function

index	Specil Function Name
0001	Coding
0002	Basic Settings
0003	Adaptation
0004	Security Access
0005	AdvancedDataStream
0006	Single Reading
0007	Login CodingII
0008	Readiness
0009	Advanced ID
000A	OilReset
000B	EPB
000C	Steering
000D	Read login password