

# MaxiDas\_Toyota\_V3.31T Function List

## NOTES:

- This function is supported.      ※ This function may be supported, which depends on the actual condition of the vehicle.  
 ○ This function is not supported.    ▲ This function is the new feature in this version.  
 As for special function please refer to the special function table.

System Name	Vehicle Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
SRS Airbag	●	●	●	※	○	○	
BODY	●	●	●	※	○	※	0056 0057
BODY2	●	※	※	※	○	※	
BODY3	●	※	※	※	○	※	
BODY4	●	●	●	●	○	●	
BODY5	●	※	※	●	○	●	
Immobiliser	●	●	●	●	○	※	0023 0051 0052 0053 0027 0028 0007
Tvss	●	●	●	●	○	●	
Entry&Start	●	●	●	●	○	●	0014 0017 0027 0028
Occupant Detection	●	●	●	●	○		0043 0018 0058
D-SEAT SW	●	※	※	●	○	※	
AFS	●	●	●	●	○	●	
Pre-Crash	●	●	●	●	○	●	
D-Door Motor	●	●	●	●	○	●	
Theft Deterrent	●	●	●	●	○	●	0044
Air Conditioner	●	●	●	●	○	●	
Combination Meter	●	※	※	●	○	●	
Back Door	●	●	●	●	○	●	0009
Driver Seat	●			●	○	●	
Tilt&Telescopic	●	●	●	●	●	●	
Mirror	●			●	○	●	
Gateway	●	●	●		○		0024
Passenger Door	●	※	※	●	○	●	
Rear left Door	●	●	●	●	○	●	
Rear right door	●	●	●	●	○	●	
Sliding Roof	●	※	※	●	○	●	
Driver Door	●	※	※	●	○	●	
Master Switch	●	●	●	●	○	※	
Rear Right Seat	●	※	※	●	○	●	

# MaxiDas\_Toyota\_V3.31T Function List

## NOTES:

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.  
 ○ This function is not supported.            ▲ This function is the new feature in this version.  
 As for special function please refer to the special function table.

System Name	Vehicle Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
Rear Left Seat	●	※	※	●	○	●	
Rear Seat Switch	●			●	○	○	
Steering Pad Switch	●			●	○	○	
Clearance Sonar	●	●	●	●	○	●	
Rain Sensor	●	※	※	●	○	○	
Wiper	●			●	○	●	
Combination Switch	●			●	○	○	
Steering Lock	●	●	●	●	○	●	0017 0029 0030 0051 0052
Passenger Seat	●			●	○	●	
Retractable Hardtop	●	●	●	●	○	○	
Main Body	●	●	●	●	○	●	0056 0057 0024
P-Door Motor	●	●	●	●	○	●	
RL-Door Motor	●	●	●	●	○	●	
RR-Door Motor	●	●	●	●	○	●	
HV Gateway	●	●	●	●	○	○	0024
Night View	●	●	●	●	○	●	0008
HL Autoleveling	●	●	●	●	○	●	0021
ECM Gateway	●	●	●	●	○	○	0024
ECB Gateway	●	●	●	●	○	○	0024
WIL Gateway	●	●	●	●	○	○	0024
Center Console Switch	●			●	○	●	
Rear Console Switch	●	●	●	●	○	●	
Front Left Seat A/C	●	●	●	●	○	●	
Front Right Seat A/C	●	●	●	●	○	●	
Rear left Seat A/C	●	●	●	●	○	●	
Rear Right Seat A/C	●	●	●	●	○	●	
Electric Power Control	●	●	●	●	●	●	
Active Headrest R	●	●	●	●	○	●	
Active Headrest L	●	●	●	●	○	●	

# MaxiDas\_Toyota\_V3.31T Function List

## NOTES:

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.  
 ○ This function is not supported.            ▲ This function is the new feature in this version.  
 As for special function please refer to the special function table.

System Name	Vehicle Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
Pre-Crash 2	●	●	●	●	※	○	0010 0011 0039 0040
Accessory Gateway	●	●	●	●	○	○	
MIRROR R	●	※	※	●	※	●	
MIRROR L	●	●	●	●	●	●	
Navigation System	●	●	●		○	○	
PM1 Gateway	●	●	●	●	○	○	0024
Charging Control	●	●	●	●	○	●	
Starting Control	●	●	●	●	○	●	
PM2 Gateway	●	●	●	●	○	○	0024
Remote Engine Starter	●	●	●	●	○	○	
Gateway BEAN	●	●	●		○	○	
Gateway CAN	●	●	●		○	○	0024
Back DoorPW	●	●	●	●	○	●	
Transmission Control	●	●	●	●	●	○	
Parking Assist Monitor System	●	●	●	●	○	●	
Power Source Control	●	●	●	●	○	●	
Engine	●	●	●	●	※	●	0055 0013 0019 0042 0048 0025 0037 0001 0015 0012 0016 0033 0034 0032 0025 0054
ECT	●	●	●	●	※	●	0042 0013 0002 0003
ABS	●	●	●	●	●	●	0005 0006 0042 0049 0026 0013
EMPS	●	●	●	●	●		0004 0050
Free-Tronic	●	●	●	●	●	●	0006 0036 0038
Air suspension	●	●	●	●	○	●	0020
AHC	●	●	●	●	○	●	0020
VGRS	●	●	●	●	●	○	0047 0004
EMS	●	●	●	●	○	●	
Tire Pressure Monitor	●	●	●	●	○	○	0022
EHPS	●	●	●	●	●	○	
Four Wheel Drive	●	●	●	●	○	●	0042
Stabilizer	●	●	●	●	○	○	0045

# MaxiDas\_Toyota\_V3.31T Function List

## NOTES:

- This function is supported.                    ※ This function may be supported, which depends on the actual condition of the vehicle.  
 ○ This function is not supported.           ▲ This function is the new feature in this version.  
 As for special function please refer to the special function table.

System Name	Vehicle Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
Intelligent Parking Assist	●	●	●		○	○	
Electric Parking Brake	●	●	●	●	○	●	0042
Lane Keeping Assist	●	●	●	●	●	○	
Front Stabilizer	●	●	●	●	○	●	
Rear Stabilizer	●	●	●	●	○	●	
ENGINE AND ECT	●	●	●	●	※	●	0013 0042 0048 0025 0019
Cruise Control	●	●	●	●	○	○	
ENGINE (LH Bank)	●	●	●	●	●	●	0055 0013 0019 0042 0048 0025 0037 0001 0015 0012 0016 0033 0034 0032 0025 0054
ENGINE (RH Bank)	●	●	●	●	●	●	0055 0013 0019 0042 0048 0025 0037 0001 0015 0012 0016 0033 0034 0032 0025 0054
HV Battery	●	●	●	●	●	●	0024 0035
Hybrid Control	●	●	●	●	※	●	0026 0024 0042
Sequential M/T	●	●	●	●	●	●	0036
Multi-Mode M/T	●	●	●	●	※	●	0036
Stop And Go	●	●	●	●	●	●	0046 0018 0041
Radar Cruise	●	●	●	●	○	○	0008 0031
Laser Cruise	●	●	●	●	○	○	0008 0031
E-ACM	●	●	●	●	○	●	
Telematics	●	●	●	●	○	○	
PPS	●	●	●	●	○	○	0004 0050
Advanced Parking Guidance System	●	●	●	●	○	○	
FC	●	●	●	●	○	●	
FCHV	●	●	●	●	○	●	0026
EV	●	●	●	●	●	●	
Battery	●	●	●	●	●	●	
Front Right Door	●			●	●	●	
Front Left Door	●			●	●	●	
KDSS	●	●	●	●	●	●	
Telematics	●	●	●	●	●	●	

# MaxiDas\_Toyota\_V3.31T Function List

## NOTES:

- This function is supported.                      ※ This function may be supported, which depends on the actual condition of the vehicle.  
 ○ This function is not supported.            ▲ This function is the new feature in this version.  
 As for special function please refer to the special function table.

System Name	Vehicle Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
A/B	●	●	●	○	○	○	
A/T	●	●	●	●	○	●	
ABS	●	●	●	●	○	●	
ABS/VSC	●	●	●	●	○	●	
ABS-VSC	●	●	●	●	○	●	
ABS-VSC-ARS	●	●	●	●	○	●	
AMT	●	●	●	●	○	○	
ARS	●	●	●	●	○	○	
ASG	●	●	●	●	○	●	
Bluetooth communication Mojeru	●	●	●	●	○	●	
CAN bus gateway	●	●	●	○	○	○	
CAN bus gateway V	●	●	●	○	○	○	
CVT	●	●	●	●	○	●	
DRS	●	●	●	●	○	○	
eco IDLE	●	●	●	●	○	●	
ECT (SIL)	●	●	●	●	○	●	
EFI	●	●	●	●	○	●	
EPS	●	●	●	●	○	○	
FC	●	●	●	○	○	●	
FCHV	●	●	●	○	○	●	
HV	●	●	●	●	○	●	
ITC	●	●	●	●	○	●	
KFS	●	●	●	※	○	※	
RL seat headrest ACT	●	●	●	●	○	●	
ACT RR seat headrest	●	●	●	●	○	●	
Pre-crash seat back seat RL	●	●	●	●	○	●	
Pre-crash seat back seat RR	●	●	●	●	○	●	
VGRS	●	●	●	●	○	○	

# MaxiDas\_Toyota\_V3.31T Function List

## NOTES:

- This function is supported.                    ※ This function may be supported, which depends on the actual condition of the vehicle.  
 ○ This function is not supported.           ▲ This function is the new feature in this version.  
 As for special function please refer to the special function table.

System Name	Vehicle Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
Active rear wing	●	●	●	●	○	●	
Engine 2	●	●	●	●	○	●	
Grille shutter	●	●	●	●	○	●	
Cruise Control 2	●			●	○	○	
Stop & Go	●	●	●	●	○	●	
Diagnostics recorder	●	●	●	○	○	○	
Panoramic View Monitor	●	●	●	●	○	●	
Slave blind spot monitor	●	●	●	●	○	○	
Blind Spot Monitor Master	●	●	●	●	○	○	
Plug-in control	●	●	●	●	○	○	
Body / gateway	●	●	●	●	○	●	
Multi-bus gateway	●	●	●	○	○	○	
No.1 multi-bus monitoring	●	●	●	○	○	○	
No.2 multi-bus monitoring	●	●	●	○	○	○	
The motor-generator	●	●	●	●	○	○	
Remote Security	●	●	●	●	○	●	
Lane Keeping Assist	●	●	●	※	○	○	
Vehicle control	●	●	●	●	○	●	
PKB electric	●	●	●	●	○	●	
Movable pedal	●	●	●	●	○	●	



## Special\_Function

FuncNo	Function	FuncNo2	Function3
0001	A/F Sensor Compensation Reset	0030	Key Number Registration
0002	A/T Code Registration	0031	Laser/Radar Cruise Initialization
0003	A/T Code Reset	0032	Learning Values Confirmation
0004	Abnormal Operation History	0033	Learning Values Save
0005	ABS History	0034	Learning Values Write
0006	Air Bleeding	0035	Onboard Equalizing Charge
0007	Auto Registration Closure	0036	Parts Exchange
0008	Beam Axis Adjustment	0037	Pilot Quantity Learning Values Reset
0009	Camera Angle Adjustment	0038	Pressure Release
0010	Camera Axis Adjust	0039	Rear Beam Axis Adjustment
0011	Camera/Target Position memory	0040	Rear Radar Sensor Check
0012	Catalyst Record Clear	0041	Reset A/C Information
0013	Check Mode	0042	Reset Memory
0014	Communication Check(Key Diag Mode)	0043	Sensitivity Check
0015	Crank Time Compensation Reset	0044	Servomotor Initialization
0016	DPF Deterioration Record Clear	0045	Stabilizer System Check
0017	ECU Communication ID Registration	0046	Starter exchange
0018	ECU Exchange	0047	Steering Angle Adjust
0019	Electric Throttle Learning	0048	Supply Pump Initialization
0020	HEIGHT OFFSET	0049	Test Mode
0021	Height Sensor Initialization	0050	Torque Sensor Adjustment
0022	ID Registration	0051	Transponder Code Erasure
0023	Immobiliser Code Reset	0052	Transponder code Registration
0024	Initialization	0053	Transponder Code Registration(IDS)
0025	Injector Compensation	0054	Vehicle Mileage Write
0026	Inspection Mode	0055	VIN
0027	Key Code Erasure	0056	Wireless Code Erasure
0028	Key Code Registration	0057	Wireless Code Registration
0029	Key Number Change	0058	Zero Point Calibration